

Joe Blackwell
Technical Support
Manager

Eric Winston Technical Support Engineer **Ted Kilpin** Technical Support Engineer Jay Alfer
Tech. Documentation
Administrator

Sega Pinball, Inc.TM © 1995. All Rights Reserved. Reprint Jan 1999 780-5044-00

A NEW A FIND-IT-IN-FRONT: DR. PINBALL SECTION A NEW A

The key technical data from various parts of the manual was extracted and combined into the "Find-It-In-Front: Dr. Pinball Section". This new section will assist the technician in locating important technical information needed to troubleshoot the machine.





We are introducing in our **Portals™ Service Menu** a new icon and diagnostic aid called Dr. Pinball (Flow Chart Menu). This is a feature that will allow the operator/technician to utilize the power of the microprocessor assisting in troubleshooting a problem with the machine.

公公公公 HOW IT WORKS公公公公公

First, the operator/technician must enter the Service Mode (for a complete description of the Portals™ Service Menu and ICONS see Section 3, Chapter 1). To get into the Service Menu Mode: • Power-up game (if not already) & open the Coin Door. • On the Coin Door is the Service Switch Set (Red, Green & Black Buttons). Push down the Black "BEGIN TEST" Button. Looking at the Video Display you will momentarily see the introductory screen "Service Menu" with a satellite flying from right to left pulling a banner "Portals™ © 1995 SEGA PINBALL, INC.", followed by the MAIN MENU.

While in the MAIN MENU, select the "DIAG" Icon, then select the "DR" Icon. This will bring the operator/technician into the FLOW CHART MENU which offers the operator/technician a choice of four sub-menus: Flipper, Coil, Switch and Lamp. Selecting a particular sub-menu will give the operator/technician a choice of which specific lamp, switch or coil circuit needs to be diagnosed. The display will now ask a question or give a procedure to follow such as "Does the lamp turn on?" or "Check bridge rectifier BR-20, if short replace". When Dr. Pinball asks a question or request a procedure the Dr. will expect a response such as "YES, NO, FIXED or NO PROBLEM" (see figure below) which you the operator/technician must input by using the Green "SELECT" (RIGHT) and/or Black "ENTER" Buttons on the coin door. The Flipper Buttons can be used to activate the particular circuit being diagnosed and in the MAIN MENU to select a menu item. The Start Button will allow the operator/technician to quit at anytime.

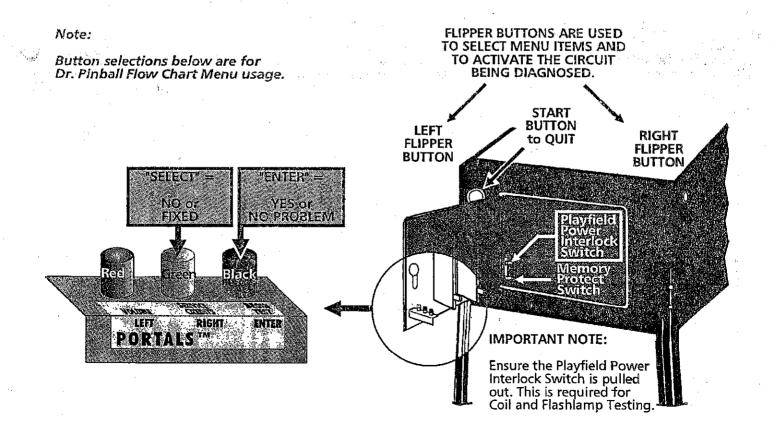

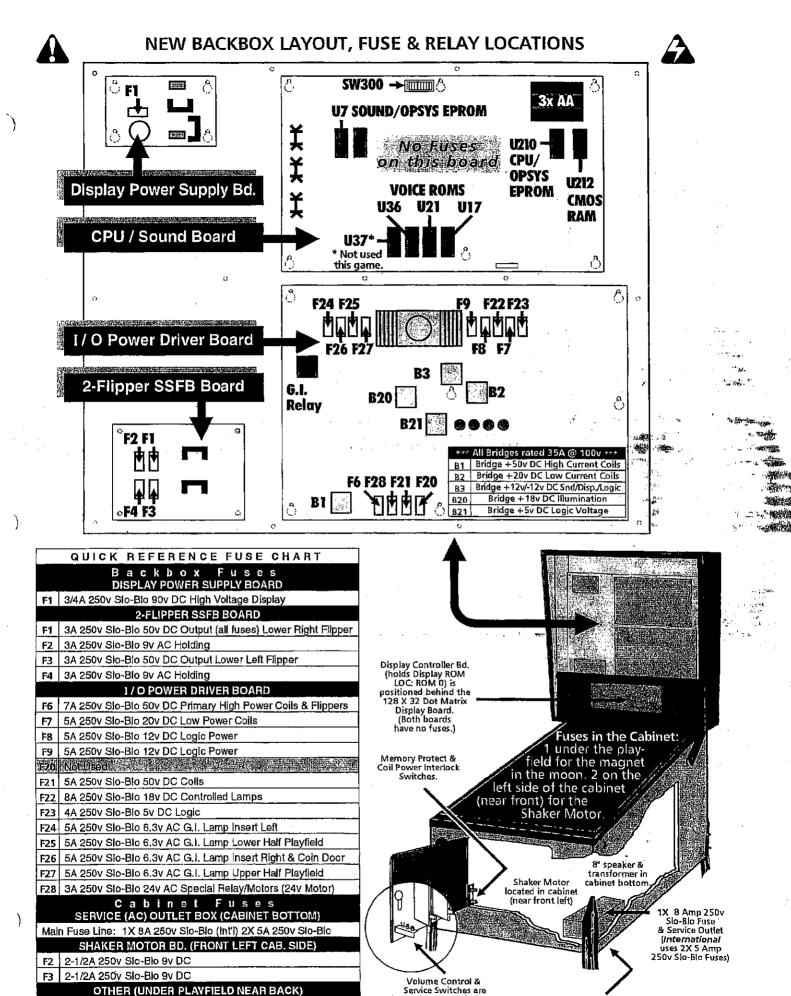

located on the Coin Door

(Red, Green & Black Buttons).

n/a 4A 250v Slo-Blo 50v DC Moon Magnet

On/Off Switch

under cabinet.

INSTALL (13) BALLSU FULL BUILD BUILD (13) Ball Game!

(8 balls will automatically be fed to the top 8-Ball Lock Trough)

※ DIAGNOSTIC AIDS ※

The display reads "OPERATOR ALERT..." — A message displayed during Game Mode or Power-Up to alert the operator of a problem.

OPERATOR ALERT works by monitoring any *switch activated coil* that has the potential to trap a ball when disabled (e.g. in the Autolaunch, Scoop, Eject, etc.). If this assembly has a closed switch indicating a ball is stuck or the switch is *stuck closed*, the CPU Board will activate the coil ten times. If the switch remains closed, the game will display a message indicating there is a problem (e.g. "OPERATOR ALERT AUTOLAUNCH NOT WORKING"). This not only warns the operator of a problem immediately, but indicates exactly where the operator should look to resolve it.

The display flashes "OPEN THE COIN DOOR" — This indicates that CMOS RAM memory (CPU Loc. U212) has been corrupted.

This is caused by either fallure in memory (e.g. batteries are dead or faulty RAM) or upon installation of updated version of code. Opening the Coin Door will initiate a Factory Restore, by opening the Memory Protect Switch. Check battery voltage at CMOS RAM with power off.

CPU DIP SWITCH SETTINGS, LOC. SW300 CPU/SOUND BOARD APOLLO 13: CUSTOM FACTORY ADJUSTMENTS BY COUNTRY*



From the Main Menu in Portals" GO TO DIAGNOSTICS MENU



From the Diagnostics Menu GO TO SWITCH MENU



From the Switch Menu GO TO DIP SWITCH TEST *All countries not noted below use the "USA CPU Country Setting"

				_					
CPU COUNTRY SETTING:	Pos.				龖	闘		勰	ä
115A *	8								
ÜЗА	OFF		•	•	•	•	•	•	•
	_	_				_	-	_	_

CPU COUNTRY SETTING:	Pos.	罐	Z			S		8	
AUSTRIA	ON	•							Т
AUSTRIA	OFF	L	•	•	•	•		•	•
CPU COUNTRY SETTING:	Pos.	1	183		2		8	4	
BELGIUM	ON					Ī		1145	
BELGIOW	OFF	•			0				•
CPU COUNTRY SETTING:	Pos.		10	6			8		Ť.
CANADA	ON	•	•						
CANADA	OFF				•		•	•	•
CPU COUNTRY SETTING:	Pos.				阖	8			
ENGLAND	ON								
ENGLAND	OFF		•		•	•		•	•

CPU COUNTRY SETTING:	Pas.			já,			i,		
FRANCE	ON			•		Γ			
THATCE	OFF					•			•
CPU COUNTRY SETTING:	Pos.	羅			羅	3		題	巍
GERMANY	ON	9		•				Γ	
GENVAIVI	OFF				•			•	•
CPU COUNTRY SETTING:	Pos.	III.	3				l a		
HOLLAND (DUTCH)	ОИ			•		Γ.			Γ,
& NETHERLANDS	OFF		•		•	•		•	•
CPU COUNTRY SETTING:	Pos.					麗	鑑		
ITALY	ON								
net.	OFF	•	•	•		•	•	•	

CPU COUNTRY SETTING:	Pos.		腿	Ŋ.	Ġ.		6	W	
JAPAN	ON	•		Г	•			Т	Т
371734	OFF		•	•	Γ	•	•		K
CPU COUNTRY SETTING:	Pos.	W							K
NORWAY	ON		•	1			Г		٦
NORWAY	OFF	•		•		•	•	•	t
CPU COUNTRY SETTING:	Pos.	翩		Ž.			10		R
SWEDEN	ON	•	•	Γ	•			T	Г
PAREDEM	OFF			•		•	•	•	
CPU COUNTRY SETTING:	Pos				ŷ.				ě
SWITZERLAND	ON				•	ľ		-	Ï
PARTITEURAIAD	OFF								4

ROM (EPROM/MASKED) SUMMARY TABLE

I C NAME	TYPE	BOARD NAME	LOC	PART NP
Game ROM	1MB	CDI / Samuel Daniel	11240	and the company of the control of th
Voice Masked ROM 1	4MB	CPU / Sound Board CPU / Sound Board	U210 U17	965-0208-00 965-0209-00
Voice Masked ROM 2	4MB	CPU / Sound Board	U21	965-0210-00
Voice Masked ROM 3 Voice Masked ROM 4	4MB	CPU / Sound Board	U36	965-0211-00
Sound EPROM	512K	CPU//Sound/Board CPU / Sound Board	U7	Not Used 965-0212-00

Display EPROM	4MB	Display Controller Bd.	ROM Ø	965-0213-00
adiaglay, Ericoly,	Morruseal	bisplay/controller Bit	- Komsu	Meistaged

NEW!

Find-It-In-Front: Dr. Pinball



From the Main Menu in Portals" GO TO DIAGNOSTICS MENU



From the Diagnostics Menu GO TO SWITCH MENU



From the Switch Menu GO TO SWITCH OR ACTIVE SWITCH TEST



From the Switch Menu GO TO DEDICATED SWITCH TEST

SWITCH MATRIX GRID & DEDICATED SWITCHES

Column (Drive)					osc.	06	67	6
Row (Return)		GRARED	GIN PPG	ENS'S	GRIVER S	GRN BLU	GRNAVIOSA CNF-18	GRINGERY CENTS 9
WHI GRY	PLUMB BOB TILT	ABORT HAN- DLE BALL LAUNCH	8-BALL LOCK #1 (TOP) 17	D-O-C-(K) 4-BANK S-U 25	LEFT TURBO BUMPER	SPINNER 41	BATTERY 3-BANK S-U (ALL 3)	LEFT OUTLANE 57
WHT VIO	4TH COIN SLOT	5-BALL TROUGH #1 (LEFT) 10	8-BALL LOCK #2	D-D-(C)-K 4-BANK S-U	BOTTOM TURBO BUMPER		ROCKET HOME POSITION 50	RIGHT OUTLANE 58
WHT BLU CN7	START BUTTON	5-BALL TROUGH #2	8-BALL LOCK #3	D-(O)-C-K 4-BANK S-U 27	RIGHT TURBO BUMPER	ROCKET BALL EJECT	ROCKET UP POSITION 51	LEFT RETURN LANE 59
WHT-GRN CN7-5	RIGHT COIN SLOT	5-BAIL TROUGH #3	B-BALL LOCK #4	(D)-O-C-K 4-BANK S-U 28	MOON HOME POSITION	RIGHT RAMP EXIT LEFT 44	LEFT TOP LANE	RIGHT RETURN LANE
5 WHT-YEL CN7-6	CENTER COIN SLOT / DBA	5-BALL TROUGH #4	8-BALL LOCK #5	MOON 4-BANK S-U (LEFT)	MOON FORWARD POSITION 37	LEFT ORBIT	RIGHT TOP LANE	LEFT SUNGSHOT
6 WHIT ORG CN7-7	LEFT COIN SLOT	5-BALL TROUGH #5 (RIGHT) 14	8-BALL LOCK #6	MOON 4-BANK S-U (MID-LT)	FOOD SINGLE STAND-UP	RIGHT ORBIT	CENTER BALL EJECT 54	RIGHT SUNGSHOT
WHT RED GN78	SLAM TILT	5-BALL TROUGH VUK OPTO	8-BALL LOCK #7	MOON 4-BANK 5-U (MID-RT)	Qorusia Sala Asia	RIGHT BALL EJECT 47	RIGHT RAMP ENTER 55	LT FLIPPER BUTTON VIA Q7 (ON SSFB) 63
6 WHT-BRN CN7-9		SHOOTER LANE	8-BALL LOCK , #8 (BOT- TOM) 24	MOON 4-BANK 5-U (RIGHT)	WATER SINGLE STAND-UP	SUPER VUK (UNDER ARCH)	RIGHT RAMP EXIT RIGHT 56	RT FLIPPER BUTTON VIA Q5 (ON SSFB) 64




From the Diagnostics Menu GO TO LAMP MENU



From the Lamp Menu GO TO SINGLE LAMP TEST



From the Lamp Menu GO TO TEST ALL LAMPS

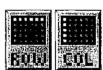

From the Lamp Menu GD TO ROW OR COLUMN TEST

LAMP MATRIX GRID

	LAWF WATRIX GRID												
Column (18v)		2 UAIL VELRED	U12 YELSORG	4 U13; YEL-BUK	5 YELEGRN	61. U15 YELBLU	7 YELVIO	8 YELEGRY					
Row (GND)	57333) ja 3	1194	113:5	J18-6	3157	J 13-8	ນາສຸ່ງ					
(03B)	GRID: Life	GRID: Manual	GRID: CO₂	GRID: Master	GRID: Rocket 2-Ball	GRID: Docking	GRID: Moon's Gravity	GRID: Orbiter					
RED BRN	Support #555 Bulb 1	Burn #555 Bulb 2	#555 Bulb 3	Alarm #555 Bulb 4	#555 Bulb 5	#555 Bulb 6	#555 Bulb 7	#555 Bulb 8					
2/ 034 RED-BLK	SHOOT AGAIN	SPECIAL (Right Outlane)	LITE ORBIT (Rt Return)	LITE ORBIT (Lt Return)	SPECIAL (Left Outlane)	olomust p	GRID: Lite Extra Ball	GRID: Under Volt					
11222	#44 Bulb 9	#44 Bulb 10	#44 Bulb 11	#44 Bulb 12	#44 Bulb 13	14	#555 Bulb 15	#555 Bulb 15					
3/ 035 RED-ORG	ORBIT PROGRESS #8	ORBIT PROGRESS #7	ORBIT PROGRESS #6	ORBIT PROGRESS <u>#5</u>	ORBIT PROGRESS #4	ORBIT PROGRESS <u>#3</u>	ORBIT PROGRESS #2	ORBIT PROGRESS <u>#1</u>					
J172-3	#555 Bulb 17	#555 Bulb 18	#44 Bulb 19	#44 Bulb 20	#44 Bulb 21	#44 Bulb 22	#44 Bulb 23						
4: 036 RED-YEL	VIDEO	EXTRA BALL	Right Eject Flame	START MISSION (LE <u>M)</u>	ORBIT PROGRESS # <u>12</u>	ORBIT PROGRESS #11	ORBIT PROGRESS #10	ORBIT PROGRESS <u>#9</u>					
J12-4	#44 Bulb 25	#44 Bulb 26	#44 Bulb 27	#44 Bulb 28	#44 Bulb 29		#44 Bulb 31	<u>,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,</u>					
5 Q37 RED-GRN	MOON 4- Bank (Left)	MOON 4- Bank (Mid- <u>Lt)</u>	MOON 4- Bank (Mid- <u>Rt)</u>	MOON 4- Bank (Right <u>)</u>	(D)OCK	D(O)CK	DO(C)K	DOC(K)					
RED GRN: JI 25	#555 Bulb 33	#555 Bulb 34	#555 Bulb 35	#555 Bulb 36	#44 Bulb 37	#555 Bulb 38	#555 Bulb 39	#555 Bulb 40					
6 038 RED-BLU	Left ORBIT	FOOD	Right Orbit Flame	Right Ramp Flame	Rocket Flame	Spinner Flame	Left Orbit Flame	BATTERY					
J112-6	#44 Bulb 41	#555 Bulb 42	#44 Bulb 43	#555 Bulb 44	#555 Bulb 45	#555 Bulb 46	#44 Bulb 47						
7: 039 RED-VIO	Moon Hurry- Up (Ramp)	1-(3) Top Lane Right	(1)-3 Top Lane Left	A13 Spinner Lane	Right ORBIT	Right Turbo Bumper	Bottom Turbo Bumper	Left Turbo Bumper					
- J12-8	#555 Bulb 49	#44 Bulb 50	#44 Bulb 51	#44 Bulb 52	#555 Bulb 58	#555 Bulb 54	#555 Bulb 55	#555 Bulb 56					
8: Q40 RED-GRY	START BUTTON			WATER	Up-Down Post	MYSTERY	13 BALL BLASTOFF	BLASTOFF LETTER (Ram <u>p)</u>					
J12-9	#44 Bulb _ 57	58	59	#555 Bulb 60	#44 Bulb 51	#555 Bulb 62	#44 Bulb 63	#555 Bulb 64					
9 CAN RED-WHT	(B)LASTOFF	B(L)ASTOFF	BL(A)STOFF	BLA(S)TOFF	BLAS(T)OFF	BLAST(O)FF	BLASTO(F)F	BLASTOF(F)					
J12-10	#44 Bulb 65	#44 Bulb 66	#44 Bulb 67	#44 Bulb 68	#44 Bulb 69	#44 Bulb 70	#44 Bulb 71	#44 Bulb 72					
10: 042 RED J12:11	Nordosee 73	NON (0574) 74		201 (85) 16 2 2 4 76	(16) 11 (15) 27	NG)705141. 78							





From the Diagnostics Menu GO TO COIL MENU



From the Coll Menu GO TO COIL TEST



From the Coil Menu GO TO CYCLING COILS

COILS DETAILED CHART TABLE

						_			
Hig	h Current Coils Group 1	Drive Trans- istor (D.1.)	Driver Ouput Board	D.T. Control Line Color	D.1. Control Line Connect	Power Line Calor	Power Line Connection	Power Voltage	Cail GA/Turn
#1	TROUGH UP-KICKER	Q1	I/O Pwr. Drvr.	BRN-BLK	_ J8-P1	YEL-VIO	J10-4/5	50v	25-1240 090-5036-01
#2	AUTO LAUNCH	Q2	I/O Pwr. Drvr.	BRN-RED	J8-P3	YEL-VIO	J10-4/5	50v	24-940 090-5036-01
#3	RIGHT BALL EJECT	Q3	I/O Pwr. Drvr.	BRN-ORG	J8-P4	YEL-VIO	J10-4/5	50v	27-1500 090-5004-01
#4	CENTER BALL EJECT	Q4	I/O Pwr. Drvr.	BRN-YEL	J8-P5	YEL-VIO	J10-4/5	50v	27-1500 090-5004-01
#5	ROCKET BALL EJECT	Q5	I/O Pwr. Drvr.	BRN-GRN	J8-P6	YEL-VIO	J10-4/5	50v	28-1050
#6	NOT USED	<u>.</u> Q6	VO Pwr Drvi	BRN-BLU	J8-P7	BRN			090-5046-00
#7	SHAKER MOTOR	Q7	I/O Pwr. Drvr.	BRN-VIO	J8-P8	YEL-VIO	J10-4/5	50v	N/A
#8	KNOCKER	Q8	I/O Pwr. Drvr.	BRN-GRY	J8-P9	YEL-VIO	J10-4/5	50v	23-800
						70.00			090-5001-01
Higl	1 Current Coils Group 2	Drive Trans- istor (D.T.)	Driver Ouput Board	D.I. Control Line Color	D.T. Control Line Connect	Pawer	Power Line	Pawer	
#9	LEFT TURBO BUMPER	Q9	I/O Pwr. Drvr.	BLU-BRN	J9-P1	VEL-VIO	J10-4/5	Voltage 50v	26-1200
#10	BOTTOM TURBO BUMPER	Q10	I/O Pwr. Drvr.	BLU-RED	J9-P2	YEL-VIO	J10-4/5	50v	26-1200
#11	RIGHT TURBO BUMPER	Q11	I/O Pwr. Drvr.	BLU-ORG	J9-P4	YEL-VIO	J10-4/5	50v	26-1200
#12	LEFT SLINGSHOT	Q12	I/O Pwr. Drvr.	BLU-YEL	J9-P5	YEL-VIO	J10-4/5	50v	26-1200
#13	RIGHT SLINGSHOT	Q13	I/O Pwr. Drvr.	BLU-GRN	J9-P6	YEL-VIO	J10-4/5	50v	090-5044-00 26-1200
#14	SUPER VUK (UNDER ARCH)	Q14	VO Pwr. Drvr.	BLU-BLK	J9-P7	YEL-VIO	J10-4/5	50v	090-5044-00 24-940
#15	LEFT FLIPPER ENABLE	Q15	I/O Pwr. Drvr.	ORG-GRY	J9-P8	GRY-YEL	J10-4/5	50v	090-5036-01 22-1080
#16	RIGHT FLIPPER ENABLE	Q16	VO Pwr. Dryr.	ORG-VIO	J9-P9	BLU-YEL	J10-4/5	50v	090-5032-00 22-1080
						520 126	310-473	300	090-5032-00
Low	Current Coils Group 1	Drive Trans- istor (D.T.)	Driver Ouput Board	D.I. Control	D.T. Control	Power	Power Line	Povær	
#17	5-BALL TROUGH LOCK BALL	Q17	I/O Pwr. Dryr.	VIO-BRN	J7-P2	Line Color BRN	Commection J7-1	Valtage 20v	25-1240
#18	UP/DOWN RAMP	Q18	VO Pwr. Drvr.	VIO-RED	J7-P3	BRN	J7-1	20v	090-5036-01 27-1500
#19	MOON MOTOR RELAY	Q19	I/O Pwr. Dryr.	VIO-ORG	J7-P4	BRN	J7-1	20v	090-5004-01 24V DC
#20	ROCKET MOTOR RELAY	020	I/O Pwr. Drvr.	VIO-YEL	J7-P6	BRN	J7-1	20v	10A DPDT 24V DC
#21	TRAP DOOR	Q21	I/O Pwr. Drvr.	VIO-GRN	J7-P7	BRN	J7-1		10A DPDT 28-1050
#22	8 BALL LOCK PLUNGER	022	I/O Pwr. Drvr.	VIO-BLU	J7-P8	BRN	- ·	20v	090-5046-00 27-1500
#23	UP/DOWN POST	Q23	I/O Pwr. Drvr.	VIO-BLK	J7-P8 J7-P9		J7-1	20v	090-5004-01 27-1500
#24	NOT USED	Q23	CAMABIA LAKIN TAK		T. D. 2020 C	BRN	J7-1	20v	090-5004-01
			VO Pwr. Dryr	VIO:GRY	J7-P10	BRN			

	FLIPPER COILS											
SSFB Ne	Flipper Coil	Cabinet Switch	Switch Drive	Switch Return	_ E.O.S.	GND	Flipper 50vDC Power	Flipper 8vAC Hold	Flipper			
SSFB 1	Lwr. Rt. Flipper 22-1080	BLU-VIO SSFB CN1-7	GRN-GRY CPU CN8-9 TO SSFB CN1-4	WHT-GRY CPU CN10-1 TO SSFB CN1-3	BRN-VIO RT. EOS SW. TO CN1-1	BLK CPU CN5 TO CN1-6	BLK-WHT PPB J7-1, -5 to SSFB CN2-11, 12	GRY-GRN-GRY P/S CN1-10, -11, to	Coil Output 50v 8vAC Q2, Q3, SR1 CN2-7, 8			
SSFB 1	Lwr. Lt. Flipper 22-1080	BLU-GRY SSFB CN1-10	GRN-GRY CPU CN8-9 TO SSFB CN1-4	WHT-VIO CPU CN10-2 TO SSFB CN1-5	BRN-GRY LT, EOS SW, TO CN1-9	BLK CPU CNS TO CN1-6	BLK-WHT PPB J7-1, -5 to SSFB CNZ-11, 12	GRY-GRN-GRY P/S CN1-10, -11, to	50v 8vAC Q2, Q10, S R2 CN2-4, 5			



From the Diagnostics Menu GO TO COIL MENU



From the Coil Menu GO TO COIL TEST




From the Coil Menu GO TO CYCLING COILS

Coils Detailed Chart Table Continued

Flasi	Lamps (FLAMP)		Orive Trans-	Driver Ongut Board	D.T. Control Line Color	D.T. Control Line Connect	Power Line Color	Power Line Connnection	Power Voltage	Bulb Type
#1	Under Right Ramp	ХЗ	Q25	I/O Pwr. Drvr.	BLK-BRN	J6-P1	ORG	J6-P10	20v	3X #906 165-5004-00 1X #89
	Backbox Insert	X1								165-5000-89 3X #906
#2	Under Right Ramp	Х3	Q26	I/O Pwr. Drvr.	BLK-RED	J6-P2	ORG	J6-P10	20v	165-5004-00 1X #89
	Backbox Insert	X1								165-5000-89
#3	Under Right Ramp	ХЗ	Q27	I/O Pwr. Drvr.	BLK-ORG	J6-P3	ORG	J6-P10	20v	3X #906 165-5004-00
¥.5	Backbox Insert	X1	Q27		JEIN GING					1X #89 165-5000-89
	Pop Bumper Area	X2		İ						4X #89 165-5000-89
# 4	Backpanel	X 1	Q2B	I/O Pwr. Drvr.	BLK-YEL	J6-P4	ORG	J6-P10	20v	
	Backbox Insert	X1		<u></u>			l 			
	Upper Right Playfield	X1						,		4X #89 165-5000-8
# 5	Lower Right Playfield	X2	Q29	I/O Pwr. Drvr.	BLK-GRN	J6-P5	ORG	J6-P10	20v	
	Backpanel	X1]							
	Upper Left Playfield	X1]				3X #89 165-5000-8
#6	Lower Left Playfield	X1	Q30	I/O Pwr. Drvr.	BLK-BLU	J6-P6	ORG	J6-P10	20v	
	Backpanel	X1							1.5%	**
	Pop Bumper Area	X1								3X #89 165-5000-8
#7	 Backpanel	X1	Q31	I/O Pwr. Drvr.	BLK-VIO	J6-P7	ORG	J6-P10	20v	
	Backbox Insert	X1						_		
	Rocket Area	Х2		No b b	BLV CDV	J6-P8	ORG	J6-P10	20v	4X #89
#8	Backbox Insert	X2	Q32	I/O Pwr. Drvr.	BLK-GRY	10-10	Oka	10-4-10	200	
Aux	. Data Line	ningening.		Driver Duput Board LOC: Under Playfield	D.1. Control Line Color	D.T. Control Line Connect	Power Line Color	Power Line Commection	Power Voltage	
#1	Magnet Grab			Magnet Driver	BLUE	P4	YEL-VIO	Р3	50v	
<i>"</i>	NA			Magnet Driver	RILLE	P4	YFL-VIO	P3	50v	

Aux.	Data Line	Driver Ouput Board LOC: Under Playfield	D.1. Control Line Color	D.T. Control Line Connect	Power Line Color	Power Line Commection	Power Voltage	
#1	Magnet Grab	Magnet Driver	BLUE	P4	YEL-VIO	Р3	50v	
#2	Magnet Hold	Magnet Driver	BLUE	P4	YEL-VIO	Р3	50v	

TYPICAL SWITCH, COIL & LAMP WIRING

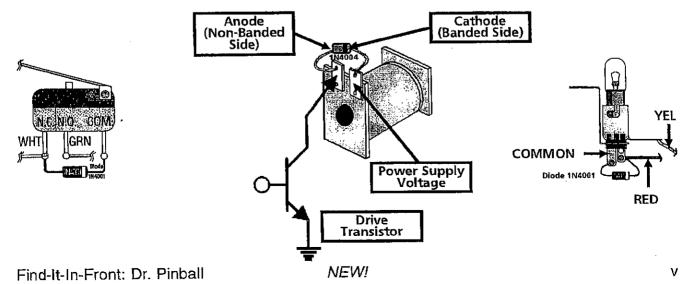

A

POWER REQUIREMENTS


This game *must be connected to a properly grounded outlet to reduce shock hazard* and insure proper game operation. See Section 5, Chapter 1, Cabinet Schematics & Troubleshooting (AC Power Wiring Diagram), for transformer connections required for **Normal**, **High**, and **Low Line** conditions.

Normal tire	JOVAC 7	5V-A@ @ 6017
Domestic	AVERGIBERATION	AND THE PROPERTY OF THE PARTY O
uses an 8AMP 250v Slo-Blo Fuse.	CURRENT: 2.8AMP	CURRENT: 8AMP
High Line	WATTAGE: 329w2(18v/AC - 24	WATTAGE: 940w
Export	AVGICHERATION	
Uses 2 X 5AMP 250v Slo-Blo Fuses. (*England & Hong Kong use an 8AMP 250v S/B Fuse.)	CURRENT: 1.8AMP	CURRENT: 5AMP 8AMP* England
The manufacture of the community of the contract of the contra	WATTAGE: 412w	WATTAGE: 1145w 1832w Kongg use
Lowline	95V/AC 108v/A	(C@/50HF/660HZ/5 ******/
Export Japan Only	AMG GHERAHON S	AND SINUSCOPPERATIONS
uses an 8AMP 250v Slo-Blo Fuse.	CURRENT: 2.6AMP	CURRENT: 8AMP
	WATTAGE: 264w	WATTAGE: 812w

TRANSPORTATION


To reduce the possibility of damage, observe the following precautions whenever transporting the game. Lower the backbox and secure it to the cabinet. Remove the legs and secure the game within the transporting vehicle. Reference Section 1, Chapter 1, Game Set-Up for assembly (for disassembly reverse instruction order).

OVERALL DIMENSIONS †

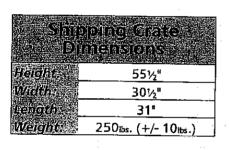

† Note: The Leg Levelers can add up to two (2) inches to the overall height of the front & back dimensions.

The cabinet is designed to give a 6.5° pitch with the Leg Levelers turned all the way in.

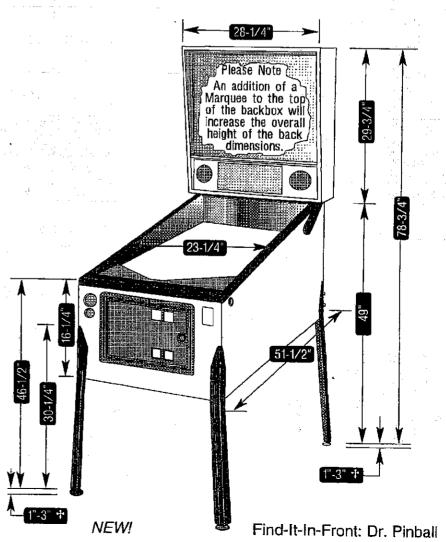



APOLLO 13.

Table of Contents



See Sections 3 & 5, Table of Contents, for details of that section and it's chapters.

Find-It-In-Front Dr. Pinball (Introduction) Inside Front / i - viii Backbox Layout, Fuse & Relay Locations (Quick Reference Fuse Chart)
 ▶ Install 13-Balls
SECTION 1
SECTION 2
Apollo 13™Game Rules
CHAPTER 2, GO TO DIAGNOSTICS MENU19
CHAPTER 3, GO TO AUDITS MENU32/33
CHAPTER 4, GO TO ADJUSTMENTS MENU38/39
CHAPTER 5, GO TO RESET MENU47
CHAPTER 6, GO TO PRINTER MENU (Special Equipment Required)
CHAPTER 7, GO TO HELP SCREEN51

SECTION 4	53
CHAPTER 1, PARTS IDENTIFICATION & LOCATION (The Pink Pages)	
Backbox - General Parts	52
Cabinet - General Parts	r
Playfield - Major Assemblies	
riavneiu - kamns	
Playfield - Rails and Ball Guides	57
Playfield - Butyrate, Decals and Mylar	⊃≀
Playfield - General Parts	55
Playfield - Ruhher Parts (Rings Actual Cize)	6l
Playfield - Metal Posts and Spacers (Actual Size)	
Playfield - General Parts Playfield - Rubber Parts (Rings Actual Size) Playfield - Metal Posts and Spacers (Actual Size) Playfield - Plastic Posts and Spacers (Actual Size)	62
Playfield - Lamp, Auxilliary, Switch Membrane & Magnet Boards	
Playfield - Wedge Rose Type Pulbs and Society (Astro-Live)	62
Playfield - Wedge Base Type Bulbs and Sockets (Actual Size)	65
Playfield - Bayonet Type Bulbs and Sockets (Actual Size)	66
Playfield - Large Bayonet Type Bulbs and Sockets (Actual Size)	67
CHAPTER 2, ASSEMBLY DRAWINGS (The Blue Pages)	
Abort Handle (Rail Launch) Accombly (500, 5045, 00, 44)	69
Abort Handle (Ball Launch) Assembly (500-6046-00-44) Auto Ball Launch (Shooter Lane) Assembly (500-5969-01-44)	70
5-Ball Trough (OPTO) Assu (E00 FOCE 45 44) 1 4 B. II 4	70
5-Ball Trough (OPTO) Assy. (500-5965-15-44), Lock Ball Assy. (500-5684-01)),
and Ball Trough Enter/Exit Scoop (535-7329-00)	71
Flipper Assemblies, Lower Right (500-5944-02), Lower Left (500-5944-12)	72
Up-Down Post Assembly (500-6023-00-44)	73
Slingshot Assemblies (500-5849-01)	73
Super Vertical Up-Kicker (VUK) Assembly (500-5880-00-44). Vertical Up-Kicker (VUK) Assembly (500-5839-02-44).	74
Turbo Pumper (Not evallable as as assessing)	74
Turbo Bumper (Not available as an assy.; individual part(s) must be ordered	.) 75
Shaker Motor Assembly (In Cabinet) (515-5893-00) Knocker Assembly (In Cabinet) (500-5081-00)	76
Un Deven Metal Param Assembly (500-5081-00)	78
OPPOVITIVE CALIND ASSEMBLY FOUL FOLLOWING	7.7
Up-Down Ramp Plunger (500-6044-00-44)	77
0-pail cock frough Assembly (200-6072-00-44)	70
8-Ball Lock Plunger Assembly (500-5867-01-44).	78
Upper Trough/Trap Door Assembly (500-6031-00-44)	79
Rocket Ramp Assembly (500-6020-00-44)	80/81
Moon Unit Assembly (500-6021-00-44)	82/83
Plastic Ramp Assembly (500-6027-00-44). Stand-Up Target Assemblies (used in this game: 500-5857-XX & 500-5835-	84/85
Stand-Up Target Assemblies (used in this game: 500-5857-XX & 500-5835-)	XX)86
Plastic Part Color ChartBottom of	Page 86
SECTION 5 > Schematics & Troubleshooting Table of Contents (View for an outling of this portion)	
SECTION 5	
Schomotice 9 Translation of Table 10 and the Table 10 Co.	8/
Violettance & Troubleshooting Table of Contents	. !
(View for an outline of this section) CHAPTER 1, BACKBOX WIRING (The Yellow Pages)	87
CHAPTER 3. DIAVELED MINING (The Yellow Pages)	89
CHAPTER 2, PLATFIELD WIKING (The Yellow Pages)	91
CHAPTER 2, PLAYFIELD WIRING (The Yellow Pages) CHAPTER 3, CABINET WIRING (The Yellow Pages)	97
CHAPTER 4, PRINTED CIRCUIT BOARDS (PCBs) (The Yellow Pages)	99
APPENDIXES A-H	40-
APPENDIXES A-H.	125
Appendixes A-H Table of Contents (View for an outline of this section)	, 125
	**
IMITED WARRANTY, CAUTIONS, WARNINGS & NOTICES Inside	. 6
······································	a Kack

Game Set-Up

Game Assembly Procedures

(Refer to the Illustrations on the inside front cover and pages ii & 2)

- 1. Open the top of the carton and lay it on its side with the bottom of the cabinet down. Using the plastic banding strip as a handle, slide the game out of the carton.
- 2. Remove all packing material. 4 cabinet legs & levelers (attached) are in the corner packing material of the crate. A large Allen Wrench (use for securing the backbox) is inserted and taped to the rear of the cabinet. Miscellaneous parts are in the cash box.
- 3. Support rear of cabinet and attach rear legs using two leg bolts for each leg.
- 4. Support front of cabinet and attach front legs using two leg bolts for each leg.
- 5. While assuring that no cables are being pinched, carefully raise the backbox and secure it in its upright position with the Allen Wrench in the hole in the back of the cabinet and rotating the wrench 270° (¾ turn).
- 6. Remove the backbox keys from the playfield glass, unlock and carefully remove the backglass. Set the backglass aside.
- 7. Check all connectors in the backbox for loose wire terminations. Reseat any loose wire by pushing in on the terminal. Push on all connectors plugged into the CPU Board, Sound Board, Power Supply Board, and Display Board to check that they are properly seated.
- 8. Check that all fuses are seated properly.
- Carefully remove the playfield glass and set it aside.
- 10. Remove all shipping tie downs, shipping instruction pages, packing foam, etc. (if any) Read all printed information taken from the playfield. It contains warning(s), caution(s) and/or information specific to the game.
- 11. Raise the playfield and support it, by lifting the Stay Arm on the Right Side of the Cabinet and locking it into the slotted bracket (or hole) on the under playfield. See the illustration "Easy Access Service System" opposite this page.
- 12. Check all cabinet cables and playfield Lamp Boards connector terminations.
- 13. Remove the Plumb Bob tilt from the parts package and install on the pendulum wire on the inside left of the cabinet. See Section 4, Chapter 1, Parts Identification & Location.
- 14. Lower the playfield and ensure game is level side-to-side by adjusting Leg Levelers, if required. See the illustration "Leg Leveler Adjustment" opposite this page.
- 15. With the Leg Levelers turned all the way in, the game pitch is 6.5°; depending on the condition of the floor, adjust the Leg Levelers as required.


The playfield incline affects difficulty of play. Use the recommended incline; Game difficulty is best varied using game adjustments.

- 16. Check the plumb tilt and adjust as required.
- 17. If desired, perform any self tests at this time. See Section 3, Chapter 1, Portals™ Service Menu Introduction, and Chapter 2, Diagnostics, for instructions on how to enter "Begin Play Test" and "'Game' Specific" to test components on the game.
- 18. With the Backbox Insert Door closed, carefully reinstall and lock the backglass.
- 19. INSTALL 13 BALLS on the playfield near the outhole and carefully reinstall the playfield glass. (Amount of balls are always specified on decal attached to the lock down assembly.)
- 20. If desired, make Game Pricing (Standard and/or Custom) and Add-A-Ball, Novelty, or X-Ball Play adjustments at this time. See Section 3, Chapter 4, Adjustments, for instructions on how to enter adjustments. Follow instructions in the tables provided in the manual for suggestions of customizing changes.

Section 1 Chapter 1

Leg Leveler Adjustment

This cabinet is designed to automatically have a 6.5° pitch without any Leg Leveler adjustment!

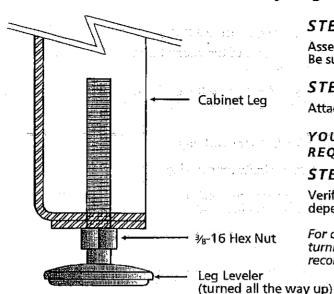

STEP 1

Assemble all (4) legs and levelers as shown in the diagram. Be sure the leveler is turned all the way in.

STEP 2

Attach leg assemblies to cabinet with leg bolts provided.


YOUR PLAYFIELD PITCH IS NOW AT 6.5° AS REQUIRED FOR PROPER GAME PLAY!

STEP 3

Verify 6.5° pitch. Minor adjustment(s) may be necessary depending on the location floor being level.

For custom adjustment greater than 6.5° can be acheived by turning out the rear leg leveler(s), however, it is not recommended.


Easy Access Service System

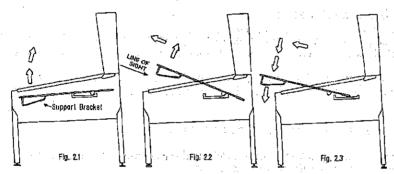

Service Position 1 This position is useful to service:

Trough Switches, Connectors at back of cabinet, Cleaning the Playfield, etc.

Lift the playfield using the left and right ball guides upward (Fig. 2.1) until the playfield support brackets can be seen to clear cabinet front (Fig. 2.2). At this time, pull playfield toward the front of the cabinet, checking that the mechanical components clears the cabinet front (Fig. 2.3). Then rest the playfield on the support brackets at the front channel of cabinet. Reverse procedure when service is complete.

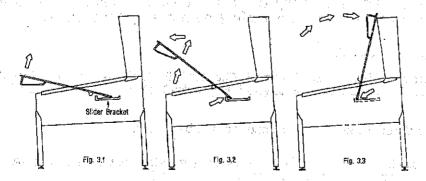

Service Position 2
This position is useful to service:

All Playfield Bottom Components, Cabinet Components, etc.

With the playfield at rest (Fig. 3.1), hold sides of playfield and pull toward the front of the cabinet (approx. 6" to 8"), until resistance is felt from the slider brackets located on either side of the cabinet (Fig. 3.2). At this time, swivel playfield toward the backbox, then rest on top edge of the backbox. Reverse procedure when service is complete.

Game Operation & Features

Start of Game Features

Starting a Normal Game

Insert coin(s), the game generates a sound for the first coin & for each subsequent coin(s) with the display indicating the number of credit(s) posted. Press the START BUTTON and a start-up sound is produced, and the posted credit(s) are reduced by one. The display awaits choice from player 1 to select REGULAR GAME rules or NOVICE GAME rules with the flipper buttons. If the player does not select rules, the game will default to Regular Rules. After selection (or time-out default to Regular Game) subsequent players can be added (up to 6 can play!) by pressing the START BUTTON before the end of ball 1. Note 1: The subsequent players will play the same game (Novice or Regular) determined by Player's 1 choice. Note 2: This feature can be adjusted with Adj. ##, Name of Adjustment. Default is On. Set to Off to turn off this feature.

The display now indicates the player or # of players selected from the total depressions of the START BUTTON. The display indicates the ball in play, and a ball is served to the Shooter Lane. An introduction is shown followed by Skill Shot Graphics. Pressing the START BUTTON after ball 1 of any player will start a new game (if credits are available), but only if the START BUTTON is depressed for 2-3 seconds. This delay is to avoid accidental "re-starts" of a game. (Note: Any ½ credit remaining during game play after the end of ball 1, or power down, will be eliminated.)

Starting Team Play (Doubles!)

Team Play is a four player game. The totals for players 1 & 3 (Team 1) and players 2 & 4 (Team 2) are displayed individually as well as the combined score for both teams. Team Play does not work with less than or more than 4 players. 1-, 2-, 3-, 5- & 6-Player games, the individual scores are shown.

Starting League/Tournmanent Play

After credit is posted, while holding in the LEFT FLIPPER BUTTON, press the START BUTTON. League Play has now begun. The differences between Normal Game Play and League/Tournament Play are: There is no "auto-percentaging" (awarding extra balls, specials, etc. to players with very low scores on the second or third ball). Mystery Features are awarded in a set order rather than random in Normal Game Play. Percentage Game Features are not automatically advanced as they are for the Regular Play Features.

Starting Pinball Wizard Play

After credit is posted, while holding in the RIGHT FLIPPER BUTTON, press the START BUTTON. Pinball Wizard Play has now begun. The same as League/Tournament Play, but oooooooh! so much gosh darn harder!

Extra Ball (EB) Buyin (This game only)

An option to add an extra ball(s) after the game is finished is given (it doesn't matter if the game is set as a 2-, 3-, 4-, or 5-Ball Game). The score and game features already earned are retained and the player can add to the score with this extra ball. To activate the EXTRA BALL BUY-IN FEATURE, adjustment 34, Buyin Type, must be to set ON (Default=Off). When set to ON, at the end of normal game play, the same player may choose to continue the game at the same score and features active by adding 1 coin for 1 extra ball (existing credits will not work) prior to the expiration of the "countdown timer." Letting the timer to expire, pressing the START BUTTON or BOTH flippers simultaneously cancels this feature.

During Game Features

Video Mode

Our games feature elaborate video modes and video graphics. Don't forget to watch the display for hints or feature demonstrations. The video modes require the player to play on-screen. When in video mode, the ball-in-play is "held" (usually in a Scoop, Eject Saucer or lock of some sort). The interactive video play requires the player to use the flipper buttons to play the mode.

Feature Mode & Combination Shots

Features are lit on the playfield and started by completing certain play shots (e.g. completion of target banks, orbit(s), ramp(s) and/or any combination of the shots). Combination shots (combos) are a series of shots completed in many different variations. For example, a shot to the Ramp with the ball being returned to the Left Inlane then immediately shot to the Orbit of the playfield returning to a Flipper and then shot to another Ramp is a hard combo shot worthy of many points. These combinations vary per game. For feature modes & combos certain points or awards are given after completion. Watch the Video Display for feature details, etc.

Multiball

Multiball is started after completion of certain Feature Modes or may be a mode itself depending on game rules and play. Multiball may vary with the amount of balls used in Multiball depending on game style. Typically, if Multiball play was short, a "restart" option is given. Watch the Video Display for instructions on the restart.

Replay Feature

Replay awards are given as the player exceeds a High Score Level during game play. This can be adjusted with Adjustment 3, Replay Awards (Default=CREDIT, adjustable). Players exceeding the High Score Levels can receive a CREDIT, an EXTRA BALL, or SPECIAL. Adjust to NONE if a replay award is not desired.

End of Game Features

Game Endings

When all player(s) have played all balls (including any Extra Ball Buyin's), the game ends. If power is interupted during the course of a game, it will end that game (see Starting a Normal Game). Depending on the number of tilts set (Default=2, adjustable), or prolonged closure of the Plumb Bob Tilt Switch, tilts the ball in play. Closure of the Slam Tilt Switch on the coin door ends the current game(s).

Match Feature

At the end of each ball, earned bonuses are collected. At the end of the last ball of a game (including any extra balls, if applicable), earned bonuses are collected, then the system produces a random 2-digit number (a multiple of 10; 00 to 90). Matching the last two digits of the player's score with this number awards a credit. In Adj. 11, Match Percentage (Default=7%, adjustable) can be changed from 0-10%. Changing the percentage to 0% displays the "Match Animation" at the end of the game, however, will never match (to award a credit). Changing this adjustment to OFF will not display the "Match Animation" nor award a credit.

Entering Initials

If player achieved a new high score in any of the 3 categories (Regular, Novice or Wizard), the player may enter his/her initials. To enter your initials, use the left & right flipper buttons to choose letter or character as seen on the Visual Display. Hitting the Start Button locks the letter or character in. Procede with the 2nd & 3rd letter. The game then proceeds into the game-over mode and then to the attract mode. A custom message (adjustable) can be displayed during the attract mode.

Manual Percentaging

This game is equipped with Manual Percentage Adjustment. As previously with our games, you can either set operator adjustments for a replay percent or you can set a fixed replay score. See Section 3, Chapter 4, Adjustments, Adjustment 1 & 2.

If you set operator adjustments for a particular replay percent, the game will compute a recommended score to keep the game at that replay percentage. If a change is recommended and the game coin door is opened, the display will indicate if the replay is too high or low and make a sound to alert the operator. By pressing the start button, the score to beat will be changed to a more correct level. If you close the coin door or enter the Portals Service Menu, no score change will be made.

You may choose to ignore the recommended change; for example, you may not think last week's players were the usual crowd. Just close the door and the message will disappear without altering the existing level. Or you may choose to make a different score to beat adjustment; this is done by utilizing Adj. 2, Replay Levels.

Game Rules

Overview

Below is the Apollo 13[™] Playfield with all of its component locations indicated (for details on these parts, see Section 4). Read over the components below to help in understanding the effects of the game rules. The rules are numbered and divided into four groups: Single Ball Play, Multiball & Jackpots, A13 Missions, and Mission Control Game Rule Notes.

Upper Trough / Trap Door Assembly

From the Ball Launch, balls are fed through the trap door to fill the B-Ball Lock Trough or pass over the closed trap door to enter the top lanes.

8-Ball Lock Trough & Lock Plunger Assemblies The plunger retracts allowing the eight balls to roll into the ramp and exit over the 'K' in 'DOCK' targets.

Top Lanes "1" & "3"

1-Way Gate

Prevents the ball from rolling back down into this spinner lane.

Rocket Ramp Assembly
Balls are shot up into the rocket and
held by a mini-vuk. Depending on
game play, the ball is either returned
to play or the rocket will move up and
release the ball into the undertrough.
This hall will roll down to the bottom
arch and will be served back into play
via the autolaunch.

Spinner Assy. "Mystery"

Stand-Up Target "Food"

LED Readout Display "Multiball Countdown"

8-Ball Trough Exit Wire Ramp

Stand-Up Targets "D-O-C-K"

Adjustable Post Left — Outlane Widen/shorten outlane

Left Outlane (Drain)

Left Slingshot Assembly

Left Return Lane

Left & Right Flippers Assy.

Up/Down Post Assembly

Outhole (Center Drain)

Super VUK (Under Arch) — When a ball is fed into the trough via the Rocket (Up Position) or the Moon Magnet, the ball rolls down to this VUK and is kicked out and fed into the 5-Ball Trough.

Start (Credit) Button

Abort Handle (A13 Shooter) Assembly

Section 2 Chapter 2 Shooter Lane Wire Ramp

Assembly When the ramp is down, a ball shot via the left orbit will roll up onto this ramp and exit onto the dual wire ramp dropping the ball over the left return lane, otherwise left or right orbit shot can be made.

Up/Down Ramp Plunger Assembly Used to move the ramp into the up or down position.

Moon Assembly
When a ball is shot up the plastic
ramp (magnet is activated) the
magnet will grab the ball, rotate
forward and the ball drops into the
exit hole into the trough-

Center Eject Assembly
This eject is located (hidden) under
the plastic ramp by the top lanes.

Pop Bumpers
The bottom pop bumper is hidden
under the plastic ramp exit area.

Right Eject Assembly
This eject is located (hidden) under
the LEM and butyrate.

Plastic Ramp & Exit Ramp Ball Diverter Assemblies When the ball exits, the diverter will move closing the left or right exit.

Stand-Up Target
"Water" By ramp entrance.

Adjustable Post Right Outlane Widen/shorten outlane.

Stand-up Targets "Moon"

Stand-Up Targets "Battery"

Right Outlane (Drain)

Exit to Right Return Lane Wire Ramp

Dual Exit to Left Return Lane Wire Ramp

Right Return Lane

5-Ball Trough & Exit Scoop Assemblies

> Auto Ball Launch Assembly Under Butyrate.

Right Slingshot Assembly

Bottom Arch Assembly

Page 5

Playfield Overview & Game Rules

Game Rules

Instruction Card

Below is a copy of the game instruction card which is included with every game. If this card is lost or damaged, simply copy this page and cut out the instruction card as a temporary replacement until a new card is ordered. (Suggestion: Copy & cut along the dotted line and fold in the center. This will keep the "copy" sturdy.)

Copy & Cut

Fold

Fold

FEATURING POLLO 1 13 BALL **MULTIBALL!**

TO START MULTIBALL, SHOOT ROCKET UNTIL COUNTDOWN IS $hilde{U}_{m{c}}$

FOR 13 BALL PLAY, FIRST SHOOT RAMP TO SCORE BLASTOFF LETTERS. WHEN BLASTOFF IS COMPLETE, SHOOT ROCKET UNTIL 13 BALL COUNTDOWN REACHES $extstyle{0}$.

TO START APOLLO 13 MISSIONS, SHOOT RIGHT HOLE. FOLLOW INSTRUCTIONS GIVEN IN DOT DISPLAY TO COMPLETE MISSION.

BEGINNERS' GUIDE TO SEGA PINBALLS:

- SELECT NOVICE RULES FOR GUARANTEED PLAY TIME.
 - TO SCORE MORE, SHOOT WHAT'S FLASHING!
 - PLAY MULTIBALL AS OFTEN AS POSSIBLE!
 - GLANCE AT DOT DISPLAY DURING GAME!

Sega Pinball, Inc. ™ & @ 1995 Apollo 13 logo ™ & @ 1995 Universal City Studios, Inc. All Rights Reserved.

The remainder of this chapter is Apollo 13 Game Rules. Please read through for a better understanding of the operation of this game. Some game rules, point values and/or features may change as production continues. The changes, if any, will be describe in manual addendums, if warranted. Please note, that some adjustments (see Section 3, Chapter 4, Adjustments) are designed to customize game play, (i.e. making it harder or easier as players get more familiar with the game).

Code revisions and updates may change as production continues. Code updates will be made available to distributors via ROM, diskette or modem. Changes, if any, will be described with the code updates. See the end of this manual for "Appendix A - Pinball Game Firmware Table," for the latest revision code for all games prior to this game.

See the end of this manual for "Glossary of Terms," for words or acronymns you may not understand. If an acronym or expression is not in this glossary, please call our Technical Support Department, so we may add it in the next game manual. Any other suggestions or comments are always welcome!

SINGLE BALL PLAY



GAME RULES SELECT:

Select REGULAR GAME rules or NOVICE GAME rules with the flipper buttons. If the player does not select rules, the game will default to Regular Rules. (Note: Subsequent players will play the game style chosen by player 1.)

NOVICE GAME rules give the player a guaranteed minimum game time - if the ball drains before this time is up, it will be returned to the player. When the ball drains after time is up, the game ends.



SKILL SHOT SELECT:

Select one of the three items shown in the display:

- START MISSION Starts Apollo 13 Mission.
- MYSTERY Gives Mystery Award.
- MULTIBALL COUNTDOWN With B L A S T O F F incomplete puts player 1 shot closer to starting Multiball.
- 13 MILLION With B L A S T O F F or MULTIBALL **READY complete** gives player 13M points.



LANES:

Complete the Top Lanes "1" & "3" to advance Spinner and Turbo Bumper values up to a maximum of 2M.



MOON TARGETS & MOON HURRY UP

Complete the Moon Targets from left to right to light the Ramp for Moon Hurry

Up. The Turbo Bumpers and Spinner advance the Moon Hurry Up value.



DOCK TARGETS & MYSTERY

Complete the D-O-C-K Targets to light Mystery, collected at the Center Eject.

A Mystery Award may also be collected at Skill Shot Select. Mystery Awards include:

- 13 BALL PLAY
- EXTRA BALL
- MYSTERY 3-BALL BIG POINT VALUES
- HOLD BONUS
- LIGHT SPECIAL
- DOUBLE BONUS
- HIDDEN VIDEO MODE



BATTERY TARGETS

Shoot the Battery Targets to recharge the battery. Fully charging the battery scores POINTS, or LIGHTS EXTRA BALL or SPECIAL.



FOOD & WATER TARGETS

The Food & Water Targets score increasing millions when hit.

SINGLE BALL PLAY



ORBIT **FEATURES**

Shooting lit Orbits advances the Spacecraft Lamps in the center of the playfield. Then...

- Scoring two Orbits will light the LANDER VIDEO MODE at the Right Eject.
- Scoring five Orbits starts POWER DOWN shoot all Flashing Shots before "AMPS=0".
- Scoring eight Orbits starts POWER UP shoot Flashing Shots in order.
- Scoring twelve Orbits starts SPLASHDOWN, a timed Multiball Feature where the Orbits score Jackpots.



VIDEO MODE

Shoot Right Eject when lit to play video

mode. Land Spacecraft on the moon before fuel runs out. Use the Left Flipper to fire the left thruster (move right), the Right Flipper to fire the right thruster (move left), and Both Flippers to fire the bottom thruster (move up). Use the Ball Launch to 'zero' sideways velocity & thrust up hard.



EXTRA

Shoot Right Eject when lit to collect an Extra Ball. If the maximum number of Extra Balls have already been awarded, the player


will score points instead. The Extra Ball can be lit from • MISSION START • MYSTERY • THE BATTERY or . VIA PERCENTAGING.



SPECIAL

Lit Outlanes score a Special. A Special is lit from • MYSTERY or • VIA

PERCENTAGING.

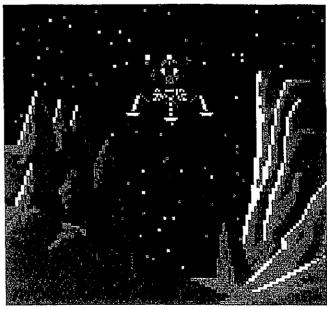



STARTING MULTIBALL:

Shoot the Rocket until the Countdown on the LED reaches zero [D]. The Rocket will elevate, kick the ball out, and the remaining balls will be issued from the 8-Ball Lock Trough.



REGULAR MULTIBALL JACKPOTS:

If *Multiball* is started and B L A S T O F F is not complete, the player will recieve

2-4 balls in play. Four (4) Jackpots will be lit, at the Left Orbit, Spinner, Right Orbit, and the Right Eject. The Starting Jackpot value is a base value multiplied by the number of balls in play. The Jackpot value can be increased by shooting the Rocket during Multiball—the Jackpot will increase by 1M times the value shown on the LED when the Rocket is hit. Switch closures may also increase the Jackpot.



REGULAR MULTIBALL SUPER JACKPOTS:

The timed Super Jackpot is lit when all four Moon Targets are completed or all

4 (four) Jackpots are scored. During Multiball the Moon Targets must be completed from left to right - when no targets are lit, the left most target is available. When that target is hit, the 2nd target is available, etc.



STARTING 13 BALL MULTI-BALL & BLASTOFF LETTERS

During Single Ball Play, two combination shots award letters in BLASTOFF.

These shots are:

Ramp ⇒ Left Flipper ⇒ Ramp and

 Ramp ⇒ Right Flipper ⇒ Orbit Up/Down Ramp ⇒ Left Flipper ⇒ Ramp

When B L A S T O F F is completed, the <u>NEXT</u> player to start *Multiball* will be awarded 13 Ball Multiball.

Easier difficulty settings allow the player to score a B L A S T O F F letter the first time the Ramp is shot for each ball played or in each game played.

BLASTOFF letters carry over from player to player, game to game.



13 BALL MULTIBALL ROCKET JACKPOTS:

During 13 Ball Multiball, shoot the Rocket for Jackpots. The starting Jack-

pot value is equal to a base value multiplied by the number of balls in play. Every 10 switch closures increase the Jackpot value by 1M. Scoring 5 (five) Jackpots will qualify the Super Jackpot. The Up/Down Bumper Post remains up for about the first 10 seconds of 13 Ball Play, allowing the player to enjoy all of those balls!

MULTIBALL&JACKPOTS



13 BALL MULTIBALL SUPER JACKPOT:


If a set number of Rocket Jackpots are scored, the ramp will light for a timed Super Jackpot. After Super Jackpot is scored or the timer expires, the player continues with Regular Multiball rules — 4 (four) Jackpots lit, etc.




ABORTING MULTIBALL

At *Multiball* start, the player has the option of turning the Abort Handle (Ball Launch) to bypass *Multiball* start. This option is for

Launch) to bypass *Multiball* start. This option is for the advanced player who is trying to complete **B L A S T O F F** before starting *Multiball*. The first time that abort is used, the Countdown will reset to [7]. If the player aborts again before starting *Multiball*, the Countdown resets to [2], etc.

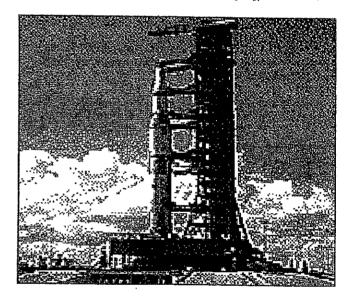



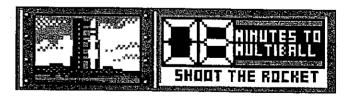



APOLLO 13 MISSIONS



STARTING

Shooting the Right Eject or Center Eject when lit will start the flashing Apollo 13

Mission. Mission objectives are listed below (14a -14i). Pop Bumpers cycle flashing mission. Turn the Abort Handle (Ball Launch) to lock/unlock Missions. Missions may also be started from Skill Shot Select.





The Master Alarm is not available until all other Missions have been played. All shots are lit for big points and the Ramp scores Jackpots. Score as many points as possible before the time expires.



ORBITER

A Hurry-Up Countdown starts on the Left Orbit. Shoot the Left Orbit to score the Countdown, then shoot the Right Orbit to triple scored value. This can be repeated until the Mission

is over

Shoot the Spinner to collect items to repair the CO₂ scrubbers before the CO₂ level reaches 20. Scoring all items scores a bonus based on switch closures during the Mission.



MANUAL BURN

Shoot the Flashing Shots to fire thrusters to get the Spacecraft back on course.

Flashing shots closer to the edges of the playfield provide more thrust than shots closer to the center.



ROCKET 2 BALL

Shoot the Rocket repeatedly for increasing Jackpots.



MOON'S GRAVITY

Shoot the Ramp 3 times and watch what happens next!



UNDER VOLT

Shoot a Battery Target to lock in a Hurry-Up value — all shots are lit for this value. Battery Targets add time.



SUPPORT

Shoot the Food & Water Targets to nourish Fred. 4 (four) shots earns a Completion Bonus.




DOCKING

Shoot the roving D-O-C-K Targets for points and awards.



EXTRA BALL

Light the Extra Ball at the Right Eject.

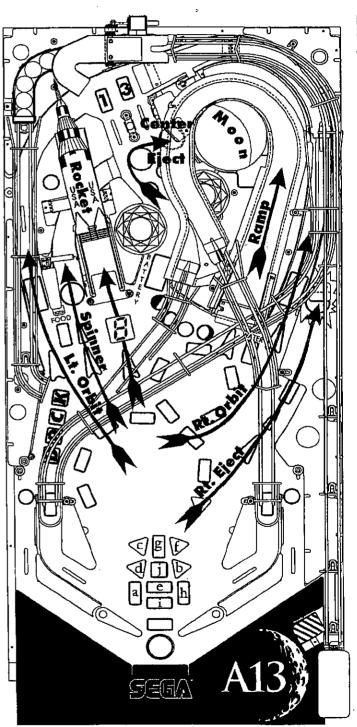

MISSION CONTROL GAME RULE NOTES

COMBINATION SHOTS


Apollo 13 features several Multi-Way Combos. These Combo Shots involve natural sequences of key shots in the game. Several undocumented difficult combos may also be present.

END-OF-BALL BONUS CALCULATION

The BONUS is calculated as the sum of:
ROCKET BONUS + MOON BONUS +
ORBIT BONUS + MISSION BONUS = TOTAL BONUS
There is no cap on the TOTAL BONUS. However, if all of the above are zero, a TOTAL BONUS of 1M will be awarded. There is no Bonus Multiplier in this game, though players can earn a DOUBLE BONUS (2X Bonus at the end of the current ball only). Normally, Bonus Totals will reset at the start of each new ball, but a HOLD BONUS is available from Mystery.



Just like any Mission, rules and point values are subject to change without notice. Call Houston if you have a problem!

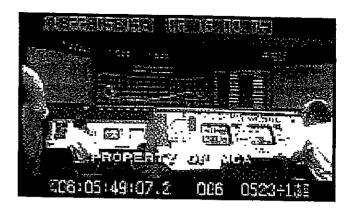

APOLLO 13 MISSION STATEMENT

Crew: Jim Lovell, Commander

Jack Swigert, Command Module Pilot Fred Haise, Lunar Module Pilot

Launched: April 11, 1970 Splashdown: April 17, 1970

Mission: Third attempted lunar landing. At 55 hours, 54 minutes, and 53 seconds into the mission, a cryogenic tank explodes, causing a loss of breathable oxygen and power in the command-service module. Crew abandons ship and survive in the LEM until just a few hours before splashdown, when they return to the command module, jettison the LEM, and re-enter the atmosphere.



Portals[™] Service Menu Introduction



5	e $oldsymbol{ct}$	ion 3	
Table	of	Conten	ıts

Character 4 distriction	11
Chapter 1, Introduction Service Switch Set Access & Use / How to Use This Section 1	. II
Service Switch Set Access & Use / How to Use This Section	2/13 4/15
Portals" Service Menu Icon Tree	4/ 13 6-18
Portals™ Service Menu Example	19
Chapter 2, • 60 to Diagnostics Menu & Overview	1.2
Go To Switch Menu Switch Test	20
Switch Test Active Switch Test	20
On Switch Test	20
Dip Switch Test & Dedicated Switch Test Switch Matrix Grid Switch Matrix Locations, Descriptions & Part Numbers	20
# Switch Matrix Locations, Descriptions & Part Numbers	21
• Go To Coil Menu	22
••• Coil Test	22
••• Cycling Coil Test	22
Backbox Insert Flash Lamp Locations	22
Playfield Coils & Flash Lamp Locations	23
¤ Coils Detailed Chart Table	26
•• Go To Lamp Menu	26
••• Test All Lamps	26
X Lamp Matrix Grid	26
eee Row Lamp Test	27
••• Column Lamp Test	27
¤ Lamp Matrix Locations	27
•• Test Flash Lamps	28
Clear Ball Trough Technicians Alert	28
•• Technicians Alert •• Service Phone #	28 28
ee Rogin Play Test	28
• Sound/Speaker Test	28
A Sound Test Chart	28
Speaker Phase Testing	29
Begin Burn In	29
Dot Matrix Test Apollo 13 Specific (LED 7-Segment Display, Moon & Rocket Tests) Flow Chart Menu (Dr. Pinball)	29
•• Apollo 13 Specific (LED 7-Segment Display, Wooli & Rocket resis)	30 0C
Chapter 3, • Go To Audits Menu	33
Chapter 3, • Go To Audits Wellu	
Game Audit Table	3Z
Earnings Audits Sega Audits	22
• Apollo 13 Audits	35-37
Chapter 4, • Go To Adjustments Menu	39
	20
Sega Adjustments Sega Adjustments	30
Apollo 13 Adjustments	44
•• Custom Pricing	46
•• Film Star Reset	46
Chapter 5, • Go To Reset Menu	47
•• Factory Reset	47
•• Reset Coin Audits	47
Reset Game Audits	47
¤ Example	48
Chapter 6, • Go To Printer Menu	49
Ouick Printout	49
• Full Printout	49
•• No of Copies Printed	49
	_
Chapter 7, • Go To Help Screen	
Go To Help Screens (Multi-Level)	<u>5</u> 1
¤ Problem/Solution Table	50




Bullet Notes:

From Main Menu, Level 1.From the Sub-Menu, Level 2.


••• From the Sub-Menu, Level 3. ¤ Added Information/Instruction.

Open Coin Door and view Service Switch Set (see figures below). The Memory Protect Switch is now disabled; when changing adjustments, leave the coin door open, so changes can be made. Please ensure the Playfield Power Interlock Switch is pulled out for Coil and Flashlamp testing (this is required).


• Entering Portals™ Service Menu (will not operate in Volume Mode):

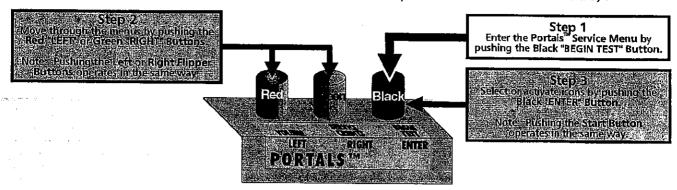



2 Adding Service Credits (will not operate in Service or Volume Modes):

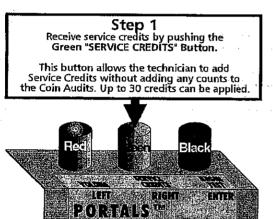

Statering the Volume Menu (will not operate in Service Mode):

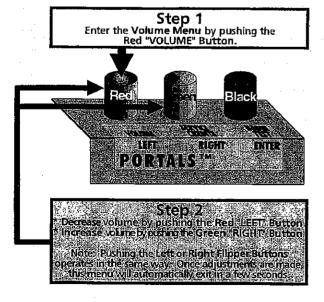

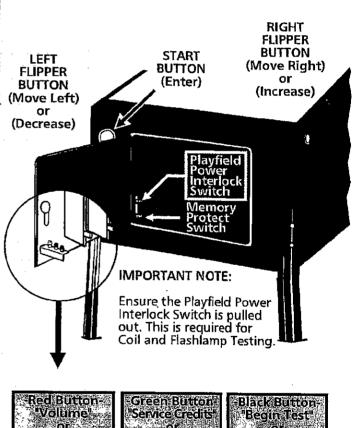

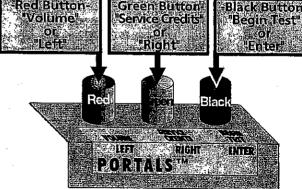

How to Use This Section

This section will cover all functions available in the Portals[™] Service Menu in a Step-By-Step process. This section is divided into chapters which coincide with the MAIN MENU. The following pages in this chapter will instruct the operator on how to move through the menus. It's simple, easy and fun to use!

To get into the Service Menu Mode: • Power-up game (if not already) & open the Coin Door. • On the Coin Door is the Service Switch Set (Red, Green & Black Buttons). Push down the Black "BEGIN TEST" Button.

Looking at the Video Display you will momentarily see the introductory screen "Service Menu" with a satellite flying from right to left pulling a banner "Portals™ © 1995 SEGA PINBALL, INC.", followed by the MAIN MENU:



The Coin Door may be closed for security, however, please note with the Coin Door closed, the game's **MEMORY PROTECT** is enabled; **meaning any changes that are made will be not be written to memory**. If changing adjustments is required, ensure the Coin Door is open.

Use the Red "LEFT" & Green "RIGHT" Buttons (or Left & Right Flipper Buttons) to move the selected ICON left or right, and the Black "ENTER" Button (or Start Button) to activate the selected ICON. The use of the Service Switch Set (Red, Green, & Black Buttons) is required in Switch Test or Active Switch Test, as the Start & Flipper Buttons are a part of this test.

For diagnostic purposes, be sure the *Playfield Power Interlock Switch* is pulled out so *Playfield Power* is not disabled.

The MAIN MENU now appears with the "DIAG" Icon (DIAGNOSTICS MENU) flashing:





As the operator views the Menu Screen(s), the MORE Symbols indicates that there are more Icons to select in each direction. The Icon selected will blink. Pushing the Black "ENTER" Button (or Start Button) will select the Icon and the Menu Screen will change to the menu selected. Select the "PREV" Icons to move backwards through the menu levels. Select the "QUIT" Icon to completely exit the Service Mode.

View the Portals[™] Service Menu Icon Tree on the next pages for a complete overview of all menus used in this system. View the last chapter (HELP) if more information is required. Selecting the "QUIT" Icon with the Red "LEFT" or Green "RIGHT" Buttons (or either Flipper Button), then pressing the Black "ENTER" Button (or Start Button) will exit the Service Mode. This applies to the large and small "QUIT" Icons.

The chapters in this section, which coincide with the MAIN MENU, will also provide more detailed information which could not fit in the display. Use both the manual and the display to help customize, troubleshoot and/or diagnose faults, if any.

Portals™ Service Menu Introduction Section 3 Chapter 1

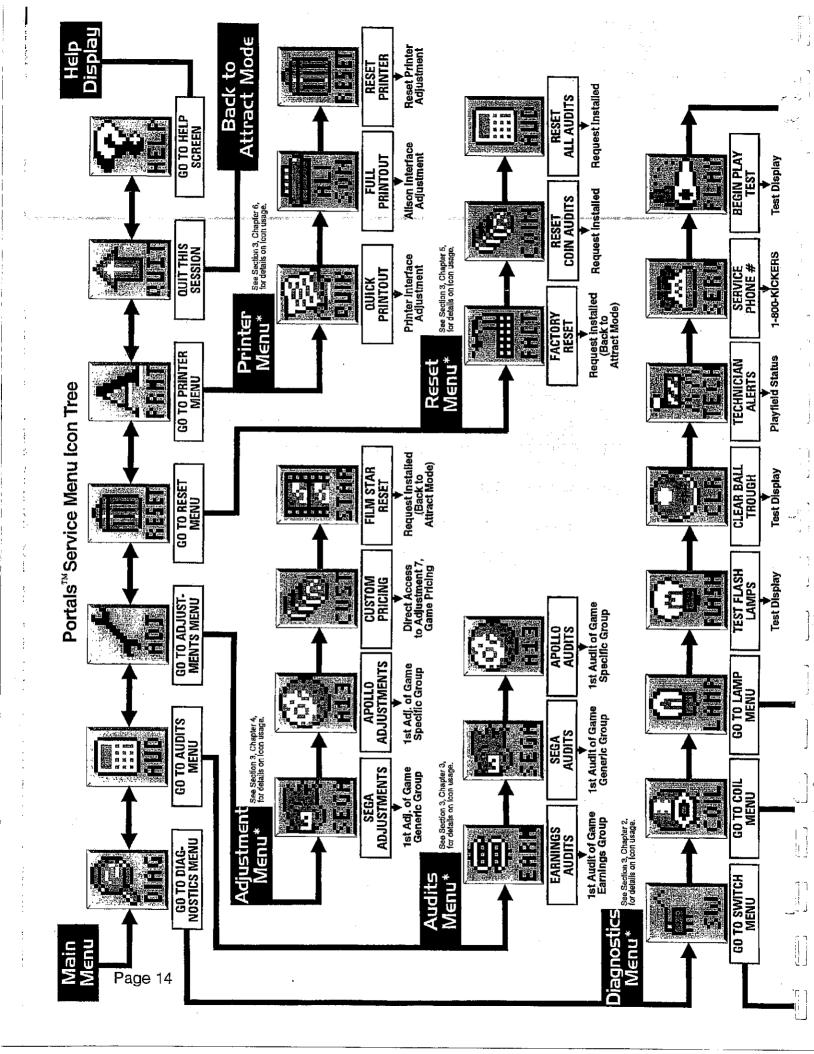

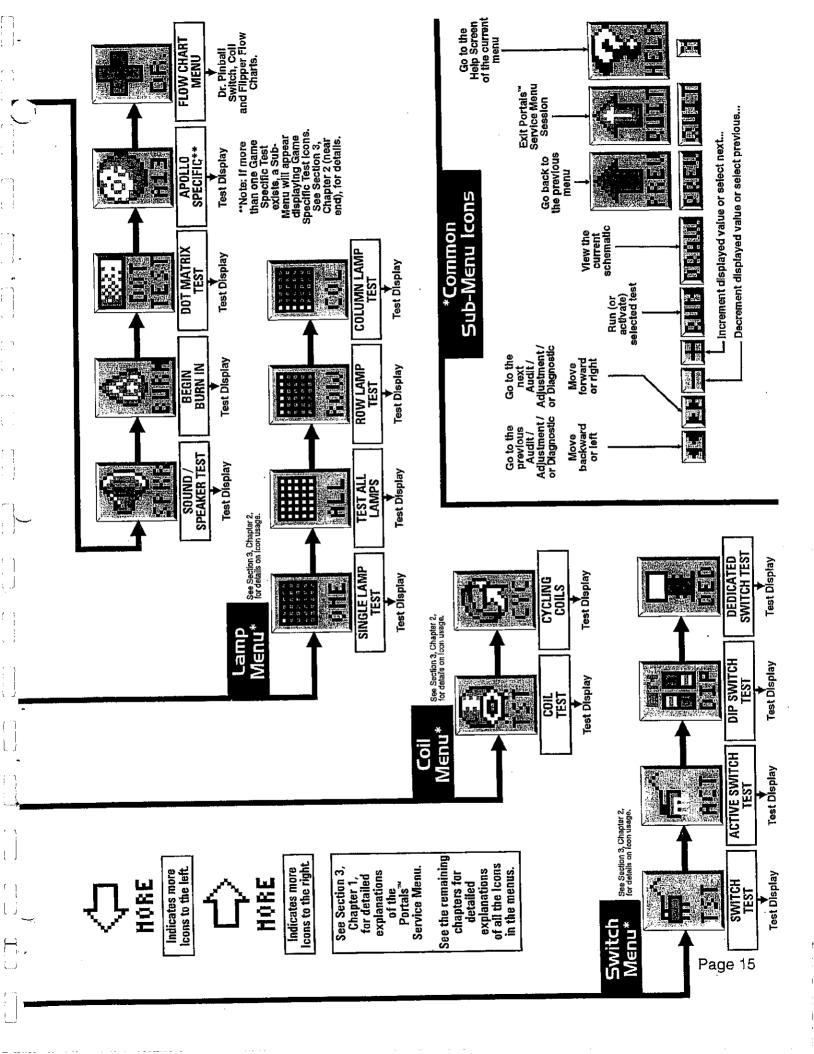

This example will demonstrate activation of *Icons* in the **DIAGNOSTICS MENU**. The example will show activation of the "SW" *Icon* (GO TO SWITCH MENU). In this menu, the switches can be tested individually and also all active switches can be tested. Use the same technique to access all the *Icons* in the **Portals™ Service Menu**. Follow **Portals™ Service Menu Icon** Tree on the previous pages as a guide to help navigate through the entire system (Also, go to the chapter in this manual explaining the icon(s) selected.).

If the display is in any other menu other than the MAIN MENU, use the Red "LEFT" & Green "RIGHT" Buttons to select the "PREV" *Icon* and press the Black "ENTER" Button to activate the ICON thus moving back to the previous menu. Do so until MAIN MENU appears.

Chapters 2 through 7 will cover all menu items within the Portals[™] Service Menu. The *Icon* is shown preceding the text. Find the *Icon* in the Portals[™] Service Menu by navigating with the Red or Green Buttons. Each chapter started is from the MAIN MENU. Within the chapter, the sub-menu's will be covered sequentially with their explanation & function. If the operator "gets lost", select and activate the "PREV" *Icon* until the display indicates MAIN MENU. For more help, see Chapter 7.

口 HORE The "MORE" symbols are indicating that "more icons" are available which don't appear in the display and which way to move the selection to view the Icons.

HORE

Important Note:



PREU

Exit any sub-menu and return to the MAIN MENU by selecting & activating the "PREV" Icons. If no Icons appear in the display because of a testing function or special display (e.g. Help, Schematic Display, etc.), press any service button to exit to the previous menu or sub-menu.



QUIT

Selecting & activating the "QUIT" Icon from any display will exit the Service Session.




Selecting & activating the "HELP" Icon will show a help screen. (An explanation of each Mini-Icon at that level will cycle continuously until any active button is pressed.)

Example: From the MAIN MENU, use the Red "LEFT" or Green "RIGHT" Buttons to select the "DIAG" Icon (GO TO DIAGNOSTICS MENU).




Press the Black "ENTER" Button to activate this ICON. This will bring up the DIAGNOSTICS MENU.

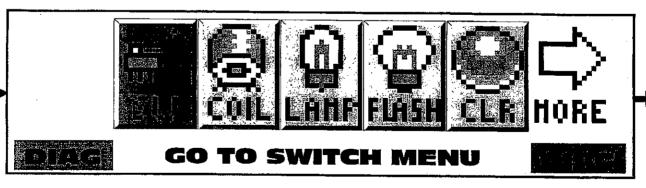


The DIAGNOSTICS MENU now appears with the "SW" Icon (GO TO SWITCH MENU) flashing. Press the Black Button to activate this icon. This will bring up the SWITCH TEST MENU.


ection 3 | Icon Intro

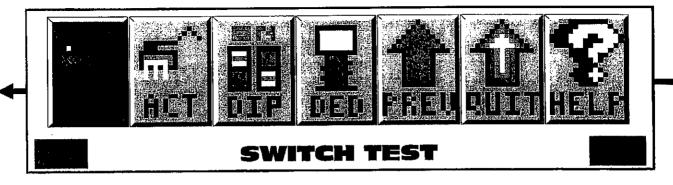

The Switch Test Display now appears.

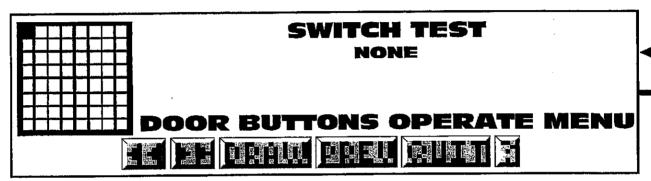

All switches can be tested one at a time (When possible, use a pinball to close any playfield switches; rolling the ball at Stand-Up Targets or over/under switches is suggested. Use finger for all non-playfield switches.) As each switch is closed, the respective Switch Matrix Grid Position (1-64) will be lit. To view the schematic for the switch selected, press the Red or Green Buttons to select the "DRAW" Icon. Press the Black Button to activate this icon. This will bring up the Switch Schematic Display for the switch being closed.

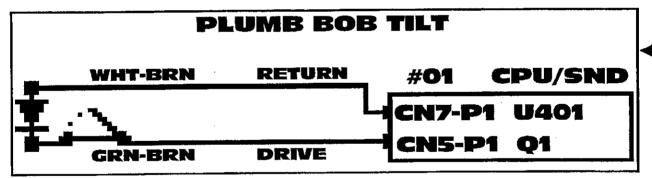

An example is shown with Switch #01, Plumb Bob Tilt, selected. The display describes the switch in the Switch Matrix which includes the name of the switch, the Return (Row) Wire and the Drive (Column) Wire, drive transistor, the part number (not shown in the above example) and the "Pin-Outs" from the CPU/Sound Board.

While in Switch or Active Switch Tests, the Flipper & Start Buttons are deactivated. Use the Red "LEFT" Green "RIGHT" and/or Black "ENTER" Buttons to select and activate the "MINI-ICONS" at the bottom of the display. In Switch Test, if the "Left Arrow" or "Right Arrow" *lcon* is activated, the display will go to the previous tests (Active, Dip & Dedicated Switch Tests). Use the **Red** or **Green Buttons** to change the selected **ICON** to "PREV" *lcon*. Press the **Black** "ENTER" Button to go to the previous menu.

In Dedicated Switch Test, the Flipper & Start Buttons are to be used instead of the Red, Green & Black Service Buttons, as these buttons are deactivated for this test.

Exit out of the sub-menu by activating the big "PREV" Icon in the menu. This will bring up the DIAGNOSTICS MENU. The Switch Test Session is now complete. See the next page about exiting the Portals™ Service Menu.

Portals™ Service Menu Introduction

Section 3 Chapter 1 Page 17

Exiting the Portals™ Service Menu

All *Icons* will be covered in the chapters of this section with the exception of the "QUIT" *Icon*, in the MAIN MENU. Both the large and small *Icons* if selected and activated, will exit the user from the Portals[™] Service Menu. The display will return back to the ATTRACT MODE! To re-enter the Portals[™] Service Menu follow the instructions at the beginning of this chapter.



If more help is required, see Chapter 7 of this section, and view the various help displays in the game.

Your Notes

<u> </u>	

Go To Diagnostics Menu

Special Note: If the display flashes "OPEN THE COIN DOOR" the game is indicating that memory has been corrupted. This is caused be either failure in memory (e.g. batteries are dead and/or faulty RAM) or upon installation of updated version of game code. Opening the Coin Door will initiate a Factory Restore, by opening the Memory Protect Switch. Check battery voltage at CMOS RAM with the power off.

Overview

The Portals[™] Service Menu System provides tests for sounds, display, lamps, switches and coils. Each feature may be tested manually or automatically after entering the Portals[™] Service Menu (see Chapter 1 of this section). Select the "DIAG" *Icon* from the MAIN MENU to go to the DIAGNOSTICS MENU. The automatic tests (e.g. Cycling Coils, Flash Lamps, etc.) may be used for a quick verification of automatic test functions and the manual tests (Begin Play Test, Single Lamp/All/Row/Column Tests, etc.) may be used for troubleshooting.

During game play, activation of switches and operation of coils with associated switches are monitored. If the CPU Board does not detect a switch transition ("Stuck Open" / "Stuck Closed") for 50 games, it is considered faulty. When operation of a coil should close or open a switch and does not, the coil is considered faulty. In the Attract Mode, faulty switches and coils (if any) are reported (Select the "TECH" Icon, Technician Alerts, from the DIAGNOSTICS MENU). Note that reporting of an unused switch does not constitute a problem and that a bad coil could mean that the associated switch requires adjustment.



GO TO DIAGNOSTICS MENU

With the game in the Attract Mode, open the Coin Door and press the Black "BEGIN TEST" Button. Select the "DIAG" *Icon* in the MAIN MENU with either Flipper or Red "LEFT" & Green "Right" Buttons (upon entry of the Portals™ Service Menu, the system defaults with the selection of the "DIAG" *Icon* flashing) and press the Start or Black "ENTER" Buttons. The DIAGNOSTICS MENU appears.



. The "MORE" symbols are indicating that "more icons" are available which don't appear in the display and which way to move the selection to view the Icons.



Important Notes:



Exit any sub-menu and return to the MAIN MENU by selecting & activating the "PREV" Icons. If no Icons appear in the display because of a testing function or special display (e.g. "Help"), press any button to exit.



Selecting & activating the "QUIT" Icon from any display will exit the Service Session.

In Diagnostics, selecting & activating the "-" or "+" Icons moves test forwards/backwards.



Selecting & activating the "HELP" Icon from any display will show a help screen. (An explanation of each Mini-Icon at that level will cycle continuously until any active button is pressed.)







Selecting & activating the "RUN" Icon repeats the test on the coil or flash lamp left off at. Selecting & activating the "ARRÓW" Icons

DRAW

moves between tests in the sub-menu. Selecting & activating the "DRAW" Icon will show the schematic for that switch or coil.

Some tests require navigation through the menu(s) and selection of the Icons with the Red "LEFT", Green "RIGHT" and Black "ENTER" Buttons. This is required is Switch and Active Switch Tests, as the Flipper and Start Buttons are a part of the test.

In Coil Test, ensure the Power Interlock Switch is pulled out. (See Access & Use of Chapter 1 of this section for the location.) If the switch is not pulled out, the coils and flash lamps cannot be tested (32v DC and 50v DC are disabled). Closing the Coin Door will automatically reset this switch. Coils and Flash Lamps are checked manually in Coil Test. To automatically check coils, go to Cycling Coils from the COIL TEST MENU. To automatically check flash lamps, go to Flash Lamp Test, from the DIAGNOSTICS MENU.

GO TO SWITCH MENU

From the **DIAGNOSTICS MENU**, select the "SW" *Icon* with either **Red** "LEFT" or **Green** "RIGHT" Button and press the **Black** "ENTER" Button. Switches are configured in an 8 x 8 Matrix of Columns (Switch Drives) and Rows (Switch Returns) with up to 64 switches possible. The Switch Test Menu consists of two parts: Switch Test & Active Switches. (**Flipper & Start Buttons** are deactivated during Sw. Tests.)



Switch Test

To initiate, from the **SWITCH MENU**, select the "TST" *Icon* with the **Red** or **Green Button** & press the **Black Button**. In Switch Test, close each switch and observe the display. The display will describe the switch in the Switch Matrix, which includes the switch name, Return (Row) Wire, Drive (Column) Wire, Part Nº, and the "Pin-Outs" from the CPU/SOUND Board. When the switch is released to the described To view.

of the last switch closed will remain in the display until another switch is closed or the test is exited. To view the switch schematic, select the mini "DRAW" Icon with the Red or Green Button & press the Black Button.



Active Switch Test

To initiate, from the SWITCH MENU, select the "ACT" Icon with either Red or Green Button & press the Black Button. If still in a previous test, select the "PREV" Icon to return to Switch Menu or selecting either of the "ARROW" Icons will move through the tests. If any switches are stuck closed (or made from the presence of a pinball), the display sequences through the switch names, Return (Row) Wire,

from the presence of a pinball), the display sequences through the switch names, Return (Row) Wire, Drive (Column) Wire, drive transistor, Part N°, and the "Pin-Outs" from the CPU/SOUND Board. This cycle continues until all switches are cleared or until the test is exited.



Dip Switch Test

To initiate, from the SWITCH MENU, select the "DIP" *Icon* with either Red or Green Button & press the Black Button. The display will indicate the Dip Switch Positions & the


country setting the game is set to (e.g. USA, Germany, England, etc.). REFERENCE THE BEGINNING OF THIS MANUAL FOR DIP SWITCH SETTINGS.



Dedicated Switch Test

To initiate, from the SWITCH MENU, select the "DED" *lcon* with either Flipper Button & press the Start Button (The service switches are deactivated during this test.). The display

will describe the switch which includes the switch name, Return (Row) Wire, Column Wire, Part No, and the "Pin-Outs" from the CPU/SOUND Board.

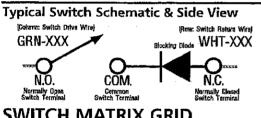



Dedicated Switch Schematic Dedicated Sw. Inputs GRY-XXX BLK N.O. Normally Doen Switch Terroinal Switch Terroinal Switch Terroinal

Dedicated Switches


GND	Ground
15	
UZOG	BIK-PE
INPUTS	A STATE OF THE SERVICE OF THE SERVIC
	A SECURE ASSESSMENT OF THE PARTY OF THE PART
GRY-BRN	
CN6-2F	
92.3 No. 10 12 12 12 12 12 12 12 12 12 12 12 12 12	
2.5	
The Land	
GRY-RED	
CN6-3	DS-2
3 2 3 3 3 3	
	ALCOHOL: NAME OF THE OWNER, THE O
GRYORG	
EN6-4	Ds.)
4.054.049.009.40	
# 17 4 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
	NOTOSEDBOTA
GRY-YEL	
CN6-6	DS-4
THE PERSON NAMED IN	
20 C C C C C C C C C C C C C C C C C C C	Manufactures.
GRY-GRN	
EX167	
	of Control of the Con
6	Normal: Volume
GRY BLU	In Test: Left
CN6-8	RED BUTTON DS-6
SALE SALE	Normal: Service
34.25	Credits
GRY-VIO	In Test: Right
CN6-9	
Richard Constitution	
8	Normal: Begin
	Test
GRY-BLK	In Test: Enter
CN6:10	BLK BUTTON DS-8

24411	_11	IVIA	IKIX	GKID	
Column (Drive)	遊廳	dia 1	110.2	Note the latest the second	9
(Duge)		10 3 4 4	- 07	√⇒last C	i

(Drive) Row (Return)	GRNABRN	2 GPN-RED CNS 3	GRN ORG	GRN YEL	GRN-BLK	06 GRN BLU	O7 GRN:VIO	8 OB GRN-GRY
	PLUMB BOB TILT	ABORT HAN- DLE BALL LAUNCH	8-BALL LOCK #1 (TOP) 17	D-O-C-(K) 4-BANK S-U	LEFT TURBO BUMPER	SPINNER	BATTERY 3-BANK S-U (ALL 3)	LEFT OUTLANE
2 WHT-VIO	4TH COIN SLOT	5-BALL TROUGH #1 (LEFT) 10	8-BALL LOCK #2	D-O-(C)-K 4-BANK S-U 26	BOTTOM TURBO BUMPER	NOTUSED 42	ROCKET HOME POSITION SO	RIGHT OUTLANE 58
7 5 5 8 8 8	START BUTTON	5-BALL TROUGH #2	8-BALL LOCK #3	D-(O)-C-K 4-BANK S-U 27	RIGHT TURBO BUMPER	ROCKET BALL EJECT 43	ROCKET UP POSITION S1	LEFT RETURN LANE
4 WHT GRN	RIGHT COIN SLOT	5-BALL TROUGH #3	8-BALL LOCK #4	(D)-O-C-K 4-BANK S-U 28	MOON HOME POSITION	RIGHT RAMP EXIT LEFT	LEFT TOP LANE	RIGHT RETURN LANE. GO
5 WHISEL CNAS	CENTER COIN SLOT / DBA	5-BALL TROUGH #4	8-BALL LOCK #5	MOON 4-BANK S-U (LEFT) 29	MOON FORWARD POSITION	LEFT ORBIT	RIGHT TOP LANE	LEFT SUNGSHOT
6. WHT-CRG GN7-7.	LEFT COIN SLOT	5-BALL TROUGH #5 (RIGHT) 14	B-HALL LOCK #6	MOON 4-BANK S-U (MID-LT)	FOOD SINGLE STAND-UP	RIGHT ORBIT	CENTER BALL EJECT 54	RIGHT SLINGSHOT
7 WHT-RED CN7-8	SLAM TILT	5-BALL TROUGH VUK OPTO	8-BALL LOCK #7	MOON 4-BANK S-U (MID-RT) 31		RIGHT BALL EJECT 47	RIGHT RAMP ENTER 55	LT FLIPPER BUTTON VIA Q7 (ON SSFB) 63
B WHI-BRIN CN7-9-		SHOOTER LANE	8-BALL LOCK #8 (BOT- TOM) 24	MOON 4-BANK S-U (RIGHT)	WATER SINGLE STAND-UP	SUPER VUK (UNDER ARCH)	RIGHT RAMP EXIT RIGHT	RT FLIPPER BUTTON VIA Q5 (ON SSFB) 64

Switch Matrix Descriptions with Part Numbers and Locations †

The switch locations correspond with the Switch Nº in the table below and the Switch Maxtrix Grid.

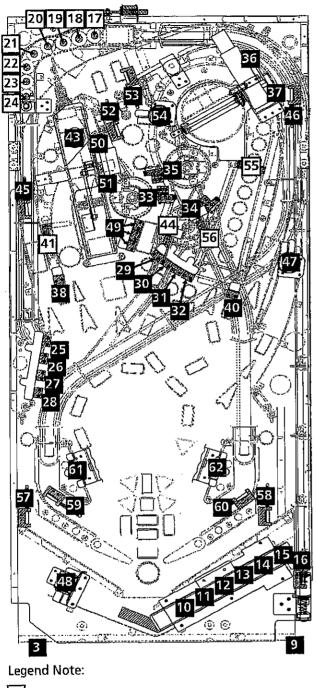

= Switches located above playfield.

= Switches located below playfield.

The following switches are located in the cabinet and are not noted in the diagram above:

The following switches are not used

The following switches are not used:

8 39 42

Sw.	Col	Row	Part Nº
Nº.	· Nº		11 (b) 12 (2 (a) (b) (b) (b) (b) (b) (b) (b) (b) (b) (b
2	1		
3	1	START BUTTON (Left of Coin Door) RED	500-5026-07
4	*12	* RIGHT COIN SLOT (On Coin Door)	180-5024-00
5	ĥ.	5 * CENTER COIN SLOT / DBA	180-5024-00
5	3. E	* LEFT COIN SLOT (On Coin Door)	180-5024-00
7 8		* SLAM TILT ** NotUsed **	180-5022-00
9	2	ABORT HANDLE BALL LAUNCH	180-5061-00
10	.2	5-BALL TROUGH #1 (LEFT)	180-5119-00
11	2	5-BAIL TROUGH #2	180-5119-00
12	2	5-BALL TROUGH #3	180-5119-00
13 14	2	5 5-BALL TROUGH #4 6 5-BALL TROUGH #5 (RIGHT)	180-5119-00 180-5119-00
	6.37	7. #5-BALL TROUGH VUK OPTO (TRANS)	520-5124-00
15	2	(UCC)	520-5125-00
16	1 mm F	SHOOTER LANE (AUTO BALL LAUNCH)	515-6514-00
17 18	-3	8-BALL LOCK TROUGH #1 (TOP) 8-BALL LOCK TROUGH #2	181-5000-00
	3		Note: All 8
20	3	8-BALL LOCK TROUGH #4	positions
21	3	5 8-BALL LOCK TROUGH #5	are included in this spe-
22	217.7	8-BALL LOCK TROUGH #6 8-BALL LOCK TROUGH #7	cial mem-
23	1710 1747		brane switch.
25	N NEW ARY	D-O-C-(K.) 4-BANK STAND-UP (TOP)	515-5966-02
26			515-5966-02
27	timber.	3 D-(O)-C-K 4-BANK STAND-UP (MID-BOT)	515-5966-02
28	1.56-154	Introduction	515-5966-02
30 30	11000000	MOON 4-BANK STAND-UP (LEFT) MOON 4-BANK STAND-UP (MIDDLE-LEFT)	515-5967-08 515-5967-08
31	41 57 77	MOON 4-BANK STAND-UP (MIDDLE-RIGHT)	515-5967-08
32	4	MOON 4-BANK STAND-UP (RIGHT)	515-5967-08
33	0.01515.5	1 LEFT TURBO BUMPER	180-5015-03
34 35	WELLIN	BOTTOM TURBO BUMPER BAR RIGHT TURBO BUMPER	180-5015-03 180-5015-03
36		MOON HOME POSITION	180-5019-00
37			180-5019-00
38		6 FOOD SINGLE STAND-UP (LEFT)	515-5967-04
39	1220-111	7 1060 80 14 15 15 15 15 15 15 15 15 15 15 15 15 15	
40 41	21.302	H 10 M 10	515-5967-05 180-5010-04
42	1.77	网络大大大大大大大大大大大大大大大大大大大大大大大大大大大大大大大大大大大大	100-30 10-01
43	1.552131	g Burgerer	180-5116-00
44	0.00 mg/d	A CONTRACT	515-6469-00
45	1.734.0	0.00 N	500-5707-00
45	<u>و</u> د	6 RIGHT ORBIT 7 RIGHT BALL EJECT	500-5707-00 180-5116-00
		8 SUPER VUK (UNDER ARCH)	180-5116-00
49	-7	BATTERY 3-BANK STAND-UP (ALL 3)	515-5967-06
50	7	ROCKET HOME POSITION	180-5052-00
	7	A SALKOCKET OF POSITION	180-5052-00
52 53	, J	4 LEFT TOP LANE 5 RIGHT TOP LANE	500-5707-00 500-5707-00
54	1 7	6 CENTER BALL EJECT	180-5116-00
5!	, 7	RIGHT RAMP ENTER	180-5090-00
56	5 67	8 RIGHT RAMP EXIT RIGHT	515-6469-00
57	8	LEFT OUTLANE	500-5707-00
<u>5</u>	s 8	RIGHT OUTLANE LEFT RETURN LANE	500-5707-00 500-5707-00
		4 RIGHT RETURN LANE	500-5707-00
6		5 LEFT SLINGSHOT	180-5054-00
6:	2 8	6 RIGHT SLINGSHOT	180-5054-00
		* LT FLIPPER PWR SW (BUTTON VIA O7)	180-5122-00
<u>[6</u> 4	4 8	* RT FLIPPER PWR SW (BUTTON VIA Q5)	180-5122-00



GO TO COIL MENU

From the DIAGNOSTICS MENU, select the "COIL" Icon with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. The coils are listed in groups. The first 2 groups are the High Current Coils. The next group is the Low Current Coils. The next group is the Flash Lamps. The remaining coils are special coils. These coils are listed in a Coils Detailed Chart Table following the

Playfield Coil & Flash Lamp Locations.



Coil Test

To initiate, from the COIL MENU, select the "TST" Icon with either Red or Green Button and press the Black Button. Ensure the Power Interlock Switch is pulled out. Select either the "-" or "+" Icons. Start with the "+" Icon to start the manual Coil Test from #1 (The test runs through #1 - #34+). Press the Black Button on the "+" Icon, as each coil is selected, the display will describe the coil or flash lamp name with the corresponding number, the wire with colors, the "Pin-Outs" from the I/O Power Driver Board, the coil voltage and gauge-turns (e.g. 23-800). Press the Black Button again to move forward in the test. To test and view a particular coil or flash lamp, select the "RUN" Icon and press the Black Button. Each time the Black Button is pushed, the coil or flash lamp will fire on the playfield and/or backbox, with the display indicating the coil or flash lamp information. Continue with the same procedure to run through the entire test.




Cycling Coil Test

To initiate, from the COIL MENU, select the "CYC" Icon with either Red or Green Button and press the Black Button.. If still in a previous test, select the "PREV" Icon to return to Coil Menu or selecting either of the "ARROW" Icons will move to Cycling Coil Test (selecting again will return to Coil Test). The test pulses each regular coil or flash lamp sequentially (cycling) on the playfield and backbox. The display indicates "CYCLING COILS".

Backbox Insert Flash Lamp Locations

Below are the flash lamp locations in the Backbox Insert (General Illumination (GIs) Lamps are also shown for reference). The flash lamp locations correspond with the coil numbers as seen in the Coil Test. The table below indicates the numbers for the flash lamps in the backbox. See the next page for flash lamps on the playfield.

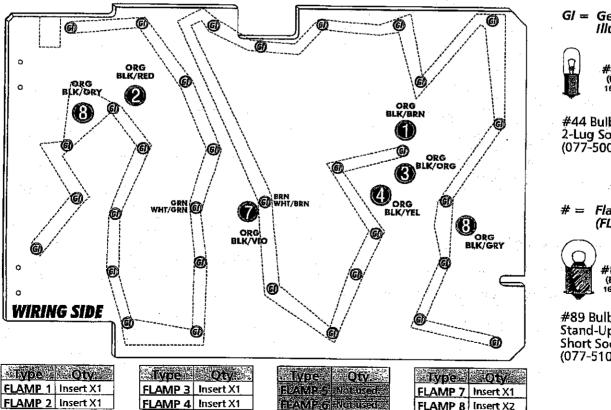

GI = General Illumination

> #44 Bulb (Bayonet) 165-5000-44

#44 Bulb uses 2-Lug Socket (077-5000-00),

Flash Lamp (FLAMP)

> #89 Bulb (Bayonet) 165-5000-89


#89 Bulb uses a Stand-Up Short Socket (077-5101-00).

Page 22

Section 3 Chapter 2

Portals™ Service Menu Diagnostics


Playfield Coil Locations

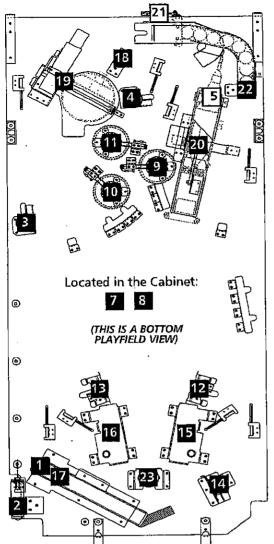

	լով <u>լով</u>
Type	Coll Description
COIL 1	Trough Up-Kicker (VUK) (24-940)
COIL 2	Auto Launch 50v (24-940)
COIL 3	Right Ball Eject (27-1500)
COIL 4	Center Ball Eject (27-1500)
COIL 5	Rocket Ball Eject (28-1050)
COIL 6	NATURAL DESCRIPTION OF THE PROPERTY OF THE PRO
COIL 7	Shaker Motor
COIL 8	Knocker (23-800)
COIL 9	Left Turbo Bumper (23-700)
COIL 10	Bottom Turbo Bumper (23-700)
COIL 11	Right Turbo Bumper (23-700)
COIL 12	Left Slingshot (23-800)
COIL 13	Right Slingshot (23-800)
COIL 14	Super VUK (Under Arch) 50v (24-940)
COIL 15	Left Flipper Enable
COIL 16	Right Flipper Enable
COIL 17	5-Ball Trough Lock Ball (25-1240)
COIL 18	Up/Down Ramp (27-1500)
COIL 19	Moon Motor Relay
COIL 20	Rocket Motor Relay
COIL 21	Trap Door (28-1050)
COIL 22	8 Ball Lock Plunger (27-1500)
COIL 23	Up/Down Post (27-1500)
COIL 24	NOTUSED TO SELECT THE PROPERTY OF THE PROPERTY

Portals™ Service Menu Diagnostics

Playfield Flash Lamp Locations

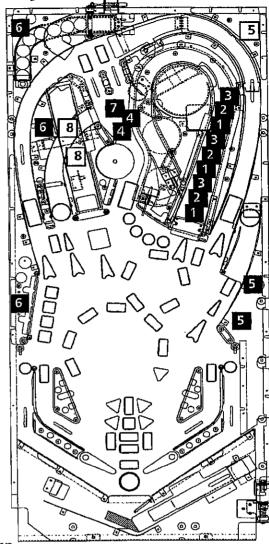

Flash Lamp (FLAMP)



#89 Bulb (Bayonet) 165-5000-89

Type	Flash Lemps Description & Otymo
FLAMP 1	RAMP X3 (Under Right Ramp), INSERT X1
FLAMP 2	RAMP X3 (Under Right Ramp), INSERT X1
FLAMP 3	RAMP X3 (Under Right Ramp), INSERT X1
FLAMP 4	POPS X2, BP (Backpanel) X1, INSERT X1
	UPR-RT X1, LWR-RT X2, BP (Backpanel) X1
FLAMP 6	UPR-LT X1, LWR-LT X1, BP (Backpanel) X1
	POPS X1, BP (Backpanel) X1, INSERT X1
	ROCKET X2, INSERT X2
See previo	us pg. for Backbox Insert Flash Lamp Locations.



#906 Bulb (Wedge Base) 165-5004-00

Legend Note:

- Coils or Flash Lamps located above playfield.
- Coils or Flash Lamps located below playfield.

The following coils are not used:

6 24

Section 3 Chapter 2

COILS DETAILED CHART TABLE


#1 TROUGH UP-KICKER Q1 VO Pwr. Drvr. BRN-BLK J8-P1 YEL-VIO	COILS DETAILED CHART TABLE									
#2 AUTO LAUNCH Q2 VO PWr. DIVI. BRN-RED JB-P3 YEL-VIO J10-4/5 50V 24-940 99-96-56-12-12-12-12-12-12-12-12-12-12-12-12-12-	High	Current Coils Group 1	Drive Trans- istor (D.T.)							Coil GA/Tum
## A RIGHT BALL EJECT	#1	TROUGH UP-KICKER	Q1	I/O Pwr. Drvr.	BRN-BLK	J8-P1	YEL-VIO	J10-4/5	50v	25-1240 090-5036-01
### RIGHT BALL EJECT Q4 VO Pwr. Drvr. BRN-ORG J8-P4 YEL-VIO J10-4/5 50V 09-504-4 #### CENTER BALL EJECT Q4 VO Pwr. Drvr. BRN-YEL J8-P5 YEL-VIO J10-4/5 50V 27-1500 09-504-4 #### CENTER BALL EJECT Q5 VO Pwr. Drvr. BRN-YEL J8-P5 YEL-VIO J10-4/5 50V 28-1050 09-504-4 #### ROCKET BALL EJECT Q5 VO Pwr. Drvr. BRN-BLU J8-P5 YEL-VIO J10-4/5 50V 28-1050 09-504-4 #### ROCKER Q6 VO Pwr. Drvr. BRN-BLU J8-P5 YEL-VIO J10-4/5 50V N/A ### RNOCKER Q8 VO Pwr. Drvr. BRN-BRN-VIO J8-P8 YEL-VIO J10-4/5 50V 27-1500 ### RNOCKER Q8 VO Pwr. Drvr. BRN-BRN-VIO J8-P8 YEL-VIO J10-4/5 50V 28-1050 ### LEFT TURBO BUMPER Q9 VO Pwr. Drvr. BLU-BRN J9-P1 YEL-VIO J10-4/5 50V 26-1200 ### LEFT TURBO BUMPER Q10 VO Pwr. Drvr. BLU-BRN J9-P1 YEL-VIO J10-4/5 50V 26-1200 ### LEFT TURBO BUMPER Q11 VO Pwr. Drvr. BLU-BRN J9-P1 YEL-VIO J10-4/5 50V 26-1200 ### LEFT TURBO BUMPER Q11 VO Pwr. Drvr. BLU-BRN J9-P4 YEL-VIO J10-4/5 50V 26-1200 ### LIGHT TURBO BUMPER Q11 VO Pwr. Drvr. BLU-BRN J9-P5 YEL-VIO J10-4/5 50V 26-1200 ### LIGHT SLINGSHOT Q13 VO Pwr. Drvr. BLU-BRN J9-P5 YEL-VIO J10-4/5 50V 26-1200 ### LIGHT SLINGSHOT Q13 VO Pwr. Drvr. BLU-BRN J9-P5 YEL-VIO J10-4/5 50V 26-1200 ### LIGHT SLINGSHOT Q13 VO Pwr. Drvr. BLU-BRN J9-P5 YEL-VIO J10-4/5 50V 26-1200 ### LIGHT SLINGSHOT Q13 VO Pwr. Drvr. BLU-BRN J9-P5 YEL-VIO J10-4/5 50V 26-1200 ### LIGHT SLINGSHOT Q13 VO Pwr. Drvr. BLU-BRN J9-P5 YEL-VIO J10-4/5 50V 26-1200 ### LIGHT SLINGSHOT Q13 VO Pwr. Drvr.	#2	AUTO LAUNCH	Q2	I/O Pwr. Drvr.	BRN-RED	J8-P3	YEL-VIO	J10-4/5	50v	24-940 090-5036-01
### CENTER BALL EJECT Q4	#3	RIGHT BALL EJECT	Q3	I/O Pwr. Drvr.	BRN-ORG	J8-P4	YEL-VIO	J10-4/5	50v	27-1500
#5 ROCKET BALL EJECT Q5 V/O PWr. Drvr. BRN-GRN J8-P6 YEL-VIO J10-4/5 50V 28-105/ #6 NOTIONED Q6 V/O PWr. Drvr. BRN-GRN J8-P6 YEL-VIO J10-4/5 50V N/A #7 SHAKER MOTOR Q7 J/O PWr. Drvr. BRN-VIO J8-P8 YEL-VIO J10-4/5 50V N/A #8 KNOCKER Q8 J/O PWr. Drvr. BRN-GRY J8-P9 VEL-VIO J10-4/5 50V 390-3001-4 #1 High Current Coils Group 2 Devotors Drve James Drve	#4	CENTER BALL EJECT	Q4	I/O Pwr. Drvr.	BRN-YEL	J8-P5	YEL-VIO	J10-4/5	50v	27-1500
### NOTUSED:	#5	ROCKET BALL EJECT	Q5	I/O Pwr. Drvr.	BRN-GRN	J8-P6	YEL-VIO	J10-4/5	50v	28-1050
#7 SHAKER MOTOR Q7 J/O Pwr. Drvr. BRN-VIO J8-P8 YEL-VIO J10-4/5 50v N/A #8 KNOCKER Q8 J/O Pwr. Drvr. BRN-GRY J8-P9 YEL-VIO J10-4/5 50v J2-8:00 #16 Current Coils Group 2 Divertions Divertion Output Beard Divertion Div	#6	NOTUSED	Q6	i⊧i/Õ Pwr. Orvr=	BRN-BLU	J8-PZ/	BRN -	110011	4	
High Current Coils Group 2 #90 Left TURBO BUMPER Q9	#7	SHAKER MOTOR	Q7	J/O Pwr. Drvr.	BRN-VIO	J8-P8	YEL-VIO			N/A
High Current Coils Group 2 Drive Torris Inter Dail Drive Torris Inter Dail Drive Torris Inter Dail Drive Torris Dr	#8	KNOCKER	Q8	I/O Pwr. Drvr.	BRN-GRY	J8-P9	YEL-VIO	J10-4/5	50v	23-800
#9 LEFT TURBO BUMPER Q9 VO Pwr. Drvr. BLU-BRN J9-P1 YEL-VIO J10-4/5 50v 26-1200 (99-594-4) (10 BOTTOM TURBO BUMPER Q10 VO Pwr. Drvr. BLU-BRN J9-P1 YEL-VIO J10-4/5 50v 26-1200 (99-594-4) (11 RIGHT TURBO BUMPER Q11 VO Pwr. Drvr. BLU-ORG J9-P4 YEL-VIO J10-4/5 50v 26-1200 (99-594-4) (12 LEFT SLINGSHOT Q12 VO Pwr. Drvr. BLU-ORG J9-P4 YEL-VIO J10-4/5 50v 26-1200 (99-594-4) (13 RIGHT SLINGSHOT Q13 VO Pwr. Drvr. BLU-GRN J9-P6 YEL-VIO J10-4/5 50v 26-1200 (99-594-4) (14 SUPER VUK (UNDER ARCH) Q14 VO Pwr. Drvr. BLU-BLK J9-P7 YEL-VIO J10-4/5 50v 26-1200 (99-594-4) (14 SUPER VUK (UNDER ARCH) Q14 VO Pwr. Drvr. BLU-BLK J9-P7 YEL-VIO J10-4/5 50v 26-1200 (99-594-4) (14 SUPER VUK (UNDER ARCH) Q15 VO Pwr. Drvr. DRG-GRY J9-P8 GRY-YEL J10-4/5 50v 22-1080 (99-593-4) (14 SUPER VUK (UNDER ARCH) Q16 VO Pwr. Drvr. DRG-GRY J9-P8 BRN-YEL J10-4/5 50v 22-1080 (99-593-4) (14 SUPER VUK (UNDER ARCH) Q16 VO Pwr. Drvr. DRG-GRY J9-P9 BLU-YEL J10-4/5 50v 22-1080 (99-593-4) (14 SUPER VUK (UNDER ARCH) Q16 VO Pwr. Drvr. DRG-GRY J9-P9 BLU-YEL J10-4/5 50v 22-1080 (99-593-4) (14 SUPER VUK (UNDER ARCH) Q16 VO Pwr. Drvr. VIO-BRN J7-P2 BRN J7-1 20v 22-1080 (99-593-4) (14 SUPER VUK (UNDER ARCH) Q18 VO Pwr. Drvr. VIO-BRN J7-P3 BRN J7-1 20v 22-1080 (99-593-4) (14 SUPER VUK (UNDER ARCH) Q19 VO Pwr. Drvr. VIO-ORG J7-P4 BRN J7-1 20v 22-1080 (99-593-4) (14 SUPER VUK (UNDER ARCH) Q19 VO Pwr. Drvr. VIO-ORG J7-P4 BRN J7-1 20v 22-1080 (99-593-4) (14 SUPER VUK (UNDER Q22 VO Pwr. Drvr. VIO-GRN J7-P7 BRN J7-1 20v 24-V DC 104 DR DRD (14 SUPER VUK (UNDER Q22 VO Pwr. Drvr. VIO-BLU J7-P8 BRN J7-1 20v 22-1080 (99-593-4) (14 SUPER VUK (UNDER Q22 VO Pwr. Drvr. VIO-BLU J7-P8 BRN J7-1 20v 22-1080 (99-593-4) (14 SUPER VUK (UNDER Q22 VO Pwr. Drvr. VIO-BLK J7-P9 BRN J7-1 20v 22-1080 (99-593-4) (14 SUPER VUK (UNDER Q22 VO Pwr. Drvr. VIO-BLK J7-P9 BRN J7-1 20v 22-1080 (99-593-4) (14 SUPER VUK (UNDER Q22 VO Pwr. Drvr. VIO-BLK J7-P9 BRN J7-1 20v 22-1080 (99-593-4) (14 SUPER VUK (UNDER Q22 VIO-SUPER VUK (UNDER Q22 VIO-SUPER VUK (UNDER Q23 VIO-SUPER VUK (UNDER Q23 VIO-SUPER VUK (UNDER VU										090-000
#9 LEFT TURBO BUMPER Q9 VO Pwr. Drvr. BLU-BRN J9-P1 YEL-VIO J10-4/5 50V 26-1200 26-120	High	Current Coils Group 2								Coil GA/Jum
#10 BOTTOM TURBO BUMPER Q10	#9	LEFT TURBO BUMPER	Q9	I/O Pwr. Drvr.						26-1200
#11 RIGHT TURBO BUMPER Q11 I/O PWr. Drvr. BLU-ORG J9-P4 YEL-VIO J10-4/5 50V 26-120/099-5044-6 #12 LEFT SLINGSHOT Q12 I/O PWr. Drvr. BLU-GRN J9-P6 YEL-VIO J10-4/5 50V 26-120/099-5044-6 #13 RIGHT SLINGSHOT Q13 I/O PWr. Drvr. BLU-GRN J9-P6 YEL-VIO J10-4/5 50V 26-120/099-5044-6 #14 SUPER VUK (UNDER ARCH) Q14 I/O PWr. Drvr. BLU-BLK J9-P7 YEL-VIO J10-4/5 50V 24-940 099-5034-6 #15 LEFT FLIPPER ENABLE Q15 I/O PWr. Drvr. ORG-GRY J9-P8 GRY-YEL J10-4/5 50V 22-108/099-5032-4 #16 RIGHT FLIPPER ENABLE Q16 I/O PWr. Drvr. ORG-VIO J9-P9 BLU-YEL J10-4/5 50V 22-108/099-5032-4 #17 5-BALL TROUGH LOCK BALL Q17 I/O PWr. Drvr. VIO-BRN J7-P2 BRN J7-1 20V 25-124/8 #18 UP/DOWN RAMP Q18 I/O PWr. Drvr. VIO-RED J7-P3 BRN J7-1 20V 27-150/099-5024-6 #19 MOON MOTOR RELAY Q19 I/O PWr. Drvr. VIO-ORG J7-P4 BRN J7-1 20V 24-VIO-DRD I/O PWr. Drvr. VIO-ORG J7-P4 BRN J7-1 20V 24-VIO-DRD I/O PWr. Drvr. VIO-ORG J7-P4 BRN J7-1 20V 24-VIO-DRD I/O PWR. Drvr. VIO-ORG J7-P4 BRN J7-1 20V 24-VIO-DRD I/O PWR. Drvr. VIO-ORG J7-P4 BRN J7-1 20V 24-VIO-DRD I/O PWR. Drvr. VIO-ORG J7-P4 BRN J7-1 20V 24-VIO-DRD I/O PWR. Drvr. VIO-ORG J7-P4 BRN J7-1 20V 24-VIO-DRD I/O PWR. Drvr. VIO-ORG J7-P4 BRN J7-1 20V 24-VIO-DRD I/O PWR. Drvr. VIO-ORG J7-P4 BRN J7-1 20V 28-VIO-DRD I/O PWR. Drvr. VIO-ORG J7-P4 BRN J7-1 20V 28-VIO-DRD I/O PWR. Drvr. VIO-ORG J7-P4 BRN J7-1 20V 28-VIO-DRD I/O PWR. Drvr. VIO-ORG J7-P4 BRN J7-1 20V 28-VIO-DRD I/O PWR. Drvr. VIO-ORG J7-P4 BRN J7-1 20V 28-VIO-DRD I/O PWR. Drvr. VIO-ORG J7-P4 BRN J7-1 20V 28-VIO-DRD I/O PWR. Drvr. VIO-ORG J7-P4 BRN J7-1 20V 28-VIO-DRD I/O PWR. Drvr. VIO-ORG J7-P4 BRN J7-1 20V 27-150(099-5004-099-5004	#10	BOTTOM TURBO BUMPER	Q10	I/O Pwr. Drvr.	BLU-RED	J9-P2	YEL-VIO	J10-4/5	50v	26-1200
#12 LEFT SLINGSHOT Q12 I/O Pwr. Drvr. BLU-YEL J9-P5 YEL-VIO J10-4/5 50V 26-120/ 905-9044 #13 RIGHT SLINGSHOT Q13 I/O Pwr. Drvr. BLU-GRN J9-P6 YEL-VIO J10-4/5 50V 26-120/ 905-9044 #14 SUPER VUK (UNDER ARCH) Q14 I/O Pwr. Drvr. BLU-BLK J9-P7 YEL-VIO J10-4/5 50V 24-940 #15 LEFT FLIPPER ENABLE Q15 I/O Pwr. Drvr. ORG-GRY J9-P8 GRY-YEL J10-4/5 50V 22-108/ #16 RIGHT FLIPPER ENABLE Q16 VO Pwr. Drvr. ORG-VIO J9-P9 BLU-YEL J10-4/5 50V 22-108/ 905-903-60-905-903-905-903-905-903-903-903-903-903-903-903-903-903-903	#11	RIGHT TURBO BUMPER	Q11	I/O Pwr. Drvr.	BLU-ORG	J9-P4	YEL-VIO	J10-4/5	50v	26-1200
#13 RIGHT SLINGSHOT Q13 I/O Pwr. Drvr. BLU-GRN J9-P6 YEL-VIO J10-4/5 50v 26-1200 099-5084-4 #14 SUPER VUK (UNDER ARCH) Q14 I/O Pwr. Drvr. BLU-BLK J9-P7 YEL-VIO J10-4/5 50v 22-1080 099-508-4 #15 LEFT FLIPPER ENABLE Q15 I/O Pwr. Drvr. ORG-GRY J9-P8 GRY-YEL J10-4/5 50v 22-1080 099-5032-4 #16 RIGHT FLIPPER ENABLE Q16 I/O Pwr. Drvr. ORG-VIO J9-P9 BLU-YEL J10-4/5 50v 22-1080 099-5032-4 #17 S-BALL TROUGH LOCK BALL Q17 I/O Pwr. Drvr. VIO-BRN J7-P2 BRN J7-1 20v 25-1240 099-5032-4 #18 UP/DOWN RAMP Q18 I/O Pwr. Drvr. VIO-RED J7-P3 BRN J7-1 20v 25-1240 099-5032-4 #19 MOON MOTOR RELAY Q19 I/O Pwr. Drvr. VIO-ORG J7-P4 BRN J7-1 20v 24V DC 190 PWR #20 ROCKET MOTOR RELAY Q20 I/O Pwr. Drvr. VIO-GRN J7-P6 BRN J7-1 20v 24V DC 190 PWR #21 TRAP DOOR Q21 I/O Pwr. Drvr. VIO-BLU J7-P8 BRN J7-1 20v 27-1500 099-5004-6 #22 B BALL LOCK PLUNGER Q22 I/O Pwr. Drvr. VIO-BLK J7-P9 BRN J7-1 20v 27-1500 099-5004-6 #24 MOTHER D3 #24 MOTHER D3 #24 MOTHER D3 #24 MOTHER D3 #24 MOTHER D3 #24 MOTHER D3 #24 MOTHER D3 #24 MOTHER D3 #24 MOTHER D3 #24 MOTHER D3 #24 MOTHER D3 #24 MOTHER D3 #24 MOTHER D3 #24 MOTHER D3 #25 MOTHER D3 #24 MOTHER D3 #25 MOTHER D3 #26 MOTHER D3 #27 MOTHER D3 #28 MOTHER D3 #29 MOTHER D3 #20 MOTHER D3 #21 MOTHER D3 #24 MOTHER D3 #25 MOTHER D3 #26 MOTHER D3 #27 MOTHER D3 #27 MOTHER D3 #27 MOTHER D3 #27 MOTHER D3 #28 MOTHER D3 #29 MOTHER D3 #29 MOTHER D3 #20 MOTHER D3	#12	LEFT SLINGSHOT	Q12	I/O Pwr. Drvr.	BLU-YEL	J9-P5	YEL-VIO	J10-4/5	50v	26-1200
#14 SUPER VUK (UNDER ARCH) Q14 I/O Pwr. Drvr. BLU-BLK J9-P7 YEL-VIO J10-4/5 50v 24-940 090-5034-4 15 LEFT FLIPPER ENABLE Q15 I/O Pwr. Drvr. ORG-GRY J9-P8 GRY-YEL J10-4/5 50v 22-108 090-50324 16 RIGHT FLIPPER ENABLE Q16 I/O Pwr. Drvr. ORG-VIO J9-P9 BLU-YEL J10-4/5 50v 22-108 090-50324 17 17 5-BALL TROUGH LOCK BALL Q17 I/O Pwr. Drvr. VIO-BRN J7-P2 BRN J7-1 20v 25-124 090-5034-1 18 UP/DOWN RAMP Q18 I/O Pwr. Drvr. VIO-RED J7-P3 BRN J7-1 20v 27-1500 090-5004-1 19 19 MOON MOTOR RELAY Q19 I/O Pwr. Drvr. VIO-ORG J7-P4 BRN J7-1 20v 24V DC 10A OPD 10A OP	#13	RIGHT SLINGSHOT	Q13	I/O Pwr. Drvr.	BLU-GRN	J9-P6	YEL-VIO	J10-4/5	50v	26-1200
#15 LEFT FLIPPER ENABLE Q15 I/O Pwr. Drvr. ORG-GRY J9-P8 GRY-YEL J10-4/5 50v 22-1086 090-5032-4 #16 RIGHT FLIPPER ENABLE Q16 I/O Pwr. Drvr. ORG-VIO J9-P9 BLU-YEL J10-4/5 50v 22-1086 090-5032-4 #17 S-BALL TROUGH LOCK BALL Q17 I/O Pwr. Drvr. VIO-BRN J7-P2 BRN J7-1 20v 25-1246 090-5036-4 #18 UP/DOWN RAMP Q18 I/O Pwr. Drvr. VIO-RED J7-P3 BRN J7-1 20v 27-1506 090-5004-4 #19 MOON MOTOR RELAY Q19 I/O Pwr. Drvr. VIO-GRN J7-P4 BRN J7-1 20v 24V DC 10A DPD 1 #20 ROCKET MOTOR RELAY Q20 I/O Pwr. Drvr. VIO-GRN J7-P7 BRN J7-1 20v 28-1056 090-5004-4 #21 TRAP DOOR Q21 I/O Pwr. Drvr. VIO-GRN J7-P8 BRN J7-1 20v 28-1056 090-5004-4 #22 B BALL LOCK PLUNGER Q22 I/O Pwr. Drvr. VIO-BLU J7-P8 BRN J7-1 20v 27-1506 090-500-6 #23 UP/DOWN POST Q23 I/O Pwr. Drvr. VIO-BLK J7-P9 BRN J7-1 20v 27-1506 090-500-6 #24 NOT-JISED 30-20-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #24 NOT-JISED 30-6 090-500-6 #25 NOT-JISED 30-6 090-500-6 #26 NOT-JISED 30-6 090-500-6 #27 NOT-JISED 30-6 090-500-6 #28 NOT-JISED 30-6 090-500-6 #29 NOT-JISED 30-6 090-500-6	#14	SUPER VUK (UNDER ARCH)	Q14	I/O Pwr. Drvr.	BLU-BLK	J9-P7	YEL-VIO	J10-4/5	50v	24-940
#16 RIGHT FLIPPER ENABLE Q16 VO Pwr. Drvr. ORG-VIO J9-P9 BLU-YEL J10-4/5 50v 22-1086 (990-5032-4	#15	LEFT FLIPPER ENABLE	Q15	I/O Pwr. Drvr.	ORG-GRY	J9-P8	GRY-YEL	J10-4/5	50v	22-1080
Low Current Coils Group 1 Drive Irans- istor (D.I.) Driver Ougust Board Une Color Une	#16	RIGHT FLIPPER ENABLE	Q16	VO Pwr. Drvr.	ORG-VIO	J9-P9	BLU-YEL	J10-4/5	50v	22-1080
#17 5-BALL TROUGH LOCK BALL Q17 I/O Pwr. Drvr. VIO-BRN J7-P2 BRN J7-1 20v 25-124(990-5036-6 #18 UP/DOWN RAMP Q18 I/O Pwr. Drvr. VIO-RED J7-P3 BRN J7-1 20v 27-150(990-5004-6 #19 MOON MOTOR RELAY Q19 I/O Pwr. Drvr. VIO-ORG J7-P4 BRN J7-1 20v 24V DC 10A DPD 10A D										
#17 5-BALL TROUGH LOCK BALL Q17 I/O Pwr. Drvr. VIO-BRN J7-P2 BRN J7-1 20v 25-124(090-5036-6 #18 UP/DOWN RAMP Q18 I/O Pwr. Drvr. VIO-RED J7-P3 BRN J7-1 20v 27-150(090-5004-6 #19 MOON MOTOR RELAY Q19 I/O Pwr. Drvr. VIO-ORG J7-P4 BRN J7-1 20v 24V DC 10A OPD: #20 ROCKET MOTOR RELAY Q20 I/O Pwr. Drvr. VIO-YEL J7-P6 BRN J7-1 20v 24V DC 10A OPD: #21 TRAP DOOR Q21 I/O Pwr. Drvr. VIO-GRN J7-P7 BRN J7-1 20v 28-1050(190-5046-6 #22 B BALL LOCK PLUNGER Q22 I/O Pwr. Drvr. VIO-BLU J7-P8 BRN J7-1 20v 27-150(190-5004-6 190-5	Low	Current Coils Group 1								Coil GA/Turn
#18 UP/DOWN RAMP Q18 //O Pwr. Drvr.	#17	5-BALL TROUGH LOCK BALL	Q17	I/O Pwr. Dryr.	VIO-BRN	J7-P2	BRN	J7-1	20v	25-1240 090-5036-01
#20 ROCKET MOTOR RELAY Q20 I/O Pwr. Drvr. VIO-YEL J7-P6 BRN J7-1 20V 24V DC 10A DPD 10	#18	UP/DOWN RAMP	Q18	I/O Pwr. Drvr.	VIO-RED	J7-P3	BRN	J7-1	20v	27-1500 090-5004-01
#20 ROCKET MOTOR RELAY Q20 I/O Pwr. Drvr. VIO-YEL J7-P6 BRN J7-1 20v 24V DC 10A DPD 24 DC 10A DPD 25 DE 25 D	#19	MOON MOTOR RELAY	Q19	I/O Pwr. Drvr.	VIO-ORG	J7-P4	BRN	J7-1	20v	24V DC 10A DPDT
#21 TRAP DOOR Q21 I/O Pwr. Drvr. VIO-GRN J7-P7 BRN J7-1 20v 28-1050 090-5046-0 #22 8 BALL LOCK PLUNGER Q22 I/O Pwr. Drvr. VIO-BLU J7-P8 BRN J7-1 20v 27-1500 090-5004-0 #23 UP/DOWN POST Q23 I/O Pwr. Drvr. VIO-BLK J7-P9 BRN J7-1 20v 27-1500 090-5004-0 #24 MOTUSED	#20	ROCKET MOTOR RELAY	Q20	I/O Pwr. Drvr.	VIO-YEL	J7-P6	BRN	J7-1	20v	24V DC
#22 8 BALL LOCK PLUNGER Q22 VO Pwr. Drvr. VIO-BLU J7-P8 BRN J7-1 20v 27-1500 090-500-40	#21	TRAP DOOR	Q21	I/O Pwr. Drvr.	VIO-GRN	J7-P7	BRN	J7-1	20v	28-1050 090-5046-00
#23 UP/DOWN POST Q23 I/O Pwr. Drvr. VIO-BLK J7-P9 BRN J7-1 20v 27-1500	#22	8 BALL LOCK PLUNGER	Q22	I/O Pwr. Drvr.	VIO-BLU	J7-P8	BRN	J7-1	20v	27-1500 090-5004-01
#24 MOTHISED	#23	UP/DOWN POST	Q23	I/O Pwr. Drvr.	VIO-BLK	J7-P9	BRN	J7-1	20v	27-1500 090-5004-01
	#24	NOTUSED	Q24	VO Ewr. Bevr.	VIO-GRY	J7-P10	BRN			E A SWINS

	FLIPPER COILS										
SSFB Nº	Flipper Coil	Cabinet Switch	Switch Drive	Switch Return	E.O.S.	GND	Flipper 50vDC Power	Flipper 8vAC Hold	Flipper Coil Output		
SSFB 1	Lwr. Rt. Flipper 22-1080	BLU-VIO SSFB CN1-7	GRN-GRY CPU CN8-9 TO SSFB CN1-4	WHT-GRY CPU CN10-1 TO SSFB CN1-3	BRN-VIO RT. EOS SW. TO CN1-1	BLK CPU CN5 TO	BLK-WHT PPB J7-1, -5 to SSFB CN2-11, 12	GRY-GRN-GRY P/5 CN1-10, -11, to	50v 8vAC Q2, Q3, SR1 CN2-7, 8		
SSFB 1	Lwr. Lt. Flipper 22-1080	BLU-GRY SSFB CN1-10	GRN-GRY CPU CN8-9 TO SSFB CN1-4	WHT-VIO CPU CN10-2 TO SSFB CN1-5	BRN-GRY LT. EOS SW. TO CN1-9	BLK CPU CNS TO CN1-6	BLK-WHT PPB J7-1, -5 ta SSFB CN2-11, 12	GRY-GRN-GRY P/5 CN1-10, -11, to	50v 8vAC Q2, Q10, 5 R2 CN2-4, 5		

Coils Detailed Chart Table Continued

Flasl	ւ Lamps (FLAMP)		Drive Trans istor (D.L.)	Driver Outus Board	D.T. Control Line Color	D.T. Control Line Connect	Power Line Color	Power Line Commection	Power Voltage	Bulla Type
#1	Under Right Ramp Backbox Insert	ХЗ Х1	Q25	I/O Pwr. Drvr.	BLK-BRN	J6-P1	ORG	J6-P10	20v	3X #906 165-5004-00 1X #89 165-5000-89
#2	Under Right Ramp Backbox Insert	X3 X1	Q26	I/O Pwr. Drvr.	BLK-RED	J6-P2	ORG	J6-P10	20v	3X #906 165-5004-00 1X #89 165-5000-89
#3	Under Right Ramp Backbox Insert	X3 X1	Q27	I/O Pwr. Drvr.	BLK-ORG	J6-P3	ORG	J6-P10	20ν	3X #906 165-5004-00 1X #89 165-5000-89
#4	Pop Bumper Area Backpanel Backbox Insert	X2 X1 X1	Q28	I/O Pwr. Drvr.	BLK-YEL	J6-P4	ORG	J6-P10	20v	4X #89 165-5000-89
#5	Upper Right Playfield Lower Right Playfield Backpanel	X1 X2 X1	Q29	I/O Pwr. Drvr.	BLK-GRN	J6-P5	ORG	J6-P10	20v	4X #89 165-5000-89
#6	Upper Left Playfield Lower Left Playfield Backpanel	X1 X1 X1	Q30	I/O Pwr. Drvr.	BLK-BLU	J6-P6	ORG	J6-P10	20v	3X #89 165-5000-89
#7	Pop Bumper Area Backpanel Backbox Insert	X1 X1 X1	Q31 -	I/O Pwr. Drvr.	BLK-VIO	J6-P7	ORG	J6-P10	20v	3X #89 165-5000-89
#8	Rocket Area Backbox Insert	X2 X2	Q32	I/O Pwr. Drvr.	BLK-GRY	J6-P8	ORG	J6-P10	20v	4X #89 165-5000-89
	. Data Line			Driver Ouput Board LOC, Under Playfield	D.i. Control Line Color	D.T. Control Line Connect	Power Line Color	Power Line Commection	1	
#1 #2	Magnet Grab Magnet Hold			Magnet Driver Magnet Driver	BLUE	P4 P4	YEL-VIO	P3	50v 50v	

TYPICAL SWITCH, COIL & LAMP WIRING

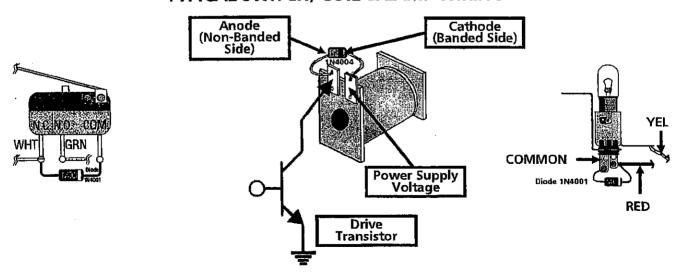



GO TO LAMP MENU

From the DIAGNOSTICS MENU, select the "LAMP" Icon with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. Controlled lamps are configured in and 8 x 8 Matrix of Columns (Lamp Drives) and Rows (Lamp Returns) with up to 64 lamps possible. The Lamp Test Menu consists of four parts: Single Lamp Test, Test All Lamps, Row Lamp Test and Column Lamp Test.



Single Lamp Test

To initiate, from the LAMP MENU, select the "ONE" Icon with either Red or Green Button and press the Black Button. Select either the "-" or "+" Icons. Start with the "+" Icon to start the manual Lamp Test from Column 1, Row 1, Switch 1. Press the Black Button on the "+" Icon, as each lamp is selected the lamp will light at it's location on the Planfold account.

selected, the lamp will light at it's location on the playfield as well as the display, indicating the Lamp Matrix Grid position, lamp name with the corresponding number, Return (Row) Wire & Color, Drive (Column) Wire & Color, and associated drive transistors. Press the Black Button again to move forward in the test. To test and view a particular lamp, select the "RUN" Icon and press the Black Button. Each time the Black Button is pushed, the lamp will light-up on the playfield, with the display indicating the lamp information. Continue with the same procedure to run through the entire test.




Test All Lamps

To initiate, from the LAMP MENU, select the "ALL" Icon with either Red or Green Button and press the Black Button. If still in Single Lamp Test (or any 1 of the 4 tests), select the "PREV" Icon to return to Lamp Menu or selecting either of the "ARROW" Icons will move through the tests, keep activating until Test All Lamps is displayed. The display will indicate "ALL LAMPS ON" and the tests, keep activating until

Test All Lamps is displayed. The display will indicate "ALL LAMPS ON" and the lamps on the playfield will be lit, alternating between the rows in the Lamp Matrix.

Continued on the next page with Row & Column Lamp Tests.

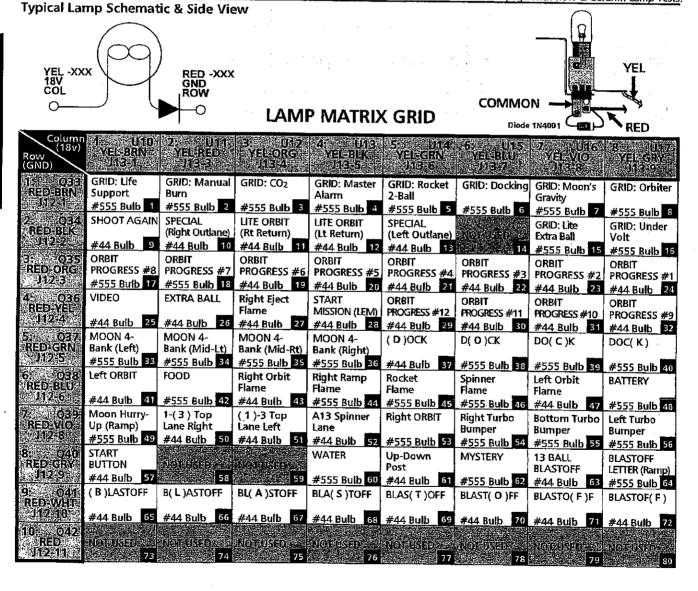





Row and Column Lamp Tests

To initiate, from the LAMP MENU, select the "COL" Icon with either Flipper Button and press the Black Button. If still in a previous test, select the "PREV" Icon to return to Lamp Menu or selecting either of the "ARROW" Icons will move through the tests, keep activating until Row or Column Lamp Test (whichever desired) is displayed. In this test, each set of

lamps in each row or column of the Lamp Matrix (respective to each test) will light-up on the playfield and is indicated in the display.

Lamp Matrix Location

The lamp locations correspond with the Lamp Number in the Lamp Maxtrix Grid on the previous page.

Legend Note:

= Lamps located above playfield.

= Lamps located below playfield.

The following Lamps are not used:

14 58

58 5

76 77

8 79 80

[65] [66] [67] [68] [69] [70] [71] [72] 63 13 10

The following Bulb is used on the Lamp Boards, Turbo Bumpers, & Ramp Entrance Sign.



#555 Bulb (Wedge) 165-5002-00

The following Bulb is used in the remainder of the matrix:



#44 Bulb (Bayonet) 165-5000-44





TEST FLASH LAMPS

From the DIAGNOSTICS MENU, select the "FLASH" Icon with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. After selecting this Icon the display will indicated "CYCLING FLASHERS" and all the flash lamps will cycle continuously until the test is exited. This test is allows the technician to easily spot any burned-out bulbs and replace them. Note: This test is also good to verify operation of the Left/Right Relay. If the relay does not function properly, coils may energize instead of the flash lamps.



CLEAR BALL TROUGH

From the DIAGNOSTICS MENU, select the "CLR" Icon with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. This is provided to allow the technician a simple method of removing the balls from the trough and also, to test functionality of the trough, ensuring proper trough operation. After selecting this Icon the display will show a graphic of the ball trough with balls in the trough with it's corresponding switch number. Select the "RUN" Icon to eject the ball in the first position. Simultaneously, the display and the playfield will eject the ball to the Trough Up-Kicker, eject from the Trough Up-Kicker into the Shooter Lane and will be ejected onto the playfield where the technician can easily retrieve the pinball or allow the ball(s) to re-enter the trough to continue Clear Ball Trough Test. (A Caution: Continuous use of this test may overheat the Trough Up-Kicker Coil.)



TECHNICIANS ALERTS

From the DIAGNOSTICS MENU, select the "TECH" Icon with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. After selecting this *Icon* the display will indicate if there are any faulty switches (i.e., switches that are normally closed but remain open or open switches that have not been closed (activated) in 50 games.)



SERVICE PHONE

From the DIAGNOSTICS MENU, select the "SERV" Icon with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. After selecting this Icon the display will indicate a phone number to call if technical assistance is required.



BEGIN PLAY TEST

From the DIAGNOSTICS MENU, select the "PLAY" *Icon* with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. After selecting this *Icon* the technician can test certain play functions to insure all switch activated coils function without entering game play. For example, by rolling the ball over the left outlane switch, the Laser Kick should fire. If it kicks to early or too late, the switch actuator should be adjusted to compensate for this error. If it fails to fire, use the Switch Test or Coil Test to help determine the cause of the failure. During this function, similar tests may be performed on the Vertical Up-Kickers, Ejects, Pop Bumpers, etc. in the game. For unique Play Test functions, select the "GAME SPECIFIC" Icon in the DIAGNOSTICS MENU.



SOUND/SPEAKER TEST

From the DIAGNOSTICS MENU, select the "SPKR" Icon with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. The BSMT 2000 Sound System produces true digital stereo sound on the Left & Right Speakers (Backbox) and "Mono" on the Center Speaker (Bottom of Cabinet). After selecting this Icon, select the "-" or "+" Icons and press the Black "ENTER" Button to activate the first test. Repeat to visually see & hear all tests. Select the "RUN" Icon to activate the test chosen without moving to the next test.

During Sound Tests, the display shows the sound board circuit under test and the corresponding sounds. The sound functions allow verification that all channels are functioning properly & that the speaker connections are correct. (Refer to the game manual for detailed testing procedures).

Automatic / Manual Lasts	Sounds Produced
Left Speaker	Left Sine
Both Left & Right Speakers	Center Sine
Right Speaker	Right Sine
Voice ROM 1 (Loc. U17)	Speech Pattern 1

Automatic/ Manual Tests	Sounds Produced
Voice ROM 2 (Loc. U21)	Speech Pattern 2
Voice ROM 3 (Loc. U36)	Speech Pattern 3
VeigeRoMrzidios (Pizzles	Not used a log
Sound/OPSYS EPROM (Loc. U7)	Level 1-3 (Music Test)

Speaker Phase Testing




Connections to each of the three speakers are polarized and each must be connected appropriately for the best quality sound. If one speaker has the positive and negative connections reversed with respect to the other two, bass frequencies will not be produced properly and the overall sound quality will be poor.

To test for proper speaker phasing, use the sound test to cycle through the Left, Center, and Right Sine functions. If the Center Sine produces more volume and bass than the Left and Right Sines, the speakers are connected properly. If it produces the same or less, one speaker is connected improperly. To isolate and correct reversed speaker connections, one of two methods may be used.

- 1. Check each speaker for polarity markings. If the speakers have polarity markings, verify that the single-color wire (BLK, YEL or RED) is connected to the negative (-) terminal.
- 2. Disconnect the speaker output connector from the CPU / Sound Board and connect a 1.5-volt battery across each speaker pair one at a time while observing the speakers. Make sure the positive battery terminal is connected to the positive lead (CN4- Pin 1, 3 or 6) each time. As the connection is made, check speaker cone movement; proper connections are indicated by outward movement.

BEGIN BURN IN

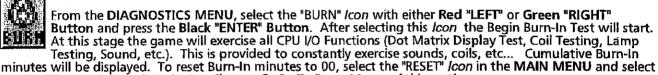

the "FACT" Icon (Factory Reset). See Chapter 5, Go To Reset Menu, of this section.

DOT MATRIX TEST

From the DIAGNOSTICS MENU, select the "L'OT TEST" Icon with either Red "LEFT" or Green "RIGHT"
Button and press the Black "ENTER" Button. After selecting this Icon the Dot Matrix Display Test
immediately begins. The display will immediately illuminate and cycle for one pass of each test
continuously for each of the following tests (Pressing any button will exit the test and return to
DIAGNOSTICS MENU.):

- Illuminates 1 vertical column of dots, turning it off & illuminating the next column, until each column has been individually lit, while the other columns are off.
- 2. Illuminates 1 horizontal row of dots, turning it off & illuminating the next row, until each row has been individually lit, while the other rows are off.
- 3. Illuminates all the dots, except for one column from left to right.
- 4. Illuminates all the dots except for one row from top to bottom.
- 5. Illuminates every other dot lit, in both the rows and columns.
- 6. Illuminates all dots at 30%, 70% & 100% brightness.

Dot Matrix Display Explained

The display utilizes a Micro-Processor Control Board mounted in piggyback fashion to the Dot Matrix Display Driver Board. The purpose behind this board is to provide more information (128 X 32 Dots) to the operator as well as displaying graphics to the player.

The board is controlled by a 68000 Microprocessor and its personality ROMs (Unique to the Game). It receives Data, Reset & Clock Information from the CPU Board via the ribbon cable and sends back multiple Status and Busy Signals to the CPU. This is to insure synchronized communication between the CPU and the Display Controller Board.

The Drivers for the rows and columns are provided on 5 surface mounted integrated circuits on the Dot Matrix Display Driver Board.



APOLLO SPECIFIC

From the DIAGNOSTICS MENU, select the "A13" Icon with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. After selecting this Icon the technician can test and adjust any game specific function(s) from the sub-menu. Similar to "BEGIN PLAY TEST", this menu is used to test the game specific features. The features are the Rocket, Moon & 7-Segment LED Tests.



Rocket Test

To initiate, from the APOLLO SPECIFIC MENU, select the "RCKT" Icon with either the Red or Green Button and press the Black Button. In Rocket Test, press the Start Button to operate the Rocket. The motor on this mechanism is controlled by a Relay driven by Q20 on the I/O Power Driver Board. The display will also indicate the status of the two limit switches (Rocket Home (Down) & Rocket Up).



Moon Test

To initiate, from the APOLLO SPECIFIC MENU, select the "MECH" Icon with either the Red or Green Button and press the Black Button. In Moon Test, press the Start Button to operate the Moon. The motor on this mechanism is controlled by a Relay driven by Q19 on the I/O Power Driver Board. The display will also indicate the status of the two limit switches (Moon Home & Moon Forward).



7-Segment LED Test

To initiate, from the APOLLO SPECIFIC MENU, select the "LED" Icon with either the Red or Green Button and press the Black Button. In LED Test, press the Start Button to operate the LED. Each time the Start Button is depressed the next digit in the display will light up. Use this test to ensure all segments are working properly.



FLOW CHART MENU (DR. PINBALL)

To initiate, from the DIAGNOSTICS MENU, select the "DR." Icon with either the Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. This will bring the operator/technician into the FLOW CHART MENU which offers the operator/technician a choice of four sub-menus: Flipper, Coil, Switch and Lamp. Selecting a particular sub-menu will give the operator/technician a choice of which specific lamp, switch or coil circuit needs to be diagnosed. In the Flow Chart Menu, the display will now request or give a procedure to follow such as "Does the lamp turn on?" or "Check bridge rectifier BR-20, if short the Dr. Will expect a response such as "VES". replace". When Dr. Pinball asks a question or request a procedure the Dr. will expect a response such as "YES, NO, FIXED or NO PROBLEM" (see figure below) which you the operator/technician must input by using the Green "SELECT" (RIGHT) and/or Black "ENTER" Buttons on the coin door. The Flipper Buttons can be used to activate the particular circuit being diagnosed and in the MAIN MENU to select a menu item. The Start Button will allow the operator/technician to guit at anytime.

Your Notes	•		
	and the second of the second 		
			1.0
		<u> </u>	

Your Notes	
	\$
· · · · · · · · · · · · · · · · · · ·	
	· · · · · · · · · · · · · · · · · · ·



APOLLO 13.

GAME AUDIT TABLE



Photocopy for Field Audit Tracking Performance (Use blank column to fill-in game audit totals)



EARNINGS AUDITS 1-12

	AuditName	
1	TOTAL PAID CREDITS	
2	FREE GAME PERCENTAGE	
3	AVERAGE BALL TIME	
4	AVERAGE GAME TIME	
5	COINS THRU LEFT SLOT	
6	COINS THRU RIGHT SLOT	
7	COINS THRU CENTER SLOT	
8	COINS THRU 4TH SLOT	
9	TOTAL COINS	
10	TOTAL FARNINGS	
11	METER CLICKS	
12	SOFTWARE METER	



SEGA AUDITS 13-46

Nº	Audit Name	Fill-In
13	TOTAL BALLS PLAYED	
14	TOTAL EXTRA BALLS	
15	EXTRA BALL PERCENT	
16	REPLAY 1 AWARDS	
17	REPLAY 2+ AWARDS	س <u>دا ریون</u>
18	TOTAL REPLAYS	
19	REPLAY PERCENT	
20	TOTAL SPECIALS	
21	SPECIAL PERCENT	
22	TOTAL MATCHES	
23	HIGH SCORE AWARDS	
24	HIGH SCORE PERCENT	
2.5	TOTAL FREE PLAYS	
26	TOTAL PLAYS	
27	0.0M—99.9M SCORES	
28	100.0M—199.9M SCORES	
29	200.0M—399.9M SCORES	
30	400.0M—799.9M SCORES	_



Continued

SEGA AUDITS 13-46

IX ²	Audit Name	Fill	ın
31	800.0M—1.19B SCORES		
32	1.2B+ SCORES		
33	AVERAGE SCORES		
34	SERVICE CREDITS		,,
35	PROPRIETARY		
36	PROPRIETARY		
37	PROPRIETARY		
38	TOTAL BUYIN GAMES		
39	EXTRA BALL BUYINS		
40	EXTRA BALL BUYIN REPLAYS		
41	E.B. BUYIN HSTDS		
42	LEFT DRAINS		
43	CENTER DRAINS		-
44	RIGHT DRAINS		
45	SLAM TILTS		
46	TOTAL BALLS SAVED		



APOLLO 13 AUDITS 47-98

Νg	Audit Name	Filio
47	DOCK TARGETS COMPLETE	
48	LEFT ORBITS	
49	RIGHT ORBITS	
50	SPINNER SHOTS	
51	ROCKET SHOTS	
52	CENTER EJECT SHOTS	
53	RAMP SHOTS	
54	RIGHT EJECT SHOTS	
55	MOON TARGETS COMPLETE	
56	MYSTERY AWARDED	
57	BLASTOFF LETTERS	
58	BLASTOFF COMPLETE	
59	SKILL: START MISSION	·
60	SKILL: MYSTERY	
61	SKILL: MBALL COUNT	



Continued

APOLLO 13 AUDITS 47-98

	<u> </u>	'
Nº	Audit Name	Fillin
62	MULTIBALL READY	A INCOME OF MENT OF STREET
63	13 BALL MBALL READY	:
64	MULTIBALL STARTS	
65	MULTIBALL ABORTED	
66	2 BALL MULTIBALL	. :
67	3 BALL MULTIBALL	
68	4 BALL MULTIBALL	
69	13 BALL MULTIBALL	
70	MYSTERY 3 BALL MBALL	
71	MBALL RESTART LIT	
72	MBALL RESTART AWARDED	
73	JACKPOTS SCORED	
74	SUPER JACKPOTS SCORED	
75	LIFE SUPPORT STARTS	
76	MANUAL BURN STARTS	
77	CO2 STARTS	
78	ROCKET 2-BALL STARTS	
79	DOCKING STARTS	
80	MOON'S GRAVITY STARTS	
81	ORBITER STARTS	
82	X-BALL FROM GRID	
83	UNDER VOLT STARTS	
84	MASTER ALARM	i
85	VIDEO LIT	
86	VIDEO AWARDED	
87	POWER DOWN STARTS	
88	POWER UP STARTS	
89	SPLASHDOWN STARTS	1 : -
90	TOTAL REGULAR PLAYS	<u> </u>
91	AVG. REGULAR GAME TIME	
92	REGULAR GAME MBALLS	
93	REGULAR GAME REPLAYS	
94	TOTAL NOVICE PLAYS	<u> </u>
95	AVG. NOVICE GAME TIME	
96	NOVICE GAME MBALLS	
97	NOVICE GAME REPLAYS	
98	AVG. NOVICE BALL SAVES	

Go To Audits Menu

Overview

The Portals™ Service Menu System provides 98 Audit Functions for accounting purposes and for evaluation of game difficulty adjustments. The Audit Functions are split into 3 groups. The first group, Earnings Audits, are the first 12 most-used audits. The second group, Sega Audits, are the game play generic audits (13-46). The last group, Apollo 13 Audits, are the game play specific audits (47-98). Each group may be viewed manually after entering the Portals Service Menu (see Chapter 1, Introduction, of this section). All audits can be viewed at a glance with the Game Audit Table provided on the previous page.



GO TO AUDITS MENU

With the game in the Attract Mode, open the Coin Door and press the Black "BEGIN TEST" Button. Select the "AUD" Icon in the MAIN MENU with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. The AUDITS MENU appears.

Important Notes:



Exit any sub-menu and return to the MAIN MENU by selecting & activating the "PREV" Icons. If no Icons appear in the display because of a testing function or special display (e.g. "Help"), press any button to exit.



Selecting & activating the "QUIT" Icon from any display will exit the Service Session.



Selecting & activating the "HELP" Icon from any display will show a help screen. (An explanation of each Mini-Icon at that level will cycle continuously until any active button is pressed.)



Selecting & activating the "ARROW" Icons selects the next or previous audit in the group.



EARNINGS AUDITS (1-12)

From the AUDITS MENU, select the "EARN" Icon with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. Select and activate the "RIGHT ARROW" Icon to view the 1st audit in this group. Continue to select either of the "ARROW" Icons to view each audit one at a time. The display will describe the audit number, the audit name, and the audit total or value. The current audit will remain in the display until the next audit is chosen or when the sub-menu is exited.

Au. 1	Total Paid Credits	Provides the total number of paid credits.
Au. 2	Free Game Percentage	This percentage is derived from dividing Audit 25, Total Free Plays, by Audit 26, Total Plays.
Au. 3	Average Ball Time	In seconds, the average ball time is derived from the total play time divided by Audit 13, Total Balls Played.
Au. 4	Average Game Time	The average game time is expressed in minutes and seconds.
Au. 5	Coins Thru Left Slot	Provides the total amount of coins registered through the left slot.
Au. 6	Coins Thru Right Slot	Provides the total amount of coins registered through the right slot.
Au. 7	Coins Thru Center Slot	Provides the total amount of coins registered through the center slot.
Au. 8	Coins Thru 4th Slot	Provides the total amount of coins registered through the fourth slot.
Au. 9	Total Coins	Provides the total amount of coins registered through all the slots.
Au. 10	Total Earnings	The total cash value accumulated since the last Factory Restore occurred (see Chapter 5, Go to Reset Menu, of this section).
Au. 11	Meter Clicks	Provides the total number of money clicks accumulated. (Based on the country's lowest coin denomination used for the game credit.)
Au. 12	Software Meter	Provides the continuing total of Meter Clicks. This audit cannot be reset; the display shows the constant addition of Meter Clicks.



SEGA AUDITS (13-46)

From the AUDITS MENU, select the "SEGA" Icon with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. Select and activate the "RIGHT ARROW" Icon to view the 1st audit in this group. Continue to select either of the "ARROW" Icons to view each audit one at a time. The display will describe the audit number, the audit name, and the audit total or value. The current audit will remain in the display until the next audit is chosen or when the sub-menu is exited.

AU NE	AuditRame	Audit Definition
Au. 13	Total Balls Played	Provides the total of regular and extra balls.
Au. 14	Total Extra Balls	Provides the total number of extra balls awarded.
Au. 15	Extra Balls Percent	This percentage is derived from dividing Audit 14, Total Extra Balls, by Audit 26, Total Plays.
Au. 16	Replay 1 Awards	Provides the total awards (credit, extra ball, or audit) for level 1.
Au. 17	Replay 2+ Awards	Provides the total awards (credit, extra ball, or audit) for level(s) 2 or higher.
Au. 18	Total Replays	Provides the total awards (credits, extra balls, or audit only) for exceeding replay score levels.
Au. 19	Replay Percent	The replay total awards for exceeding replay score levels. This percentage is derived from dividing Audit 18, Total Replays, by Audit 26, Total Plays.
Au.20	Total Specials	Provides the total awards (credits, extra balls, or scores) for making specials.
Au. 21	Special Percent	This percentage is derived from dividing Audit 20, Total Specials, by Audit 26, Total Plays.
Au. 22	Total Matches	Provides the total credits awarded for matching the last two digits of the score with the system-generated Match Number at the end of the game. Percentage of match credits is adjustable from 0% to 10% by Ad. 11, Match Percentage, if enabled. (See Chapter 4, Go to Adjustments Menu, of this section.)
Au. 23	High Score Awards	Provides the total credits awarded for exceeding the High-Score-To- Date scores.
Au. 24	High Score Percent	This percentage is derived from dividing Audit 23, High Score Awards, by Audit 26, Total Plays.
Au. 25	Total Free Plays	Provides the total free credits for replays, High-Score-To-Date, Specials, and Match.
Au. 26	Total Plays	This total is derived by adding the sum of Audit 1, Total Paid Credits, and Audit 25, Total Free Plays. Note that free credits are not recorded in the Audit until they are actually used.
Au. 27	0.0M99.9M Scores	Provides the total number of games the Player's final score was between 0 and 99,999,990 points.
Au. 28	100.0M—199.9M Scores	Provides the total number of games the Player's final score was between 100,000,000 and 199,999,990 points.
Au. 29	200.0M—399.9M Scores	Provides the total number of games the Player's final score was between 200,000,000 and 399,999,990 points.
Au. 30	400.0M—799.9M Scores	Provides the total number of games the Player's final score was between 400,000,000 and 799,999,990 points.
Au. 31	800.0M—1.19B Scores	Provides the total number of games the Player's final score was between 800,000,000 and 1,199,999,990 points.
Au. 32	1.2B+ Scores	Provides the total number of games the Player's final score was over 1,200,000,000 points.
Au. 33	Average Scores	This total is derived from adding the Final Score of each game to a table and dividing this sum by Audit 26, Total Plays.
	and the second s	



Sega Audits Continued.


	Sega Addits Continued.						
	Auditiname	Audit Denniuon					
Au. 34	Service Credits	Provides the total number of Service credits added to the game. (See Chapter 1, Introduction [Access & Use] for instructions on how to receive Service Credits.)					
Au. 35, 36, 37	Proprietary	Provides information to the game designer to aid in design development (not for consumer use).					
Au. 38	Total Buyin Games	Provides the number of times a player utilized the Buyin Feature. The Buyin Feature is adjustable using Ad. 34, Buyin Type. (See Chapter 4, Go to Adjustments Menu, of this section.)					
Au. 39	Extra Ball Buyins	Provides the total number of times the Extra Ball Buyin Feature was used. The Extra Ball Buyin Feature is adjustable using Ad. 34, Buyin Type. (See Chapter 4, Go to Adjustments Menu, of this section.)					
Au. 40	E.B. Buyin Replays	Provides the total number of replay awards that resulted from the use of Audit 39, Total Extra Ball Buyins.					
Au. 41	Extra Ball Buyin HSTDS	Provides the total number of times in which use of the Extra Ball Buyin Feature resulted from beating the High-Score-To-Date (HSTD).					
Au. 42	Left Drains	Provides the number of times the ball drained out the left drain.					
Au. 43	Center Drains	Provides the number of times the ball drained out the center drain.					
Au. 44	Right Drains	Provides the number of times the ball drained out the right drain.					
Au. 45	Slam Tilts	Provides the number of times the Slam Tilt switch was activated.					
Au. 46	Total Balls Saved	Provides the total number of times the Total Balls Saved Feature was used. This feature is enabled at the start of each ball and is disabled as soon as the ball makes contact with 5 game switches or allocated time expired.					



APOLLO 13 AUDITS (47-98)

From the AUDITS MENU, select the "A13" Icon with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. Select and activate the "RIGHT ARROW" Icon to view the 1st audit in this group. Continue to select either of the "ARROW" Icons to view each audit one at a time. The display will describe the audit number, the audit name, and the audit total or value. The current audit will remain in the display until the next audit is chosen or when the sub-menu is exited.

Au Nº	Audic Name.	Audit Definition (2) Let (2)
		Provides the number of times the D-O-C-K Stand-Up Targets were
Au. 47	Dock Targets Complete	completed.
Au. 48	Left Orbits	Provides the number of times a Left Orbit Shot was made.
Au. 49	Right Orbits	Provides the number of times a Right Orbit Shot was made.
Au. 50	Spinner Shots	Provides the number of times a Spinner Shot was made.
Au. 51	Rocket Shots	Provides the number of times a Rocket Shot was made.
Au. 52	Center Eject Shots	Provides the number of times a Center Ball Eject Shot was made.
Au. 53	Ramp Shots	Provides the number of times a Right Ramp Shot was made.
Au. 54	Right Eject Shots	Provides the number of times a Right Ball Eject Shot was made.
Au. 55	Moon Targets Complete	Provides the number of times all four Moon Targets were completed:
Au. 56	Mystery Awarded	Provides the number of times a Mystery Feature was awarded.
Au. 57	BLASTOFF Letters	Provides the number of times B-L-A-S-T-O-F-F Letters were collected.
Au. 58	BLASTOFF Complete	Provides the number of times the BLASTOFF Feature was completed.

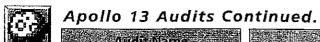

	- Avandame	Audit Definition ***
Au. 59	Skill: Start Mission	Provides the number of times the Skill Feature "Start Mission" was completed.
Au. 60	Skill: Mystery	Provides the number of times the Skill Feature "Mystery" was completed.
Au. 61	Skill: MBall Count	Provides the number of times the Skill Feature "MBALL Count" was completed.
Au. 62	Multiball Ready	Provides the number of times Regular Multiball was ready to be collected.
Au. 63	13 Ball Mball Ready	Provides the number of times 13 Ball Multiball was ready to be collected.
Au. 64	Multiball Starts	Provides the number of times Multiball was started.
Au. 65	Multiball Aborted	Provides the number of times Multiball was aborted by the player.
Au. 66	2 Ball Multiball	Provides the number of times 2 Ball Multiball was played.
Au. 67	3 Ball Multiball	Provides the number of times 3 Ball Multiball was played.
Au. 68	4 Ball Multiball	Provides the number of times 4 Ball Multiball was played.
Au. 69	13 Ball Multiball	Provides the number of times 13 Ball Multiball was played.
Au. 70	Mystery 3 Ball MBall	Provides the number of times "Mystery" 3 Ball Multiball was played.
Au. 71	Mball Restart Lit	Provides the number of times Multiball Restart was lit.
Au. 72	Mball Restart Awarded	Provides the number of times Multiball was restarted via a lit Multiball Restart.
Au. 73	Jackpots Scored	Provides the number of times Jackpots were collected.
Au. 74	Super Jackpots Scored	Provides the number of times Super Jackpots were collected.
Au. 75	Life Support Starts	Provides the number of times the feature "Life Support" was started.
Au. 76	Manual Burn Starts	Provides the number of times the feature "Manual Burn" was started.
Au. 77	Co ₂ Starts	Provides the number of times the feature "CO2" was started.
Au. 78	Rocket 2-Ball Starts	Provides the number of times the feature "Rocket 2-Ball" was started.
Au. 79	Docking Starts	Provides the number of times the feature "Docking" was started.
Au. 80	Moon's Gravity Starts	Provides the number of times the feature "Moon's Gravity" was started.
Au. 81	Orbiter Starts	Provides the number of times the feature "Orbiter" was started.
Au. 82	X-Ball From Grid	Provides the number of times X-Multiball was started from a Grid Feature.
Au. 83	Under Volt Starts	Provides the number of times the feature "Under Volt" was started.
Au. 84	Master Alarm	Provides the number of times the feature "Master Alarm" was started.
Au. 85	Video Lit	Provides the number of times the Video Light by the Right Eject was lit.
Au. 86	Video Awarded	Provides the number of times the Video Feature was collected.
Au. 87	Power Down Starts	Provides the number of times the feature "Power Down" was started.
Au. 88	Power Up Starts	Provides the number of times the feature "Power Up" was started.
Au. 89	Splashdown Starts	Provides the number of times the feature "Splashdown" was started.
Au, 90	Total Regular Plays	Provides the total Regular Games were played.
Au. 91	Avg. Regular Game Time	Provides the average game time of Regular played games.
Au. 92	Regular Game MBalls	Provides the number of times Multiballs were played in a Regular Game.



Apollo 13 Audits Continued.

	Audit/Name	Audio Definition
Au. 93	Regular Game Replays	Provides the number of times replays were awarded in a Regular Game.
Au. 94	Total Novice Plays	Provides the total Novice Games were played.
Au. 95	Avg. Novice Game Time	Provides the average game time of Novice played games.
Au. 96	Novice Game MBalls	Provides the number of times Multiballs were played in a Novice Game.
Au. 97	Novice Game Replays	Provides the number of times replays were awarded in a Novice Game.
Au. 98	Avg. Novice Ball Saves	Provides the average number of times the Feature "Ball Save" (Freeze) was used to maintain the ball time criteria for a Novice Game.



Audit Note: 1st Way to Reset Audits

To reset audits, from the MAIN MENU, select the "ADJ" Icon. See Chapter 4, Go to Adjustments Menu, of this section.



Select the "SEGA" *Icon*, from the **ADJUSTMENT** MENU, and advance to Adj. 8, Reset Coin Audits, with the "RIGHT ARROW" *Icon*. Select the "+" *Icon* to change setting to YES. When enabled, the *Coin Audits* (5-11) will be reset to zero.

Advance to Adj. 9, Reset Game Audits, with the "RIGHT ARROW" Icon. Select the "+" Icon to change setting to YES. When enabled, all the audits will be reset to zero, except for the Coin Audits (5-11) and Audit 12, Software Meter (the only audit which cannot be reset to zero).



Audit Note: 2nd Way to Reset Audits

To reset audits, from the MAIN MENU, select the "RESET" Icon. See Chapter 5, Go to Reset Menu, of this section.



Selection of the "COIN" Icon, from the RESET MENU, will reset the Coin Audits (5-11) to zero.



Selection of the "AUD" Icon, from the RESET MENU, will reset all audits to zero, except for the Coin Audits (5-11) and Audit 12, Software Meter (the only audit which cannot be reset to zero).



APOLLO 13. GAME ADJUSTMENT TARI E







SEGA ADJUSTMENTS 1-43


SEG	ADJUSTMENTS 1-43	
Nº.	Adjustment Name	Factory Setting
1	REPLAYS: FIXED/MANUAL "Drop-Down"	10%
2	REPLAY LEVELS "Drop-Down"	1
w	REPLAY AWARD	CREDIT
4	FREE GAME LIMIT	5
5	EXTRA BALL LIMIT	3
6	GAME DIFFICULTY "Drop-Down"	MODERATE
7	GAME PRICING "Drop-Down"	USA7
8	RESET COIN AUDITS	NO
9	RESET GAME AUDITS	NO
10	RESET HIGH SCORES	NO
11	MATCH PERCENTAGE	9%
12	BALLS PER GAME	3
13	TILT WARNINGS	1
14	REPLAY BOOST	YES
15	CREDIT LIMIT	30
16	ALLOW HIGH SCORES	YES
17	HIGH SCORE #1 AWARDS	3
18	HIGH SCORE #2 AWARDS	1
19	HIGH SCORE #3 AWARDS	0
20	HIGH SCORE #4 AWARDS	0
21	DEFAULT HIGH SCORE #1	2,400,000
-22	DEFAULT HIGH SCORE #2	2.100,000
23	DEFAULT HIGH SCORE #3	1,950,000
24	DEFAULT HIGH SCORE #4	1,800,000
25	DEFAULT HIGH SCORE #5	1,650,000
26	DEFAULT HIGH SCORE #6	1,500,000
27	HSTD RESET COUNT	2,000
28	FREE PLAY	NO
29	CUSTOM MESSAGE	ON
30	ATTRACT MODE MUSIC	ON
31	FLASH LAMP POWER	NORMAL



Continued

SEGA ADJUSTMENTS 1-43

Nº.	Adjustment Name	Factory Setting
32	COIL PULSE POWER	NORMAL
33	MINIMUM GAME TIME	OFF
34	BUYIN TYPE	OFF
35	EXTRA BALL BUYIN COUNT	1
36	GAME RESTART	YES
37	EXTRA BALL PERCENTAGE	25%
38	BILL VALIDATOR	NO
39	TOURNAMENT MODE	NONE
40	EXT. REPLAY KNOCKER	OFF
41	SPECIAL MEMORY	YES
42	LOCATION ID	00
43	GAME ID	00

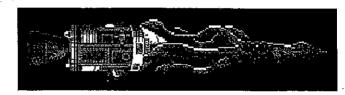



APOLLO 13 ADJUSTMENTS 44-54

Νº	Adjustment Name	Factory Setting
44	MBALL RESTART	MODERATE
45	EXTRA BALL MEMORY	ON
46	MULTIBALL CRITERION	MODERATE
47	ORBIT RULE CRITERION	MODERATE
48	MODE START CRITERION	MODERATE
49	"BLASTOFF" CRITERION	MODERATE
50	SHAKER MOTOR ENABLED	YES
51	MOON ENABLED	YES
52	ROCKET ENABLED	YES
53	8-BALL LOCK ENABLED '	YES
54	NOVICE MODE ENABLED	YES

Section 3 | Adjust.

Go To Adjustments Menu

Overview

The Portals™ Service Menu System provides 54 Adjustment Functions to vary game difficulty or customize (i.e. adjusting High Score Levels, the number of balls per game, Extra Ball Buyin, Game Pricing, Default High Scores, etc.). The Adjustment Functions are split into 2 groups. The first group, Sega Adjustments, are the game play generic adjustments (1-43). The second group, Apollo 13 Adjustments, are the game play specific adjustments (44-54). Each group may be viewed manually after entering the Portals Service Menu (see Chapter 1, latter unit to be seen adjustment Table 1. Introduction, of this section). All adjustments can be viewed at a glance with the Game Adjustment Table provided on the previous page. If a value is changed, the display will indicate REQUEST INSTALLED.



🔞 GO TO ADJUSTMENTS MENU

With the game in the Attract Mode, open the Coin Door and press the Black "BEGIN TEST" Button. Select the "ADJ" Icon in the MAIN MENU with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. The ADJUSTMENTS MENU appears.

Important Notes:



Exit any sub-menu and return to the MAIN MENU by selecting & activating the "PREV" Icons. If no Icons appear in the display because of a testing function or special display (e.g. "Help"), press any button to exit.



Selecting & activating the "QUIT" Icon from any display will exit the Service Session.



Selecting & activating the "HELP" Icon from any display will show a help screen. (An explanation of each Mini-Icon at that level will cycle continuously until any active button is pressed.)



In Adjustments, selecting & activating the "-" Icon decrements the value setting. Selecting & activating the "+" Icon increments the value



Selecting & activating the "ARROW" Icons selects the next or previous adi. in the group.



SEGA ADJUSTMENTS (1-43)

From the ADJUSTMENTS MENU, select the "SEGA" Icon with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. Select and activate the "RIGHT ARROW" Icon to view the 1st adjustment in this group. Continue to select either of the "ARROW" Icons to view each adjustment one at a time. Select either the "-" or "+" Icons to change the value, if desired. The display will describe the adjustment number, the adjustment name, and the adjustment total or value. The current adjustment will remain in the display until the next adjustment is chosen or when the sub-menu is exited.

Adj. №

Adjustment Name

Adjustment Definition

Adj. 1 Replays: Fixed / Manual

Adjust for percentage of awards for Replay Levels (1% through 50%). Lower the automatic value to 0% and the display will indicated Fixed. Replays may be adjusted either for fixed levels or for a systemadjusted manual percentage of replay awards. Four levels may be selected. Adjustments allow awarding of a credit or an extra ball as each level is exceeded. With the manual percentage feature, if the actual replay percentage is higher or lower than that desired, the game computes new recommended manual percentage score(s). When the coin door is subsequently opened the player displays indicate the recommended level and a sound is made to alert the operator of a potential change. This new level is entered into adjustments simply by pressing the Black "ENTER" Button. (If the coin door is closed or the operator enters the Portals™ Service Menu, the replay level is not changed.)

Adj. 2 Relplay Levels Adjust the number of replay levels to be active (1 to 4). Once the number of Replay Levels has been selected, a "Drop-Down" Table appears showing Replay Level 1. Adjust Replay Level 1 between 100M - 9.99B. Adjust Replay Level 2, 3 and/or 4 respectively.



Sega Adjustments Continued.

	Segu Adjustinants Continued						
	Adjustment Name	Adjustment Definition					
Adj. 3	Replay Award	Set for replays to award: CREDIT, EXTRA BALL, NONE or SPECIAL (When score threshold is achieved, a Playfield Special is lit.)					
Adj. 4	Free Game Limit	Adjust the max. # of free games that may be accumulated per game; 0 - 9.					
Adj. 5	Extra Ball Limit	Adjust the max. # of extra balls that may be accumulated per game; 1 - 9 or OFF.					
Adj. 6	Game Difficulty	Set to EXTRA EASY, EASY, MODERATE, HARD or EXTRA HARD. (Note: Additional game features which are not adjusted may also change when adjusting this adjustment; see below table.) Default is MODERATE. Any one of the INSTALL settings (in a "Drop-Down" Table) for this adjustment may be activated to automatically select settings for multiple adjustments affecting game difficulty. Select and activate the "-" or "+" Icons to choose the difficulty level required. After activation, the individual adjustments may be readjusted, if desired. Refer to the Install Adjustment Table below for details.					

Adjustments which Adj. 6 change when set to: Extra Easy EXTRA EASY **EASY** HARD **EXTRA HARD** (44) MBall Restart **EASY** ON ON ON ON OFF (45) Extra Ball Memory **EXTRA HARD EASY** HARD **EXTRA EASY EASY** (46) Multiball Criterion EXTRA HARD **EASY** HARD (47) Orbit Rule Criterion **EXTRA EASY** EASY EASY **EASY** HARD **EXTRA HARD** (48) Mode Start Criterion EXTRA EASY EASY **EASY** HARD **EXTRA HARD** (49) "BLASTOFF" Criterion **EXTRA EASY**

Play Rules: Novelty & 5-Ball, plus Add-A-Ball Settings

The following three combinations are recommended for situations where local laws restrict certain game features regarding the use of replays or the number of balls per game:

			THE STATE OF THE S	and the second supervises that is represented in the second of the second secon	orbin constitute an area to the first of the first
* 100	Novelty Play Rules - Set	to establish re	commended setting	s for no free play or ext	a balls:
Adj.	Adjustment Name	Setting	Adj.	Adjustment Name	Setting
1	Replays: Fixed/Manual	Fixed	 	Extra Ball Limit	00
2	Replay Levels	None	11	Match Percentage	Off
3	Replay Award	None	17	High Score #1 Awards	. 3
4	Free Game Limit	00	18	High Score #2 Awards	, 1
444	Victorial Control of the Control	ara jaran da ja		• •	
		and the second of the second			
11.00		. Conservation and the second	ka erkesi ka sincera , rekekini kandan kanan a re	and the second s	Carlo San
	5-Ball Play Rule	s - Set to esta	blish recommended s	settings for 5-ball play.	
Adj.	Adjustment Name	Setting	Adj.	Adjustment Name	Setting
∴ 1	Replays: Fixed/Manual	07%	5	Extra Ball Limit	3
2	Replay Levels	1		Match Percentage	. 4
3	Replay Award	Credit	12	Balls Per Game	5
4	Free Game Limit	5	17	High Score #1 Awards	· 3
			18	High Score #2 Awards	1
	•				
		*	, .		
	Author Money Commence The		as of challe and sin	vide awards with an ex	ra háile
	Add-A Ball Settings-To c			Adjustment Name	Setting
Adj.	Adjustment Name	Setting	Adj.	,	No
3	Replay Award	Extra Ball	16	Allow High Scores	
4	Free Game Limit	. 00	17-20	High Score #1 - #4 Awards	00
11	Match Percentage	` Off		Avvalus	:



Sega Adjustments Continued.

Adjustment Name a

volus unterna Definition

Adj. 7 Game Pricing

There are two methods available for coin switch programming: Standard & Custom. Standard pricing uses a single adjustment as seen in the first display. See the Standard Pricing Table. If "Custom" is selected, a "Drop-Down" Table appears. Select a pricing scheme shown in the Custom Pricing Table as seen below.

With Adjustment 7 set to CUSTOM operating the Enter Button again initiates a drop down menu representing coin switch pulses for the left, right, center and fourth coin slots. The prescribed the number of pulses are required for one credit. For example, if Left Coin Pulses, was set to 02 and Coin Switch Pulses Required for 1 Credit, to 01 a coin in the left slot would produce two credits. Further, if Left Coin Pulses, was set to 01 and Coin Switch Pulses Required for 1 Credit, to 02, two coins in the left slot would be required for one credit.

Coin Switch Pulses Required for Bonus Credit may be set to post bonus credits when a minimum amount of coins are inserted at one time. For example, if *Left Coin Pulses* was set to 01, *Coin Switch Pulses Required for 1 Credit* to 01 and *Coin Switch Pulses Required for Bonus Credit* to 04, one credit would be posted for each of the first three coins in the left slot and two credits for the fourth coin.

Standard/Custom Pricing - Set for the desired pricing scheme from the Standard Pricing Table as indicated on the dot matrix display. For Custom Pricing, set to **CUSTOM**. When set to **CUSTOM**, the following adjustments are utilized to tailor each individual coin chute.

Left Coin Switch Pulses - Set the number of pulses registered for closure of the left coin switch; 00 to 99.

Right Coin Switch Pulses - Set the number of pulses registered for closure of the right coin switch; 00 to 99.

Center Coin Switch Pulses - Set the number of pulses registered for closure of the center coin switch; 00 to 99.

4th Coin Switch Pulses - Set the number of pulses registered for closure of the fourth coin switch; 00 to 99.

Coin Switch Pulses Required for 1 Credit - Set the number of coin switch pulses required to post one credit; 00 to 99.

Coin Switch Pulses Required for Bonus Credit - Set the number of coin switch pulses required to award the 1st bonus credit(s); 00 to 99.

Coin Switch Pulses Required for 2nd Bonus Credit - Set the number of coin switch pulses required to award the 2nd bonus credit; 00 to 99.

Credits awarded for 1st Bonus - Set the number of credits awarded for achieving the first Bonus level; 00 to 99.

Custom Pricing Table

医		PERMIT				Right Bussey	Mid		Pultes	Pulses /Bonus	EN ALC: A SCHOOL	er tilt Er Bonus
25¢	25¢	\$1.00	N/U	1/25¢ 3/50¢ 1/25¢ 5/\$1.00 1/25¢ 6/\$1.00	01 01 05	01 01 05	04 04 20	00 00 00	01 01 04	02 04 20	00 00 00	01 01 01 01
5 sсн	10 <i>SCH</i>	10 5CH	N/U	1/10 S 1/10 S 4/30 S	01 04	02 08	02 08	00 00	02 06	00 00	00 00	00 00
10p	£1	50p	20p	1/30p 2/50p 5/£1 1/50p 3/£1 1/30p 4/£1	01 01 01	15 15 12	06 05 05	02 02 02	03 05 03	00 00 00	00 00 00	00 00 00
20⊄	\$1.00	N/U	N/U	1/60¢ 2/\$1.00	01	05	00	00	03	05	00	01

Standard Pricing Table

on the next page.

Standard Pricing Table

	Standard Pricing Table							
	Coin: Mechanisms							
Adj.7/Standard	Left	Center	Right	Right		ing Schem		
System 10 System 19 Section 19 Sec	1st Slot	2nd Slot	3rd Slot	4th Slot	Number	or-Plays top P	nce/Amount's	hown -
USA 1	25¢	\$1	25¢		1/25⊄			
USA 2	25¢	\$1	25¢		1/50⊄	2/75¢	3/\$1	
USA 3	25¢	\$1	25¢		1/50⊄			
USA 4	25¢		25¢		1/50¢			
USA 5	25⊄	\$1	2 5¢		1/50¢	5/\$2		ile die
USA 6	25¢	\$1	25¢		1/50¢	2/'4X25¢'	3/\$1(biil)≺	the Bill Validation
USA 7 ★	25¢	\$1	25¢		1/50⊄	4/\$1.50	6/\$2	validator
Austria	5S	105	105		1/105	2/155	3/205	
Australia	20¢	\$A 1	\$A 2		1/\$A 1	2/\$A 2		
Australia 2	20¢	\$A 1	\$A 2	i de la compania del compania de la compania del compania de la compania del compa	1/\$A 1	2/\$A 2		
Belgium	5 BF	20 BF	50 BF		1/20 BF	3/50 BF		
Canada	25¢	25¢	Can\$ 1		1/50⊄	2/75¢	3/Can\$ 1	
Denmark 1	1DKr	5 DKr	10 DKr	20 DKr	1/3 DKr	2/5 DKr		
Denmark 2	1DKr	5 DKr	10 DKr	20 DKr	1/2 DKr	3/5 DKr	7/10 DKr	
Finland	1Fmk	5Fmk			1/5Fmk	4/10Fmk		
France 1 *	1 Fr	5 Fr	10 Fr	20 Fr	1/3 Fr	2/5 Fr	5/10 Fr	11/20 Fr
France 2	1 Fr	5 Fr	10 Fr	20 Fr	1/5 Fr	3/10 Fr	7/20 Fr	
France 3	1 Fr	5 Fr	10 Fr	20 Fr	1/3 Fr	2/5 Fr	4/10 Fr	9/20 Fr
Germany 1	1DM	2DM	5DM		1/1 DM	5/5DM		
Germany 2	1DM	2DM	5DM		1/1 DM	6/5DM		
Germany 3 ★	1DM	2DM	5DM		1/2DM	2/3DM	3/4DM6	6/6DM
Greece	50Dr		100Dr		1/50Dr	3/100Dr		ing of the state
Holland (See Netherlands)			767.17					
Hungary	10 Ft	10 Ft	20 Ft		1/20 Ft	3/40 Ft		
Italy 1	500 Lit		500 Lit		1/500 Lit	Charles Services and Prince		
Italy 2	500 Lit		500 Lit		能	3/2000 Lit		
Japan			100¥		1/100¥	3/200¥		Line Sus
Korea	100Won				X			
Netherlands 1	1 Fls.	1 Fls.	2.5 Fls.		1/1 Fls.	3/2.5 Fls.		
Netherlands 2 ★	1 Fls.	2.5 Fls.	5 Fls.		1/1 Fls.	3/2.5 Fls.	6/5 Fls.	
New Zealand 1	\$NZ 1		\$NZ 2		1/\$NZ 1	2/\$NZ 2		
New Zealand 2	\$NZ 1	DIVERSAL SALES	\$NZ 2		1/\$NZ 1	3/\$NZ 2		
Norway 1	10 NKr	5 NKr	20 NKr		2/10 NKr	1/5 NKr	4/20 NKr	
Norway 2	10 NKr	5 NKr	20 NKr		1/10 NKr	3/20 NKr		
Spain	100Pts		500Pts		1/100Pts	6/500Pts		
Sweden	1 SKr	5 SKr	10 SKr		1/10 SKr	2/15 5Kr	3/20 SKr	
Switzerland 1 ★	1 SwF	2 SwF	5 SwF		1/1 SwF	6/5 SwF		
Switzerland 2	1 SwF	2 SwF	5 SwF		1/1 SwF	3/2 SwF	9/5 SwF	
UK 1	10p	50p	1£	20p	1/50p	3/1£	FX 4 - A ACT S	
UK 2	10p	50p	1£	20p	1/40p	3/1£		
UK 3 *	10p	50p	1£	20p	1/50p			
Yugoslavia	5 Din	30p	5 Din	- 20p	1/5 Din			
rugusiavia				14				
A Default Factory Cottin	相關化學性學問題的計		gave constituted	TOTAL PRESENTATION	Brown Company of the Company	and at the second	4.00% (10.00%) (10.0	

[★] Default Factory Setting



	Sega Adjustments C	o <u>ntinued.</u>
SECO	Adjustment Name	Adjustment Definition 1
Adj. 8	Reset Coin Audits	Default is NO . Select the "+" <i>Icon</i> to change to YES . When enabled, all <i>Coin Audits</i> (Audits 5-11), will be reset to zero.
Adj. 9	Reset Game Audits	Default is NO. Select the "+" <i>Icon</i> to change to YES. A When enabled, all audits will be reset to zero, except for the <i>Coin Audits</i> (Audits 5-11) and Audit 12, Software Meter (the only audit which cannot be reset to zero).
Adj. 10	Reset High Scores	When enabled (set to YES) the High Score Levels and associated initials will be restored to the backup settings when the "+" <i>Icon</i> is selected and activated.
Adj. 11	Match Percentage	Set Match percent from 00% to 10% or OFF. At 00% the match display occurs at the end of the game but never awards a credit.
Adj. 12	Balls Per Game	Adjust the number of balls per game; 2 to 5. Default is 3.
Adj. 13	Tilt Warnings	Adjust the number of plumb bob tilt switch closures before the ball in play is tilted; 1, 2, 3 or OFF.
Adj. 14	Replay Boost	Set to YES or NO. When set to YES, exceeding a replay will set a temporary replay level for each time a replay level is surpassed. This new level will equal the previous replay level (when the replay was awarded) plus 50 Million for each following game, until the replays have all been played. At this time the previous level is resumed.
Adj. 15	Credit Limit	Adjust the maximum number of credits that may be posted; 4 to 50. Default is 30.
mode. T be entere	his provides a High-Score-To-Da	Set to enable (set to YES) or disable the four high score levels by
Adj. 17	High Score #1 Awards	Adjust the number of awards (0 to 4) awarded for exceeding level 1
Adj. 18		(the highest of the four levels).
	High Score #2 Awards	Adjust the number of awards (0 to 3) awarded for exceeding level 2.
Adj. 19	High Score #3 Awards	Adjust the number of awards (0 to 2) awarded for exceeding level 3.
Adj. 20 Adj. 21-26	High Score #4 Awards Default High Score #1 - #6	Adjust the number of awards (0 to 1) awarded for exceeding level 4. Adjust the score level to which the world record, (level 1) (the highest of the four levels) may be altered. This adjustment is not affected by Adj. 27, HSTD Reset Count. Adjust the backup score to which levels 2 - 6 may be reset, respectively.
Adj. 27	HSTD Reset Count	HSTD (High Score To Date). Adjust the number of games between automatic resets of high score levels to backup settings and ball time averager adjustments; 100 to 9,900 or OFF (no reset or adjustment). Default is 2,000.
Adj. 28	Free Play	When set to YES, no coins are required for games.
Adj. 29	Custom Message	Set to ON or OFF. When set to ON, this function is used to establish a custom message periodically displayed during the attract mode. Set the feature to CHANGE selecting the "+" Icon The letter A is indicated in the first position in the display. Vary the letter by operating the left and right flippers. With the desired letter indicated, depress the Start Button to lock in the letter and advance to the next character. Repeat this procedure until the desired message is completed in the display.
Adj. 30	Atrract Mode Music	Set to ON or OFF. When set to ON, attraction music is played between games.

EJH	Adjustment Name	AdjustmentDefinition
Adj. 31	Flash Lamp Power	Set to NORMAL, DIM or OFF. When set to NORMAL the flash lamps are active, when DIM the flash lamps impulse power is reduced by 25% and when OFF the flash lamps will not flash.
Adj. 32	Coil Pulse Power	Set to NORMAL, HARD or SOFT. When HARD the coil pulse power is <i>increased</i> by 12.5% of the normal pulse rate. When set to SOFT the coil pulse power is <i>decreased</i> by 12.5% of the normal pulse rate. These adjustments are provided to compensate for Low Line or High Line voltage conditions where the solenoids appear to kicking too weak or too hard. Adjust as required.
Adj. 33	Minimum Game Time	Default is OFF. Set between 0:01 - 8:59 for minimum game time. If the last ball in play drains prior to what the game time is set for, another ball will be served into the shooter lane and normal play will continue. Subsequent balls will continue to do be served into the shooter lane if the last ball still drains prior to and up until minimum game time is satisfied.
Adj. 34	Buyin Type	Set to Extra Ball Buyin. When set to EXTRA BALL, the game is set to Extra Ball Buyin. When set to FEATURE, the game is set to Game (Feature) Buyin. Set to OFF to make Buyin Type inoperative.
Adj. 35	Extra Ball Buyin Count	1, 0 or UNLIMITED. Default is 1. Allows the operator to adjust the number of Extra Ball Buyins allowed after normal game play. Review Section 2, Chapter 1, Game Operations & Features for details.
Adj. 36	Game Restart	Set to YES or NO. When set to YES, a new game may be started during any ball after the first ball is completed (if credits are available). (Note-Pressing start during the first ball will add additional players.) When set to NO, the game disables the Start Button after the first ball until the final ball is in play. Review Section 2, Chapter 1, Game Operations & Features for details.
Adj. 37	Extra Ball Percentage	Set from 0 to 50. Allows the operator to adjust how frequently the Extra Ball feature is made available to the player.
Adj. 38	Bill Validator	Set to YES or NO. When set to YES, the display, in game attract mode, will show an "Insert Bill Animation". When set to NO, the display, in game attract mode will show "Insert Coin Animation".
Adj. 39	Tournament Mode	Set to NONE, PINBALL EXPO, IFPA-PAPA or HOME. Tournament Mode determines the default conditions to quickly prepare a game for tournament play. When this setting is changed all audits will be reset and all adjustments will be initiated to the particular style selected. The game will then return to game over attract mode, as if a Factory Reset had been performed. NONE - Same as a Factory Reset conditions. IFPA-Straight 50¢ play, no replay, no Extra Ball, no High Scores, 2 Tilt Warnings and No Match. PINBALL EXPO-PAPA-Same as IFPA settings except Free Play is enabled. HOME-Sets game for Free Play, extra ball play, no replay, 10% Match & Extra Ball percent 30%.
Adj. 40	Ext. Replay Knocker	Set to ON or OFF . When set to ON , the operator can enable the knocker in the cabinet to drive an external device without the game giving a replay.
Adj. 41	Special Memory	Set to YES or NO. When set to YES, the lit 'Special' light will be retained in memory from ball to ball for the same player. When set to NO, the lit 'Special' light will go out at the end of each ball.
Adj. 42	Location ID	00 to 9999. Allows the operator to assign a location identification number to the audit print-out sheet. (Will not be affected by Factory Reset.) See Chp. 5, Go to Reset Menu & Chp. 6, Go to Printer Menu, of this section for more details on Factory Reset & Printing.
Adj. 43	Game ID	00 to 9999. Allows the operator to assign a game identification number to the audit print-out sheet. (Will not be affected by Factory Reset.) See Chp. 5, Go to Reset Menu & Chp. 6, Go to Printer Menu, of this section for more details on Factory Reset & Printing.



APOLLO 13 ADJUSTMENTS (44-54)

From the ADJUSTMENTS MENU, select the "A13" Icon with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. Select and activate the "RIGHT ARROW" Icon to view the 1st adjustment in this group. Continue to select either of the "ARROW" Icons to view each adjustment one at a time. Select either the "-" or "+" Icons to change the value, if desired. The display will describe the adjustment number, the adjustment name, and the adjustment total or value. The current adjustment will remain in the display until the next adjustment is chosen or when the sub-menu is exited.

Adj Ni	Adjustment Names	Adjustment Definition
Adj. 44	MBall Restart	Set to EXEASY, EASY, MODERATE, HARD or EXHARD. Default is EASY. Determines how Multiball can restart.
Adj. 45	Extra Ball Memory	Set to ON or OFF. Default is ON. When set to ON, the lit 'Extra Ball' light will be retained in memory from ball to ball for the same player. When set to OFF, the lit 'Extra Ball' light will go out at the end of each ball.
Adj. 46	Multiball Criterion	Set to EXEASY, EASY, MODERATE, HARD or EXHARD. Default is MODERATE. Determines how Multiball is started.
Adj. 47	Orbit Rule Criterion	Set to EXEASY, EASY, MODERATE, HARD or EXHARD. Default is MODERATE. Determines how the Orbit Features are played.
Adj. 48	Mode Start Criterion	Set to EXEASY, EASY, MODERATE, HARD or EXHARD. Default is MODERATE. Determines how the different modes are played.
Adj. 49	"BLASTOFF" Criterion	Set to EXEASY, EASY, MODERATE, HARD or EXHARD. Default is MODERATE. Determines how the BLASTOFF features are played.
Adj. 50	Shaker Motor Enabled	Set to YES or NO. Default is Yes. When set to YES, the Shaker Motor will vibrate as required. When set to NO, it won't,
Adj. 51	Moon Enabled	Set to YES or NO. Default is Yes. When set to YES, the Moon & Magnet will operate as required. When set to NO, it won't.
Adj. 52	Rocket Enabled	Set to YES or NO. Default is Yes. When set to YES, the Rocket will operate as required. When set to NO, it won't.
Adj. 53	8-Bail Lock Enabled	Set to YES or NO. Default is Yes. When set to YES, the 8-Ball Lock Plunger will operate as required, allowing 13 Ball Play. When set to NO, it won't.
Adj. 54	Novice Mode Enabled	Set to YES or NO. Default is Yes. When set to YES, before game play, the player can choose Novice Play (a 1-Ball Game with a guaranteed play time). When set to NO, this feature is turned off, and defaults to Regular Game Play.



Custom Pricing

To go directly to Adjustment 7, Game Pricing, from the ADJUSTMENT MENU, select the "CUST" Icon either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. See details of this adjustment (Adj. 7) earlier in this chapter.



Film Star Reset

To reset the game with special settings (not the normal Factory Setting), from the ADJUSTMENT MENU, select the "STAR" *Icon* either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. This setting is determined to be ideal for the home environment. See Chapter 5, Go to Reset Menu, of this section, to change to factory defaults if changes made are not desired.



Adjustment Note: Resetting Adjustments

To reset adjustments, from the MAIN MENU select the "RESET" Icon. See Chapter 5, Go to Reset Menu, of this section.



Selection of the "FACT" *Icon*, from the **RESET MENU**, will reset all adjustments to the *Factory Settings* (except for Proprietary Adjustments). The display will return to the **Attract Mode**. To perform any other functions, the system must be entered again by pressing the **Black** "BEGIN TEST" Button on the coin door (see Chapter 1, Introduction, of this section).



Adjustment Note: Printing Game Information

To print audits, from the MAIN MENU select the "PRNT" Icon. See Chapter 6, Go to Printer Menu, of this section (special equipment required).



Selection of the "QUIK" Icon, from the PRINTER MENU, will start a quick print.

Selection of the "ALISON" Icon, from the **PRINTER MENU**, will start a Full Printout (Downloads to a PC).



Selection of the "RESET" lcon, from the **PRINTER MENU**, will reset the total N^p of copies value to zero.

Your Notes	· · · · · · · · · · · · · · · · · · ·

Go To Reset Menu

Overview

The Portals™ Service Menu System provides three (3) functions to reset adjustments and/or audits back to the Factory Setting. See Chapter 3, Go to Audits Menu, and Chapter 4, Go to Adjustments Menu, for the Game Audits & Adjustments Information. If a Factory Reset is performed, the Service Session is exited and returns to the Attract Mode. If reset of Coin or Game Audits is performed, the display will indicate REQUEST INSTALLED and return to the RESET MENU. Please note that once reset, all customized settings are lost! Certain audits and adjustments however cannot be reset (refer to the details below).



GO TO RESET MENU

With the game in the Attract Mode, open the Coin Door and press the Black "BEGIN TEST" Button. Select the "RESET" Icon in the MAIN MENU with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. The RESET MENU appears.

Important Notes:



Exit any sub-menu and return to the MAIN MENU by selecting & activating the "PREV" Icon.



Selecting & activating the "QUIT" Icon from the display will exit the Service Session.



Selecting & activating the "HELP" Icon from the display will show a help screen. (An explanation of each Mini-Icon at that level will cycle continuously until any active button is pressed.)



FACTORY RESET

From the RESET MENU, select the "FACT" Icon with either Red or Green Button and press the Black All adjustments will be reset to Factory Settings (except for Proprietary Adjustments). The display will indicate REQUEST INSTALLED and exit the Service Session. See Chapter 4. Go to Adjustments Menu, of this section, for the Factory Settings in the Game Adjustment Table.



RESET COIN AUDITS

From the RESET MENU, select the "COIN" Icon with either Red or Green Button and press the Black All Coin Audits (See Fig. 1) will be reset to Factory Settings. The display will indicate REQUEST INSTALLED and return to the RESET MENU. Coin Audits can also be reset from the ADJUSTMENTS MENU, SEGA ADJUSTMENT 8. See Chapter 4, Go to Adjustments Menu, of this section. After selecting this Icon, all of the Coin Audits (5-11) are reset to zero.

RESET GAME AUDITS

From the RESET MENU, select the "AUD" Icon with either Red or Green Button and press the Black Button.

A All Game Audits (See Fig. 2) will be reset to Factory Settings. The display will indicate REQUEST INSTALLED and return to the RESET MENU. Game Audits can also be reset from the ADJUSTMENTS MENU, SEGA ADJUSTMENT 9. See Chapter 4, Go to Adjustments Menu, of this section. After selecting this Icon, all of the Audits are reset to zero, except for the Coin Audits (Audits 5-11)

and Audit 12, Software Meter. Audit 12 is the only audit which cannot be reset.

Fig. 1


Reset Coin Audits								
Earn	Earnings Audits (Coin Audits Grily 5-11)							
Au. № Description								
	Mine thirty Paroli san the comie							
5	Coins Thru Left Slot							
6	Coins Thru Right Slot							
7	Coins Thru Center Slot							
8 Coins Thru 4th Slot								
9	Total Coins							
10	Total Earnings							
11 Meter Clicks								
15 12 m	Sonware Meter, 1							
410.4	Theiremainder of the Audits							

Fig. 2

	is (1-4), Generio Specific Audits (13+)
Au. Nº	Description
1-4	The first 4 Audits in the game.
	(Comissimarization) and the company
	Come that makes line 2 least
7/	Comstitute on taps loss at 1992.
	County that Attas (New York)
	nioval (central de la
2004	condition make the same of the
-01	iMeterchés : 49 4 9 4 4
	Somwane Material Programme
13 +	The remainder of the Audits.

• Reset Game Audits

Press the Black Button to activate this ICON. This will bring up the RESET MENU.

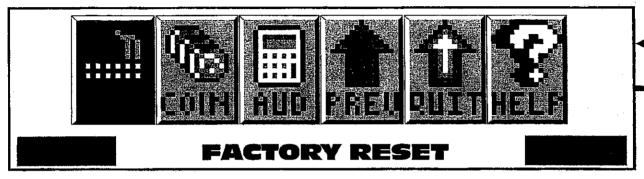

The RESET MENU now appears with the "FACT" Icon (FACTORY RESET) flashing:

CAUTION: IF CUSTOMIZED SETTINGS ARE MADE TO THE GAME, DO NOT PRESS THE START BUTTON OR THESE SETTINGS WILL BE LOST!

Press the Black Button to activate this icon. This will reset all adjustments back to Factory Settings.

REQUEST INSTALLED

The REQUEST INSTALLED now appears momentarily and the Service Session is automatically exited with the display returning to the ATTRACT MODE.

If the "COIN" or "AUD" Icons are chosen and activated, the affected audits (see previous page) will be reset, the display will indicate REQUEST INSTALLED and return to the RESET MENU.

Overview

(3)

SPECIAL EQUIPMENT IS REQUIRED FOR THIS MENU

The Portals[™] Service Menu System provides 3 Adjustment Functions to print information on a "Hand-Held" printer, download game information to a Laptop PC or clear the printout count. A printer interface board, hand-held printer and/or a special software program is required to run this menu. Entering this menu and selection/activation of the Icons without this equipment/software will not affect the game.



GO TO PRINTER MENU

With the game in the Attract Mode, open the Coin Door and press the Black "BEGIN TEST" Button. Select the "PRNT" Icon in the MAIN MENU with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. The PRINTER MENU appears.

Important Notes:



Exit any sub-menu and return to the MAIN MENU by selecting & activating the "PREV" Icons. If no Icons appear in the display because of a testing function or special display (e.g. "Help"), press any button to exit.



Selecting & activating the "QUIT" Icon from any display will exit the Service Session.



Selecting & activating the "HELP" Icon from any display will show a help screen. (An explanation of each Mini-Icon at that level will cycle continuously until any active button is pressed.)



In printer adjustments, selecting & activating the "-" or "+" Icons is necessary to start a printout or download.



Selecting & activating the "ARROW" Icons selects the next /previous lcon in the sub-menu.



QUICK PRINTOUT ADJUSTMENT (55) (Printer Interface)

From the PRINTER MENU, select the "QUIK" Icon with either Red or Green Button and press the Black Button. Select the "+" Icon and press the Black Button to start the printout. Only the Earnings Audits can be printed out to a "Hand-Held" Printer.



FULL PRINTOUT ADJUSTMENT (56) (Alison Interface)

From the PRINTER MENU, select the "ALISON" Icon with either Red or Green Button and press the Black Button. Select the "+" Icon and press the Black Button to start the download. A special software program and a Lap Top PC is required. All game audits (Earnings, Sega & Game Specific) can be retrieved.



Nº OF COPIES PRINTED ADJUSTMENT (57)

From the PRINTER MENU, select the "RESET" Icon with either Red or Green Button and press the Black Button. Select the "+" Icon and press the Black Button to start the clear the "Nº of copies printed" count total.



PORTALS™ SERVICE MENU PROBLEM/SOLUTION TABLE



Use this table for a quick simple solution(s) guide. For more technical assistance view Section 6.

PROBLEM	SOLUTION
Will not enter the Service Mode after depressing the Black "BEGIN TEST" Button.	 Check the Service Switch(es) for loose connections or bad Ground. Check the assoicated wiring harness to/from the CPU Board Connector CN14. Check CPU Board, possibly failed.
Service Buttons (Green and Black) are nonfunctional.	Check the Service Switches for poor connections or broken wires.
The display blanks out.	 Check the Dot Matrix Display for loose wiring harness connections. Check Bridge Rectifier 3 & 8 Amp Slo Blo Fuse. Refer to the Game Manual.
Icons "scroll" along continuously in the MAIN MENU.	If the Service Switch Set and/or the Coin Door was replaced, ensure the Locking Mechanism on the Green Button is removed. If the Green Button "clicks" and locks into an up/down position, the Green Button has this lock switch. Remove it. (Ref. to Service Bulletin #74.)
The Start and Flipper Buttons do not select or activate <i>Icons</i> in the SWITCH TEST MENU.	 This is normal. These switches are deactivated, as they are a part of the Switch Test. Use the Red "LEFT" or Green "RIGHT" & Black "ENTER" Buttons in this Sub-Menu (See Chapter 1).
Some <i>Icons</i> appear non-functional in the PRINTER MENU(S) .	• If no printing equipment is connected, the "_" Icon, "+" Icon and "RUN" Icon will appear not to function (See Chapter 5).
Some Icons appear non-functional in the GAME SPECIFIC MENU under the DIAGNOSTICS MENU.	• If there is no other test under this Menu, the "Left Arrow" & "Right Arrow" Icons will appear not to function. The remaining Icons should function as normal. Note: If there is no Game Specific Special Test, the "GAME SPECIFIC" Icon will not invoke another display.
The display returns to the ATTRACT MODE exiting the Service Session from the FACTORY RESET MENU.	This is normal. After a FACTORY RESET, the Service Session is automatically exited (See Chapter 4).
In COIL TEST MENU, the coils and flashlamps do not fire after activating the "RUN" <i>lcon</i> .	Ensure the POWER INTERLOCK SWITCH (See figure on front inside cover) is pulled out.
Can't move selection of <i>lcon</i> with the Left and/or Right Flipper Buttons.	Check the Flipper Buttons for loose connections or bad Ground and refer to the Game Manual Flipper Troubleshooting Flowchart.
In Portals™ Service Menu , the volume cannot be adjusted with the Red or Green Buttons.	The Volume adjustment can only be made when the Service Menu is exited. The Volume Mode is entered by pressing the Red "VOLUME" Button. Then use the Red or Green Button to increase/ decrease volume. (Red "LEFT" decrements; Green "RIGHT" increments.)

Go To Help Screen

Overview

The Portals™ Service Menu System provides help screens in each display (except if the display is in a testing mode). Each screen is basic and some terms may vary. At the beginning of each chapter in this section, Icons are shown and described to give detail of the particular function of the individual Icons. The table on the previous page was designed to help answer some questions of situations which may arise.



GO TO HELP SCREEN

With the game in the Attract Mode, open the Coin Door and press the Black "BEGIN TEST" Button. Select the "HELP" Icon in the MAIN MENU with either Red "LEFT" or Green "RIGHT" Button and press the Black "ENTER" Button. The HELP SCREEN appears cycling through the different icon usages pertinent to that menu level.

MENU HELP SCREEN **USE THE RED OR GREEN BUTTONS** TO CHANGE THE SELECTED ICON. PRESS THE BLACK BUTTON TO CTIVATE THE SELECTED ICON THE FLIPPER & START BUTTONS FUNCTION IN THE SAME WAY.

Important Notes:



Exit any sub-menu and return to the MAIN MENU by selecting & activating the "PREV" Icons. If no Icons appear in the display because of a testing function or special display (e.g. "Help"), press any button to exit.



Selecting & activating the "QUIT" Icon from any display will exit the Service Session.



Selecting & activating the "HELP" Icon from any display will show a help screen. (An explanation of each Mini-Icon at that level will cycle continuously until any active button is pressed.)







Refer to the beginning of each chapter in this section for the function they serve in that menu or select the "HELP" Icons in the display where the Icon in question is being used.

depending in what sub-menu they are used.

These "Mini-Icons" vary in functionality

DRAW

Review Chapter 1, Introduction, on how to enter the Portals™ Service Menu. The chapter outlines the entire Portals™ Service Menu. View the Icon Tree in this manual which describes the names and menu descriptions of each Icon. View the display, after selecting and activating either of the "HELP" or "?" Icons.

Review Chapter 2, Go to Diagnostics Menu, to find all the tests needed to troubleshooting the game.

Review Chapter 3, Go to Audits Menu, and Chapter 4, Go to Adjustments Menu, to gather play information and to customize the game to vary difficulty of play or to change functions of the game.

Review Chapter 5, Go to Reset Menu, to reset audits and adjustments to Factory Settings.

Review Chapter 6, Go to Printer Menu, to start downloading or printing functions. Special equipment is required for this function.

This concludes the Portals™ Service Menu. Review the Table of Contents at the beginning of this manual, and the detailed Table of Contents for Section 3 to quickly find the information required. The remainder of the sections in this manual will cover all the parts in this game and provide helpful information to aide in troubleshooting. If questions still arise after reading this section completely, call our Technical Support Department.

Section 3 | Help


Your Help Notes:

Parts Identification & Location (The Pink Pages)


Overview

This section provides the part numbers and locations of the elements in the pinball game. The parts are arranged in basically four groups: Backbox, Cabinet, Atop Playfield, Below Playfield. (Some parts may be considered both aboue & below the playfield. The part will be grouped where it is predominant. Generic parts which may change as production continues (quantity and/or size) are listed together. The quantity indicates if that part is used in this game. Since quantity changes may occur, an item indicating "Ø" may be used. Compare the item which needs to be replaced with the drawings provided. The posts, sockets, bulbs and rubber rings are drawn actual size. Some parts which are complex (made up of numerous parts) will be noted in detail in Chapter 2, Assembly Drawings.

Section 4, Chapter 1 Table of Contents

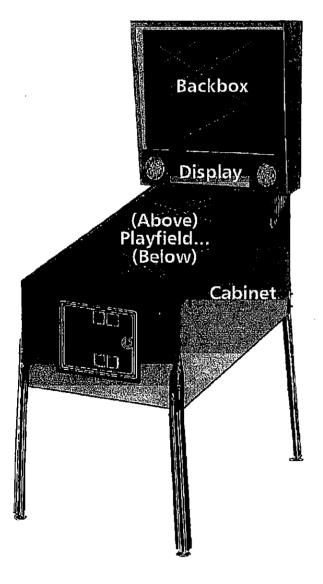


Backbox General Parts
Cabinet
General Parts55
Above Playfield
Major Assemblies56
Kamps 57
Rails & Ball Guides 58
Butyrate, Decals & Mylar 59
General Parts 60
Rubber Parts (Actual Size)61
Metal Posts & Spacers (Actual Size)
Plastic Posts & Spacers (Actual Size)
Bayonet Type Bulbs & Sockets (Actual Size) 66-67
Below Playfield
Wedge Base Bulbs & Sockets (Actual Size)

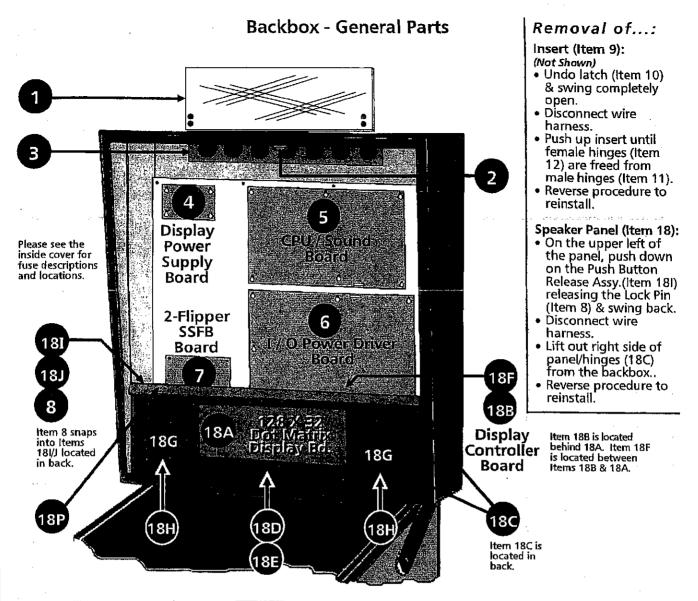


.∭ō.,	Part Name	SPI Part Nº	Nº	Part Name	SPI Part Nº
1	Apollo 13 Backbox Header	515-6468-19-44	18	Apollo 13 Speaker Panel Assembly	500-5995-00-44
2	Back Box Lock	355-5008-00	ORDE	ing aboventemator assembly parting	
3	7-Vent Hole Grill 21/2" x 18"	545-5072-02	A B	128 X 32 Dot Matrix Display Ed 1	520-5052-00
4	Display Power Supply Board (New) †	520-5138-00	Č	Panel Hinge (Female) (Oty. 2)	5205055-01 390-5026-00
5	CPU / Sound (2 X 4MB) Board (New) †	520-5136-02	Ď	Speaker Panel (Hinged)	525-5965:03
6	I / O Power Driver Board (New) †	520-5137-00	₹ F	Apollo 13 Speaker Plexi w/Artwork Static Shield	880-5647-01- 535-6437-00-
7_	2-Flipper SSFB Board (New Location)	520-5080-00	G	Speakers 4X4 Quam 89-9572 (Qfy-2)	031-5004-00
8	Lock Pin / Lock Pin Bracket Assy. (New)	500-5916-01	H	Apollo 13 Speaker Grill w/Artwork (Oft, 2) Push Button Release Assembly (New)	830-5648-00 515-6481-00
*ORDE	IINIGABOVECHTEVES) (ASSEMBLYAPARTENE)	WILLEINGLÜDES SES		Push Button Release Bracket (New)	535 7582 00
	Tock Pin Lock Pin Bracket 3/8 = 24 Jam Nut (Oty, 2)	530-5397-00 535-7564-00 240-5319-00	K*	3/16" X 1/4" Self Adhesive Foam 2 6 Feet Ground Straps X XX (replace 500 with the inches required (seg. a. = 504" atc.)	600-5006-XX
9*	Apollo 13 Lights Insert Assembly *	505-6003-44-44	N *	3 Lug Stand-Up Long Socket (Of): 8): #44 Bulb (Oty: 8)	077-5009-00 165-5000-44
10 *	Lights Insert Slide Latch Special (New) *	535-7554-00	0.*	Sq. Light Covers: (See Color Chart at end of	550-5019 XX
11 *	Lights Insert Hinge Male (Qty. 2) *	390-5014-01	, p	Sec. 4, Chp. 2 & replace the SXX w/the number) Top Channel Glass Retainer	545-5452-02
12 *	Lights Insert Hinge Female (Qty. 2) *	390-5014-00	19 *	Ribbon Cable, 14-Pin * (Display Controller Bd. to Dot Matrix Display Bd.)	
13 *	Backglass Clear 261/2" x 193/4" *	660-5018-00	19	Controller Bd. to Dot Matrix Display Bd.)	036-5260-00
14 *	Apollo 13 Backglass Artwork *	830-5244-00	20 *	Ribbon Cable, 20-Pin * (CPU/Sound Bd. to I/O Power Driver Board)	036-5000-04
15 *	26-7/16" Plastic Extrusion *	545-5018-08	21 *	Ribbon Cable, 26-Pin * (CPU/Sound Bd. to Display Controller Board)	026 5001 62
16 *	18-3/4" Plastic Extrusion * (Qty. 2)	545-5018-09			036-5001-00
17 *	Glass Channel 26-7/16" *	545-5021-02	22.*	Fuse Description Decal	820-6152-44
An asterisk (*) indicates items are not noted in the above pictorial.			† Note 1: When ordering PC Boards with ROMS, please specify the Game. †† Note 2: Indicate Manufacturer.		

Cabinet - General Parts

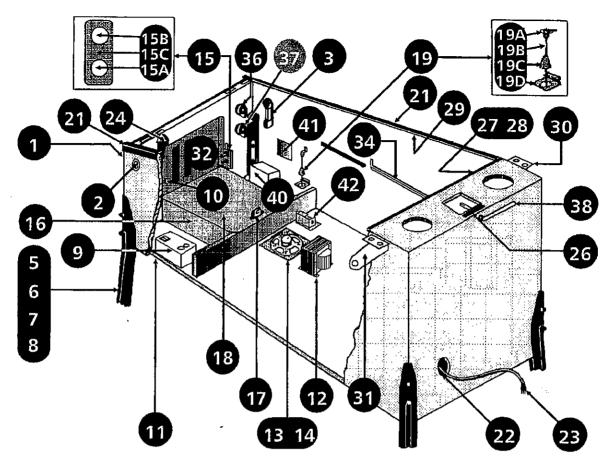


Nº	Part Name	SPI/Part №	Nο	Part Name	SPEPart N
1	Ball Launch Assy. (See Sec. 4, Chp. 2)	500-6046-00-44	20 *	Playfield Glass (T.P.) 21" x 43" *	660-5001-00
2	Flipper Button Assembly Red (Qty. 2)	500-5026-32	21	Side Armor - Left & Right	535-7297-00
3	Flipper Power Switch, Left	180-5122-00	22 .	Recessed Cup for Line Cord	545-5122-00
4 *	Flipper Power Switch, Right *	180-5122-00	23	Line Cord 10' ROJ 3" Maximum	034-5000-10
5_	Leg (Black) (Qty. 4)	535-5020-50	24	Front Molding Lockdown Assembly	500-5020-01
6	Leg Bolt 3/8"-16 x 2-1/2" Hex 5/8" Hd. (Qty. 8)	231-5001-01	25 *	Front Molding - Black *	500-5757-01-00
7	Leg Bolt Back Plate (Qty. 4)	535-5703-00	26	#1 Roto Lock Male, (Female -02) *	355-5006-01
8	Leg Leveler 3/8" - 16 X 3" (Qty. 4)	500-5017-00	27	Rear Plastic Ext. Playfield Glass 20-3/8"	545-5038-00
9	Service Outlet	180-5008-01	28	Mounting Foam Rubber for Ext.	626-5001-00
10	Service Switch Set (RED, GRN, BLK Buttons)	180-5012-03	_29	Plastic Channel Left & Right	545-5017-00
11	Power Sw. DPST Toggle (Under Cab.)	<u>180-5001-00</u>	30	Backbox Hinge Left	515-5987-00
_12	Transformer	010-5011-00	31	Backbox Hinge Right	515-5987-01
13	Speaker - Round - 8" ø	031-5005-00	32	Coin Door (with Validator) USA only	500-5018-171
14	Speaker Grill 7" x 7"	535-6830-00	33 *	Slide & Pivot Support Bracket Right *	535-5989-00
15	Dual Switch Assembly	500-5808-00	34	Slide & Pivot Support Bracket Left	535-5990-00
	INGVAEGVE (HEMINE) PEGEMBE AP ZETENI		35 *	Playfield Support Bar (Stay Arm) *	535-5019-00
	Membry Protect Switch Unterlock Switch	180-5000-00 180-5136-00	36	Start Button Switch Assembly	500-5728-07
	Brackeroge	535-6958-00	3	Enra Ballinnin ventue Britani (Nontked)	
_16	Cash Box Plastic Bottom	545-5090-00	38	5/16" Hex Key Allen Wrench	777-0001-00
17	Cash Box Lock Bracket (wire)	535-7562-00	39 *	Switch / Lamp / Coil Matrix Information *	820-6104-44
18	Cash Box Cover (Validator)	535-5013-03	40	Shaker Motor	515-5893-00
19	Plumb Bob Tilt Assembly	500-5023-00	41	Shaker Motor P.C. Board	520-5065-00
200 Sec 25 47 47 47 47 47 47 47 47 47 47 47 47 47	ang abomentemeng pasabmeny partent	Advisor design to the first of the second se	42	Knocker Assy. (See Section 4, Chapter 2)	500-5081-00
194	Hanger Bracket (fill)	535-5221-00			
The C	Hanger Wire (Tilt) (Attached to (19A1) Plumb Bob (Tilt) (Attached to (19B1)	535-5319-00 535-5029-00			
19D	Contact/Bracket/Tilt)	535-5220-00	An ast	erisk (*) indicates items are not noted in th	e above pictorial.

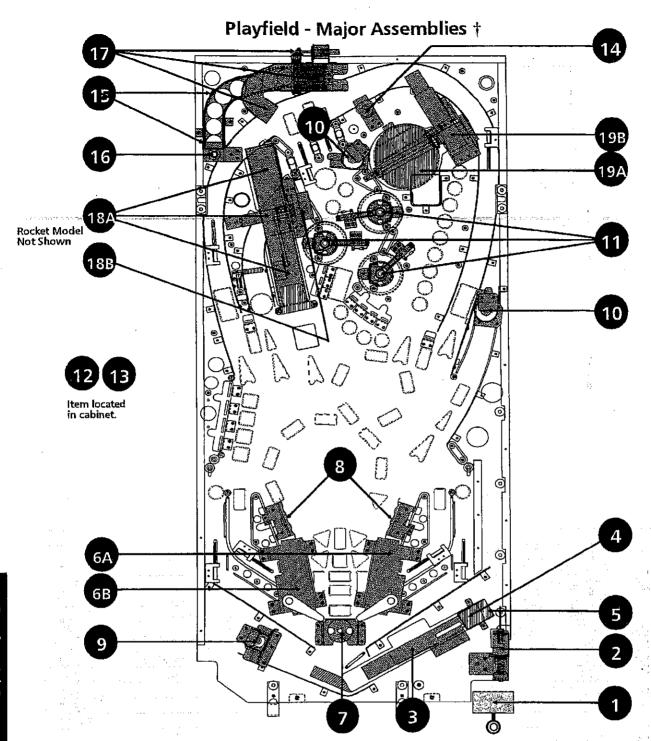



%19 8	Assembly Name	PG.†	Part Nº	No.			Part N2
1 *	Abort Handle (Ball Launch) Assy. *	pg 70	500-6046-00-44	11	Turbo Bumper Assemblies (Qty. 3)	pg 75	See Sec. 4, Chp. 2
2	Auto Ball Launch Assembly	pg 70	500-5969-01-44	12 *	Shaker Motor *	pg 76	515-5893-00
3	5-Ball Trough Assembly	pg 71	500-5965-15-44	13 *	Knocker Assembly *	pg 76	500-5081-00
4	Lock Ball Assembly	pg 71	500-5684-01	14	Up-Down Ramp Plunger Assy.	pg 77	500-6044-00-44
5	Ball Trough Enter/Exit Scoop Assy.	pg 71	533-7329-01	15	8-Ball Lock Trough Assembly	pg 78	500-6025-00-44
6A	Flipper Assembly, Lower Right	pg 72	500-5944-02	16	8-Ball Lock Plunger Assembly	pg 78	500-5867-01-44
6B	Flipper Assembly, Lower Left	pg 72	500-5944-12	17	Upper Trough/Trap Door Assy.	pg 79	500-6031-00-44
7	Up-Down Bumper Post Assembly	pg 73	500-6023-00-44	18A	Rocket Ramp Assembly	pg 80	500-6020-00-44
8	Slingshot Assemblies (Qty. 2)	pg 73	500-5849-01	18B	Motor, Bracket & Cam Sup-Assy.	pg 81	515-6414-00
9	Super VUK Assy. (Under Arch)	pg 74	500-5880-00-44	19A	Moon Unit Assembly	pg 82	500-6021-00-44
10	Regular VUK Assys. (Qty. 2)	pg 74	500-5839-02-44	19B	Motor, Bracket & Cam Sub-Assy.	pg 83	515-6407-00

† See Section 4. Chapter 2, Assembly Drawings (with indicated page #) to identify the components of each assembly above. An asterisk (*) indicates items are either in /on the cabinet.

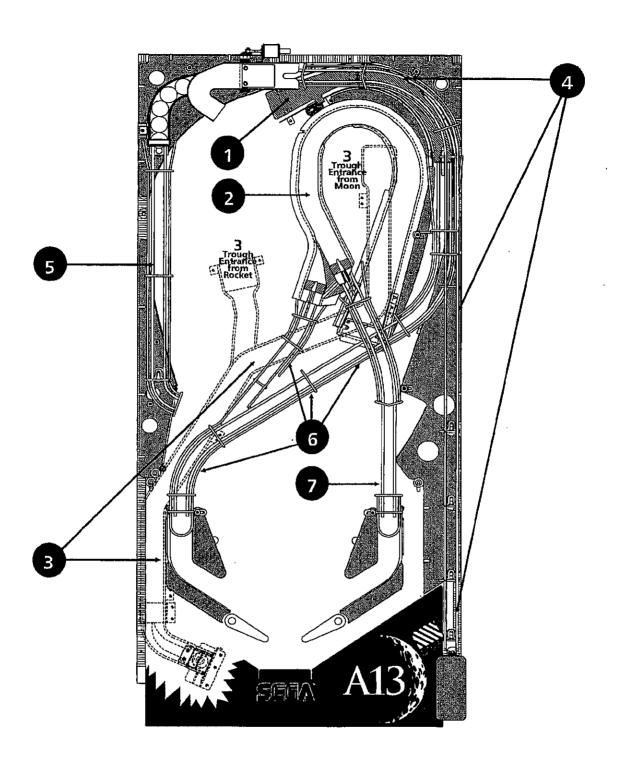

*N9	Plastic/steel Ramp Name	PG.+	Part Nº	N₽	Wire Ramp Name	PG	Part Nº
1_1_	Up/Down Metal Ramp Assembly		500-6042-00-44		Shooter Lane Wire Ramp		515-6419-00-44
2	Plastic Ramp Assembly	pg 84	500-6027-00-44	5	8-Ball Trough Exit Wire Ramp	n/a	515-6388-00-44
<u>3</u>	Plastic Under Trough Assembly	n/a	545-5637-00-44	6	Dual Exit to Lt. Return Wire Ramp		515-6460-00-44
† See	Section 4, Chapter 2, Assembly Dra	wings,	for breakdowns.	_ 7	Exit to Right Return Wire Ramp		515-6386-00-44

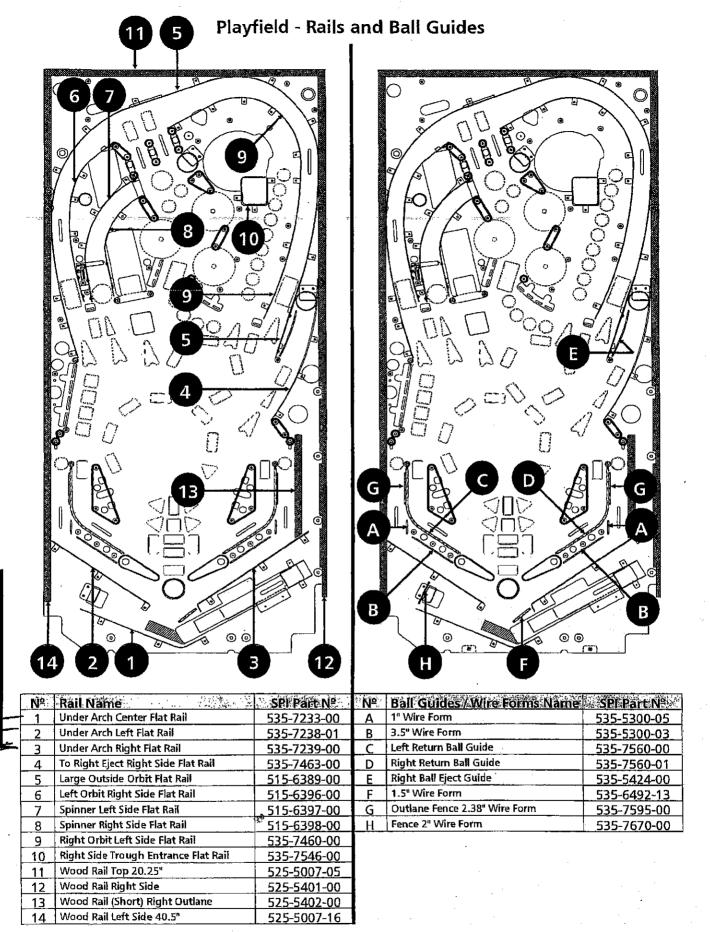

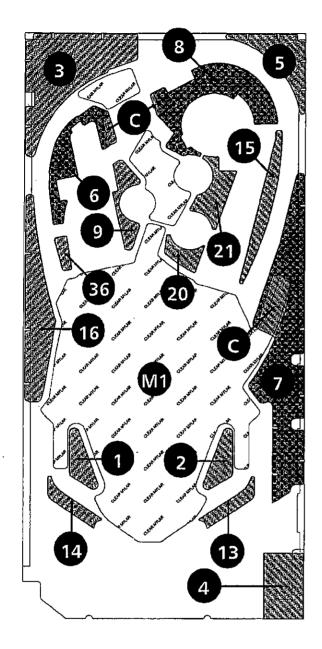

Νº	Screened Butyrate Name	SPI Part Nº
	Butyrate Sheet Screened (1-40)	830-5484-XX
1	LEFT SLINGSHOT	_830-5484-01
2	RIGHT SLING SHOT	830-5484-01
3	TOP LEFT CORNER (LOWER)	830-5484-02 830-5484-03
4	AUTOLAUNCH COVER	830-5484-04
5	TOP RIGHT CORNER (LOWER)	830-5484-05
6	MIDDLE LEFT CORNER (LOWER)	830-5484-06
7	SHOOTER LANE (LOWER)	830-5484-07
8	UNDER PLASTIC RAMP	830-5484-08
9	LEFT POP (LOWER)	830-5484-09
10*	SHOOTER LANE (UPPER) (Part of, 07)	830-5484-109
1100	CABINETEACK	8310-524841-141
12 *	BACKPANEL	830-548473
13	RIGHT RETURN LANE (LOWER)	830-5484-13
14	LEFT RETURN LANE (LOWER)	830-5484-14
_15	RIGHT PLASTIC RAMP	830-5484-15
16	MIDDLE LEFT SIDE (LOWER)	830-5484-16
17.3	RIGHT RAMP ENTER SIGN	830-5484-176
18 *	UPPERVEVEL (Part of -36)	880 5484 18
19.*	BACKBOX HEADER SIGN	830:5484-19
20	MIDDLE POP	830-5484-20
21	RIGHT POP (LOWER)	830-5484-21
	BACKPANEL	880 5484 22
	KEYCHAIN	830=5484=23=
	KEYCHAIN	830-5484-24
	KEYCHAIN	830-5484-25
26*	REPURNICANE (UPPER) (Part of 18)	830,5484526
Laborated distant	LT RETURN PANE (UPPER) (Pair of 1 4)	830-548492/
28 *	TOP:RIGHT:CORNER (UPRER) (Part of 05)	830-5484-28
	MID LEET, CORNER (UPPER), (Part of -06)	830-5484-29
		830-5484-30
31.	MIDDLE(LEST SIDE (UPPER) (Part of -16) *	880-5484-31
	LEFTSROP (UPPER) (Part of 21)	880:5484432
	TOP, LEFT (CORNER (UPPER) (Part 51-03)	1830-5484-33
34*	TOP LEFT CORNER (UPPER) (Partion 08)	- 830-54 8 4-34
	SIGN (Part of -07)	830-5484-35
36	MIDDLE LEFT BOTTOM	830-5484-36
37.*	SIGN AROUND MOON (Part of -08)	
		830 5484 38
	IRT PLASTIC RAMP (UPPER): (Part of 515)	830-5484-40
The fo	llowing last 2-digits were not used on 830	-5484-XX: -39

Nº	Decal Name V2 1935	SPI Pärting	Ŋ₽	Clear Butyrate Name
	Complete Decal Sheel for Playfield	820-6136-XX	_c	Butyrate Sheet Clear (See note 3.)
0.00	ment decabore (302% install 5 Palls; 03 in one per exit Sieven (Danies Edians) (2020) is	THE REPORT OF THE PERSON OF TH	the r	sterisk (*) indicates items are not noted in note on where the piece(s) is located.
2137Q	fan ten en Doardi Righte di Aran center. Me 195 tress do Winolou (III e. 17-20)	Britals Services	3.Indiv	ridual Clear Butyrate cannot be ordered. Ti
SELEK	(See (Redsisteer) van die Black Bultons (van 1872) Ekstern (Europe van 1882)	A CORREMOVE	4. To o	t be purchased if replacement is required. rder individual replacement screened butyr

N ₅	Mylar Name	SPI Part Nº
M1	Mylar Sheet Complete (3 pieces)	820-5858-XX

Butyrate Sheet Clear (See note 3.) 830-5484-X1

1. An asterisk (*) indicates items are not noted in pictorial; see the note on where the piece(s) is located.
2. For entire butyrate sheet order part number with -XX.
3. Individual Clear Butyrate cannot be ordered. The entire sheet must be purchased if replacement is required. Order 830-5484-X1 4.To order individual replacement screened butyrate, replace the "-XX" with the correct 2-digit ending as noted in the table. (The last 2-digits of the part number is screened on each piece.)

Playfield - General Parts


		inglicia i	_
#Nº	Above Plavijeki PandName	SPIP part NP	
1	Bottom Arch Assembly (Metal)	500-6017-00-44	4
OPE	angyako visade manyay sambar pari ang	MINISTER CONTROL	
	Pattom Ar N/Plain	535,7294-01 232,5000-00	4
	#6 X 3/81/PPH (Qhy 2) #8 Washer (Qhy 2)	2325000-00 242-5005-00	\$
With the state of	#8-52X53/85EIWHAI ERDEORM (Oty 2)	297-5967-00	10
2 *	11/ ₁₆ " Steel Balls (Qty. 13) *	260-5000-00	_
_3	Pop Bumper Cap Clear (Qty. 3)	550-5057-01	_
4_	Jump Bumper Cap Red	545-5199-02	_
5	Right Flipper & Shaft Assy. White with Sonic the Hedgehog™ Logo	515-5133-01-0	3
6	Left Flipper & Shaft Assembly White with Sonic the Hedgehog™ Logo	515-5133-01-0	4
7A	1-Way Gate Mounting Bracket	535-5296-03	
7B	1-Way Gate Wire	535-5307-03	_
8	Spinner Assembly	515-6253-00-4	4
CROS	ander of the content	resident de la companya della companya de la companya de la companya della compan	匆
	Spinner Bracket	535-7255-00 515-6250-00	
	(Mini Spirioe Miero Syrtch Diode: 1/1/4001	180-5010-04	0.0
	Piode: 104001	180-5010-04 112-5001-00 237-5937-00	
	#2.56 X 1/2 HWH!Mach SER (0ty 2) Cable Harness	036-5380-05	S (
9	Mini-Mars Light Cover Red (Qty. 5)	550-5031-02	_
10	Mini-Mars Light Cover Clear (Qty. 3)	550-5031-01	
11 *	Rubber Light Cover Red (Qty. 2) *	545-5014-02	
12 *	Rubber Light Cover Yellow (Qty. 1) *	545-5014-06	
13 *	Rubber Light Cover White (Qty. 3) *	545-5014-08	
14	Top Lane Mini-Hoods Red (Qty. 3)	550-5061-02	
15	Spot-Light Assembly (Qty. 2)	500-5818-01-4	4
EARLE)	<u>ungoanguanden et parson baringawie</u>		
	UNGVARDVERTEN: 15) ASSVERATION WAL Widge Laydown Sckt (Notched) (08) 2) #555: Wedge Base Bulb (01) 2) Blacket	.077-5026-01 -165-5002-00	
46	Blacker	535-6992-00	N
¥2.0	RIVER 0 1/8 A 1/6 INICKEI	749-5008-00 E45-5408-01	
	Réfléctor (Oty. 2)	545-5409-01 036-5380-09	
16	LEM Sub-Assembly	515-6417-00	
ORDE	INGATOVE DEKEMO ACSEPATOR MI		翻
	LEM Mounting Bracket	545-5651 00	
0.3	#6X/72/Xerew	535-7561-00 252-5001-00	Ų.
0.31	Lavdown Wedge Socket #555 Wedge Base Bulb	077-5026-01 165-6002-00	ď.
學習慣	Rubber Life Cover Red	545-5014-02	
6. 65	Rivet ø 1/8"	249 5001 00	M.
47	Washer 5/16* (ID-X 9/64* OD X 1/32*	242-5017-00	4:37°
17	Ball Snubber Bracket (Qty. 3) LED Plastic Cover Insert	535-7280-01	
18	LED Plastic Cover Insert	550-5050-01	
19	Rocket Ramp Flamp	535-7336-00	
. 13	mence namp many	100-00-00	۷


19	Rocket Ramp Flamp	535-7336- <u>00</u>
71.6502(<u>\$</u> 10)		
Nº	Below Playfield Part Name	SPI Part Nº
20	Playfield Hanging Bracket (Qty. 2)	535-5216-04
21	Playfield Support Bracket (Qty. 2)	535-6862-02
22	Edge Slide Bracket (Qty. 2)	535-5988-00
23	Pivot Pin Bracket Assembly (Qty. 2)	500-5329-00
GROE	ringvenoveretinezarakskepartensevije	Enforch Canada
	Pivot Bracket Screws (Oty. 4) T-Nuts (Oty. 4)	237-5907-00 240-5101-00
24	Adjustable Post Plate (Qty. 2)	535-5091-02
		

Note: For posts & rubbers see the next pages in this chapter.

Nº The Playfield	SPI Part №
P1 * Playfield Screened (No Parts) *	830-5144-00
P2 * Playfield Complete with all Parts *	505-6004-44-44

^{* -} An asterisk indicates item is not noted in the illustration.

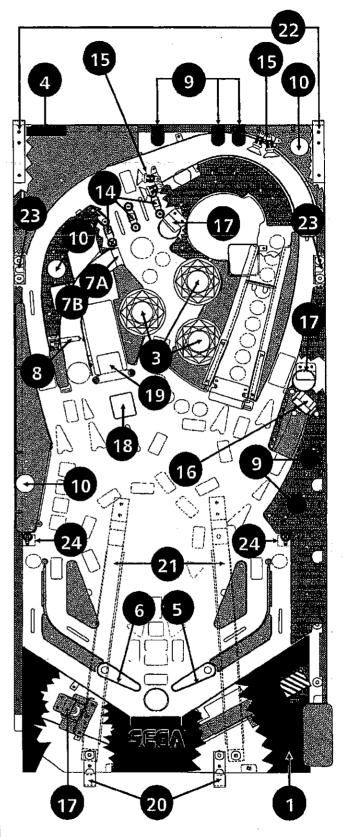

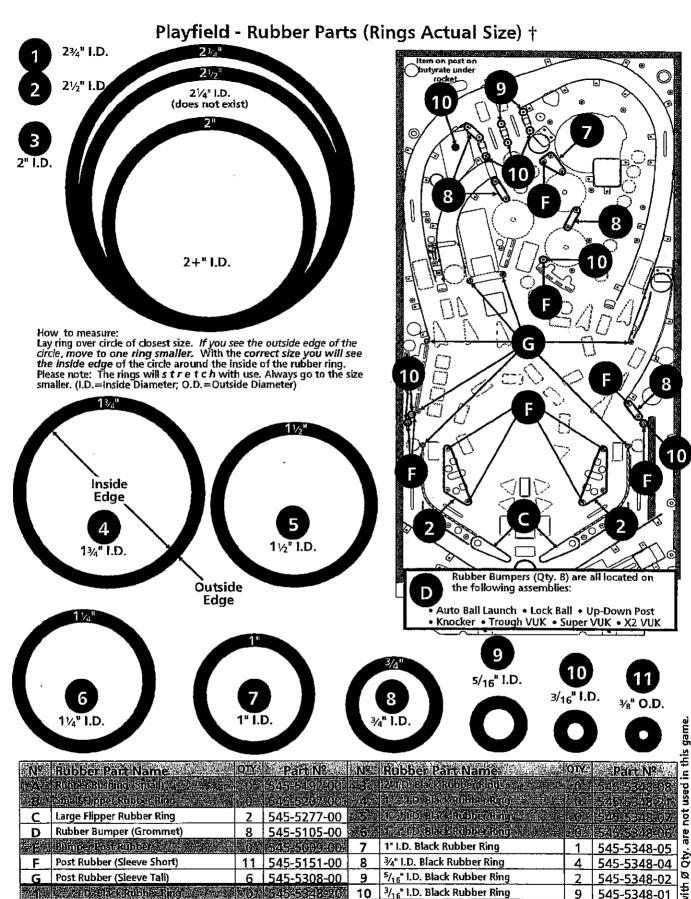

Parts Identification & Location

21/2" I.D. Black Rubber Ring

Note: Size and/or quantities may change during production.


Section 4 Chapter 1

2

545-5348-09

PARO DE BLEGOR CONTRACTOR


SPANDABLIKERIJANE RING (NOVSTOWA)

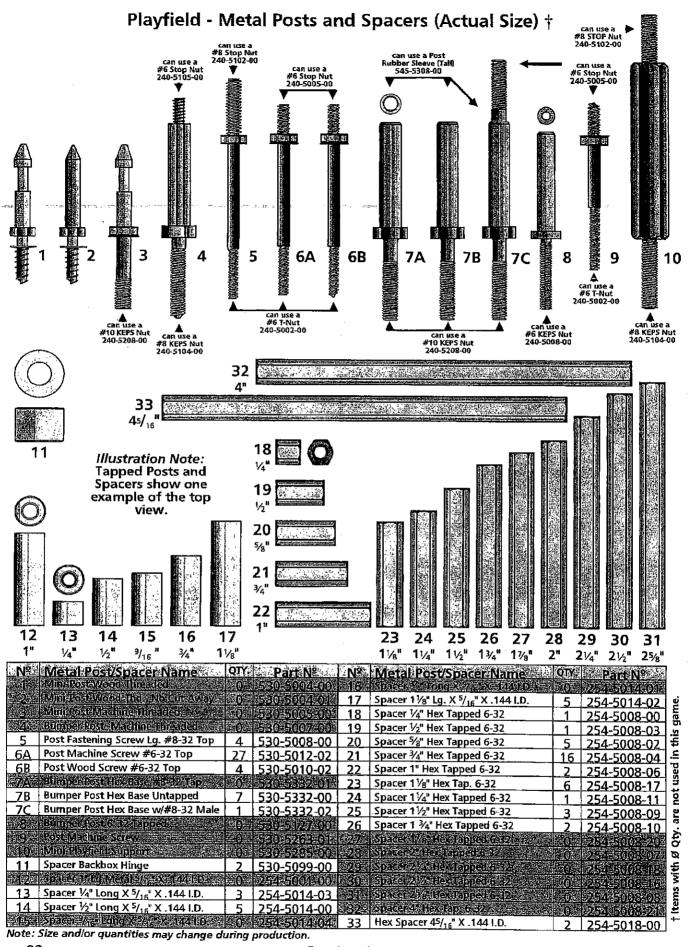


Page 62

Section 4 Chapter 1

Parts Identification & Location

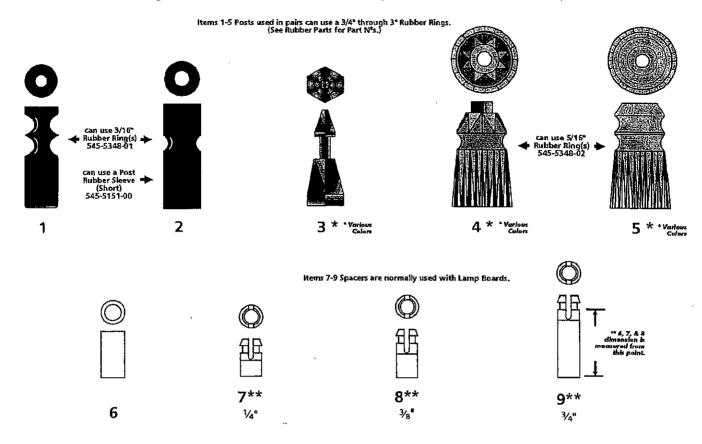


Items 10-17 Spacers are used in conjuntion with Metal Posts (Items 5, 6A & 6B) and/or a #6-32 1¾ PHIL PH Screw (237-5511-00) with #6 Stop Nuts (240-5005-00).

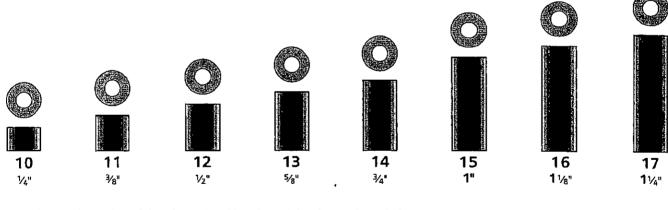

- For various colors of these items (Jewel Posts), see Color Chart at the end of Section 4, Chapter 2. Replace the last 2-digits with desired color replacement.
 Dimension is measured from bottom to just under cut-away.

→	1/4"	3/8" 1/2"		5/8"		3/4"	1"	1 1/8"	11/4"
ms with Ø		* For various colors of these items (Je Section 4, Chapter 2. Replace the la ** Dimension is measured from bot	wel Po ist 2-di tom to	sts), see Color Cha gits with desired o just under cut-aw	art at the color rep ay.	end of lacement.			
₽[Nº	Plastic Pest/Spacer Name Se	QTY.	Part Nº	1 N2	Plastic	Post/SpaceniNam	e OTY.	arting.
a		atemateria propinsi and propinsi and a second control of the contr	0	F1 IDM: III) YUUSI WAXUU YUUSI KA	434 (1984) 41547 41	APPLICATION OF THE PARTY OF THE	erias institutora de la	AND THE RESIDENCE OF THE PROPERTY OF THE PERSON OF THE PER	5(0)074 (0)34
è	2	Plastic Post (Black)	46	550-5059-00	经的	Syzyger	Marine Asterova	是是是是对自然们	Solo of the
ğ		Manual Action of the Company of the	(0)	15510,61016725XX		Spaletr F	Pister Creve		50000
r.	如鄉	Small events to see a see see	10	S50250244X05		yere le	e lagre (gaylor e		Store exorts
<u>a</u> .[5 *	Double Rubber Jewel Post (Red)	1	545-5209-02					
3	6	Space of Pstable toway Vinte 28	0.0	P252=5101010F025					5(00)070
¥.	7 **	Spacer 1/4" Plastic Slf. Rtn. srs6-4-01	4	254-5007-02		Spacerale	Patric /caterio		45000000000
93	8 **	Spacer ¾" Plastic Slf. Rtn. ses6-6-01	12	254-5007-01	111	spacer II	A Plathic & (Gray)		\$100010±015
me.	Note:	Size andlor quantities may change (during	production.		Spater 13	α Plastic ≥e (Gray) +	250	Stotele loka

Playfield - Boards: Lamp, 7-Segment Display, Magnet Interface, Auxillary Relay, Switch Membrane Interface & Magnet Driver †

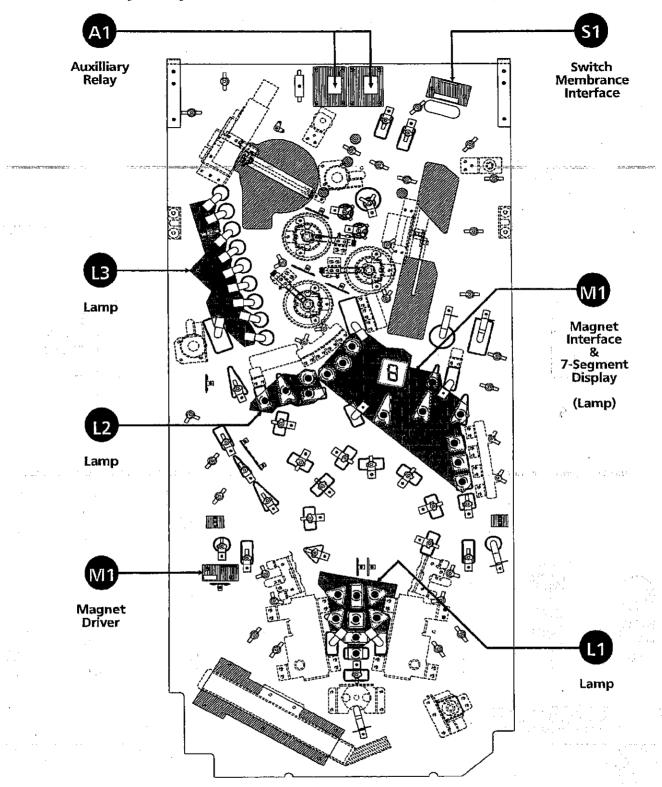

Nº Board Na	me	SPI Part Nº	Nº.	Board Name	SPI Part Nº
L1 * Lamp Board		520-5130-01	M1*	Magnet Interface & 7-Segment Display Bd	520-5130-06
L2 * Lamp Board		520-5130-04	M2	Magnet Driver Board	520-5130-02
L3 * Lamp Board		520-5130-05	S1	Switch Membrane Interface Board	520-5130-03
*Note: #555 & #906 Bulbs are used on the Lamp Boards.			Δ1	Aux. Relay Board (Oty. 2)	520-5010-00

See the next page for bulb & socket part numbers.

Page 64

Section 4 Chapter 1 Parts Identification & Location


Playfield - Wedge Base Type Bulbs and Sockets (Actual Size) †

This socket is normally used on Lamp Boards to position bulbs horizontally. (Use w/#555 & #906 Bulbs.) 2. This socket is normally used in Pop Bumpers. (Use #555 Bulbs only.) This socket is normally used on Lamp Boards to position bulbs vertically. Jse w/#555 & #906 Bulbs.) #555 CHRISTIANA 9000 re appro 12° ea. 6 5 4.
This socket is normally used with Reflectors. replaced with: C 7
This socket is sometimes used in conjunction with Mini-Mars or special Butyrate assemblies. В This socket was used with an alternate insert using Insulation Displacement Connection vs. a Soldered-On Connection. Neon #906 † Items with Ø Qty. are not used in this game. This Neon Bulb is used in Motor Assemblies for voltage spike suppression. NP Bulb & Socker Name #906 Wedge Base Bulb #555 Wedge Base Bulb 555 Wedge Base Socket 077-5007-00 Turbo Pop Bumper Socket (New) 3 077-5206-00 077-5207-00 Lamp Board Laydown Wedge Base Laydown Wedge Base L/R Black Nº Bultiname (Used in Motors) (01) Partine Neon NE-2 Bulb 165-5021-00

Parts Identification & Location

Note: Size and/or quantities may change during production.

Section 4 Chapter 1

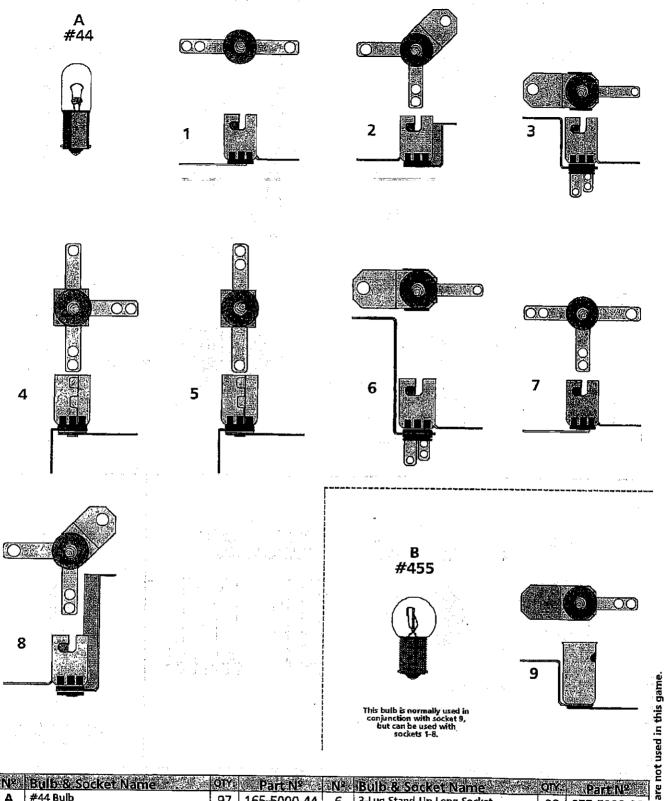


1/1/2/	Bulb & Socket Name	OTY.	Part Nº	îN2	Bully & Socket Name	OTY:	634 NO
A	#44 Bulb	97	165-5000-44	6	3-Lug Stand-Up Long Socket	28	077-5009-00
1	2-Lug Staple Down Socket	64	077-5000-00	_7	3-Lug Staple Down Socket		077-5001-00
22	zanastane upolionasia en sea	(0)	MOZAL GIPODERION	0	PAGE SENSE PRODUCTION OF THE PAGE STATE		
	s Tue stanue or serior solver		natura (natura)			no I decima a la militar estado	Caracana Ca
4	3-Lug Laydown Socket	_5	077-5006-00	В	#455 Twinkle Bulb	1	165-5003-00
25	Zertigilavitownsockele is in the	0.5	(6////45/0101812010)	o,	Acture Statis Principal Science 18 18 18		707 92 FO 122 CO


Note: Size and/or quantities may change during production.


Page 66

Section 4 Chapter 1

Parts Identification & Location

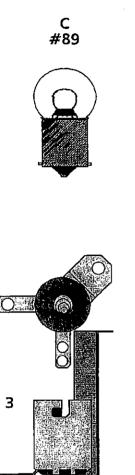

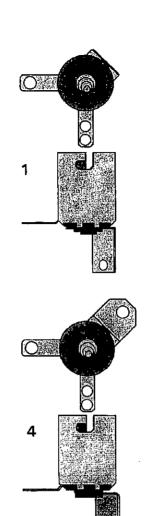

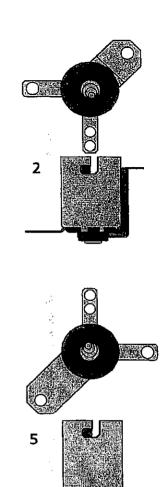

with
Ø
ο ί γ.
are
not
pasn
_

₽.	_	· · · · · · · · · · · · · · · · · · ·						
₹.	Nº5	Bulb & Socket Name	QTY.	Part Nº €	Nº	Bulb & Socket Name	QTY.	Part Nº
ŧ	C	#89 Bulb	21	165-5000-89	3	Stand-Up, Long Socket	_3	077-5102-00
ga	1	Laydown Standard Socket	2	077-5100-00	200	Similar projects was not a server		torical original
Ę	2	Stand-Up, Short Socket	15	077-5101-00	5	Straight Leg Socket	1	077-5107-00

Note: Size and/or quantities may change during production.

Parts Identification & Location

Section 4 Chapter 1 Page 67

Parts Order Checklist Notes

Date Ordéred	Pan-N≗ ₂	Qty	Description Date Received
	:		
	100 N		Term variable
	<u>.</u> .		
·			
·			
· · · · · · · · · · · · · · · · · · ·			
·.•			
	. · · · · ·		
•			
	, ,		
		:	
	 		
<u> </u>			
		-	


Section 4 | Drawings

Assembly Drawings (The Blue Pages)


Overview

Drawings

This chapter expands Chapter 1 of this section (The Pink Pages). The Part Numbers for all Major Assemblies are provided and can be ordered as a complete assembly (exception: Turbo Bumper Parts). Each assembly is broken down, describing the individual parts and/or sub-assemblies (with the part numbers) which can be ordered separately. Where multiple parts are riveted or assembled as sub-assemblies the sub-assembly needs to be ordered. The drawings show the location of the individual parts. Note that minor changes may be made during production (e.g. coil size, addition or deletion of minor parts). Always verify the part to be replaced with the part number and/or description as noted. Replacement parts may be substituted with revised parts which may have a different part number. Any questions, call our Technical Support Dept. (1-800-KICKERS USA & Canada or 708-345-7700).

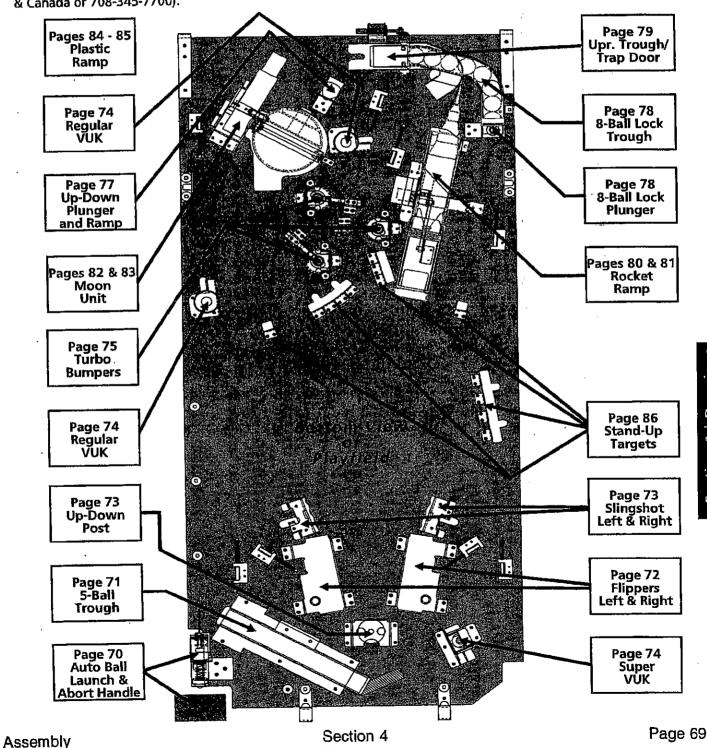


Chapter 2

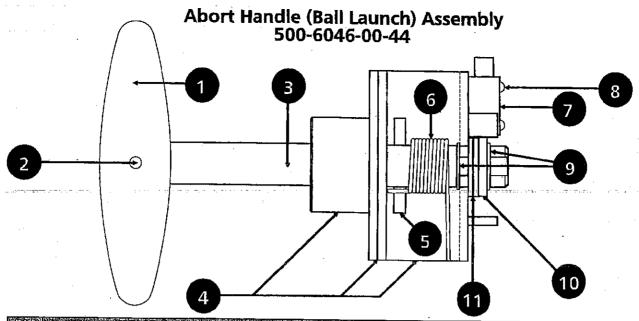


N.	PacEName 6	A THE PART OF THE	150		
1_	"T" Style Handle	545-5644-00	8	#4-40 X 5/8" HWHTF (Qty. 2)	237-5945-00
2	1/8" X 5/8" Roll Pin	251-5008-00	9	7/16" E-Ring	270-5018-00
3_	Shaft	530-5401-00	10	САМ	535-7623-00
4	Hub (Front & Back Plate) Assembly	515-6491-00	11	7/16" I.D. Nylon Washer (Qty. 2)	242-5041-00
5	1/8" X 1" Roll Pin	251-5016-00		VALSTORICH GERRANDER STEERS	
6	Torsion Spring	265-5042-00	n/a	Mounting Screws #6 X 1/2" (Qty. 4)	234-5001-02
_7	*D4* Switch	180-5061-00	n/a	Fire Switch Cable	036-5380-11

Auto Ball Launch (Shooter Lane) Assembly 500-5969-01-44

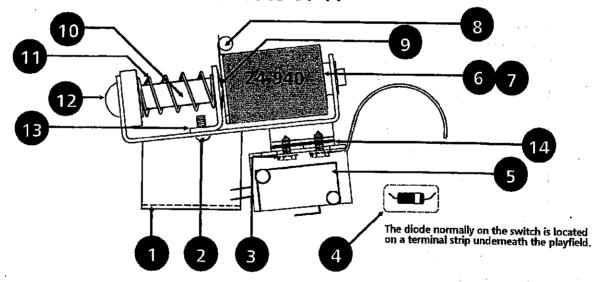


202	Bardhamer	SPURATINE !	Nº	Pajathanie	
L	Shooter Mounting Bracket	535-7331-01	8	Coil Diode, 1N4004	112-5003-00
	8-32 X .25" PPH SEMS (Qty. 2)	232-5300-00	9	.531" ID X .75" OD X .01 THK.	269-5002-00
3	#6 X ¾" HWH SMS (Qty. 2)	234-5000-00	10	Plunger Assembly	515-5000-02
			11	Compression Spring	266-5020-00
5	Micro Switch Assembly	515-6514-00	12	Rubber Bumper (Grommet)	545-5105-00
6 ·	Coil, 24-940, incl. Coil Sleeve	090-5036-01	13	Coil Retaining Bracket	535-5203-03
7	Coil Sleeve	545-5076-00	14	Shock Pad	545-5640-00
	والمراجعة فيستنب والمساولين المساور والمحافظ فيستنب وأراف				343-3640-00

^{*} Item 4 is not included with this assy. Diode is located in cabinet.

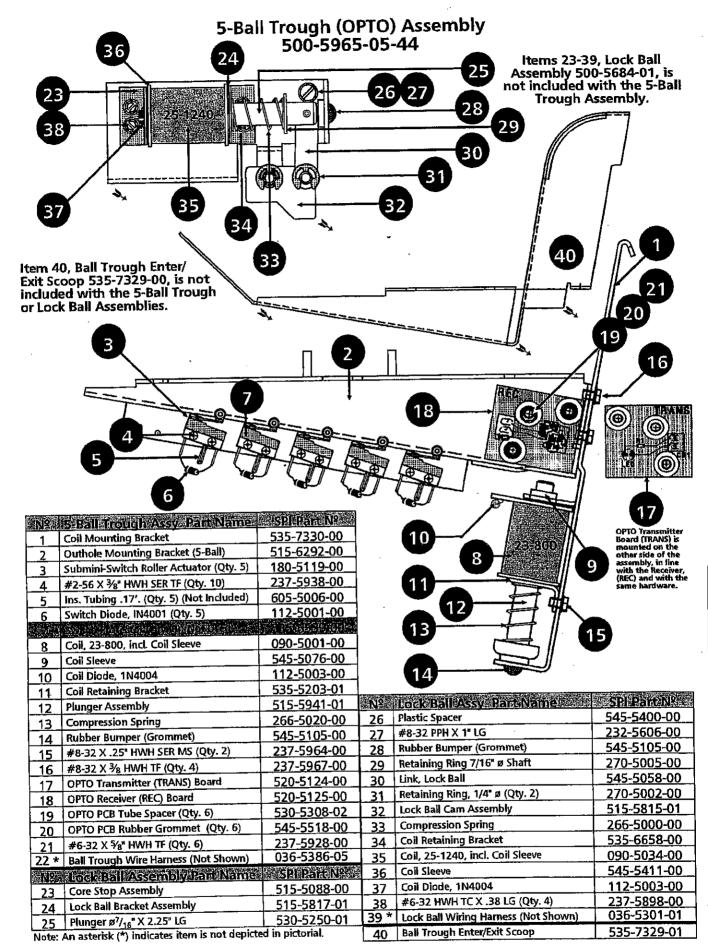

Assembly Drawings

Section 4 Chapter 2

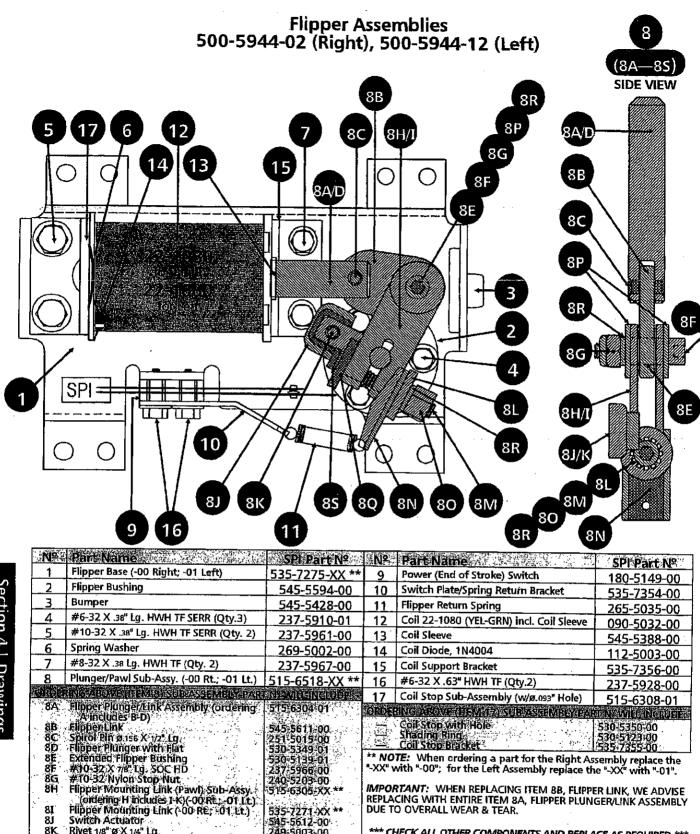

8E

8

8K

8N

8P

Return Bracket

#10 Star Washer

SWITCH ACTUALD!

Rivet 1/8" & X 1/4" Lg.

Washer 1/9" THK 203" I.D. X 63" O.D.

#10-32 SOC HD X 1.25" Lg. (Qty. 2)

Wishry 06" THK (same I.D./O.D.) (Oty. 2) Washer 105" THK 203" I.D. X 63" O.D.

#10-32 Split Lock Washer (Qty. 2)

#10-32 X 9/32" Long 3/8" Hex Nut

n/a

515-6305-XX **

535-7271-XX **

545-5612-00 249-5003-00 242-5039-00

242-5039-00 237-5950-00 535-7353-00 240-5209-00 242-5038-00 242-5039-01 244-5003-00

SPI Part Nº

515-5133-01-03

515-5133-01-04

** **NOTE:** When ordering a part for the Right Assembly replace the "-XX" with "-00"; for the Left Assembly replace the "-XX" with "-01".

IMPORTANT: WHEN REPLACING ITEM 8B, FLIPPER LINK, WE ADVISE

REPLACING WITH ENTIRE ITEM 8A, FLIPPER PLUNGER/LINK ASSEMBLY

*** CHECK ALL OTHER COMPONENTS AND REPLACE AS REQUIRED ***


ASSOCIATED PARTISI NOT INCLUDED WITH THE ABOVE ASSEMBLY

DUE TO OVERALL WEAR & TEAR.

Associated Part Name

Right Flipper Bat & Shaft Assembly Color: WHITE W/SONIC THE HEDGENOGTH


Left Flipper Bat & Shaft Assembly Color: WHITE W/SONIC THE HEDGEHOG™

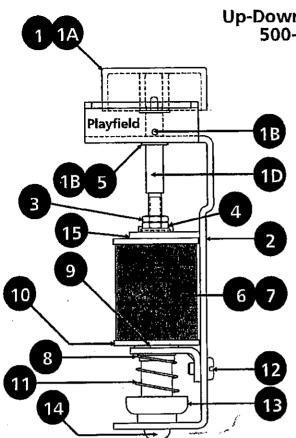

Up-Down Post Assembly 500-6023-00-44

Nº	Para Name	SRIPARINE				
1	Up-Down Shaft Sub-Assembly	515-6418-00				
THE STATES	na fri britarian bulan Salataria	BELLEVILLE RESTREET				
- A.	Bumper/Ret 1848 3/32/X-172 Rollinn Retaining Ring(1/4) ØShaft	550 5029 025				
B	2/32// 1/2 HOLLEN	261950002-00-6 27/095002-006				
D i	Up Down Shart!	\$30E5876500a				
2	Up-Down Mounting Bracket	535-7505-01				
3	#10-32 Hex Jam Nut	240-5201-00				
4	#10-32 Keps Nut	240-5208-00				
5	Nylined Bearing 1/4" Shaft	545-5050-00				
6	Cail 27-1500, incl. Cail Sleeve	090-5004-00				
7	Coil Diode, 1N4004	112-5003-00				
8	Coil Sleeve	545-5076-00				
9	Spring Washer	269-5002-00				
10	Coil Retaining Bracket	535-5203-01				
11	Spring	266-5022-01				
43	#8-32 X 1/4" Mach. Screw P-PH SEMS	232-5300-00				
12	(Oty. 2) Note: If replaced, apply loctite before installation.					
13_	Plunger Assembly	515-6439-00				
14	Rubber Bumper (Grommet)	545-5105-00				
15	Coil Insulator	545-5431-00				


Slingshot Assemblies 500-5849-01 (Right & Left)

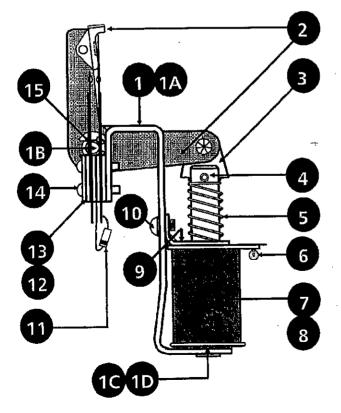


Ne	Part Name	SESTEMBER AND SES
1_	Slingshot Bracket Assembly	515-5339-01
	merskande meen beschied beschied	
A	Slingshoretracketen	
	Hinge full His Amature Stop	
	ShadingRing	53:0-53:07:00
2	Arm & Tip Assembly	515-5340-0 1
3	Armature Link	545-5062-00
4	Plunger & Link Assembly	515-5338-00
5	Compression Spring	266-5020-00
6	Coil Diode, 1N4004	112-5003-00
7	Coil 26-1200, incl. Coil Sleeve	090-5044-00
8	Coil Sleeve	545-5031-00
9	Coil Retaining Bracket	535-5203-03
10	#8-32 X 1/4" Screw (Qty. 2)	232-5300-00
11	Switch Diode, 1N4001	112-5001-00
12	Slingshot Switch (Qty. 2)	180-5054-00
13	Tension Switch Plate (Qty. 2)	535-7344-00
14	#6-32 X 3/4" HWH (SER) Zinc (Qty. 4)	237-5958-00
15	Retaining Ring 1/4" ø (Qty. 2)	270-5002-00


Assembly Drawings

Section 4 Chapter 2

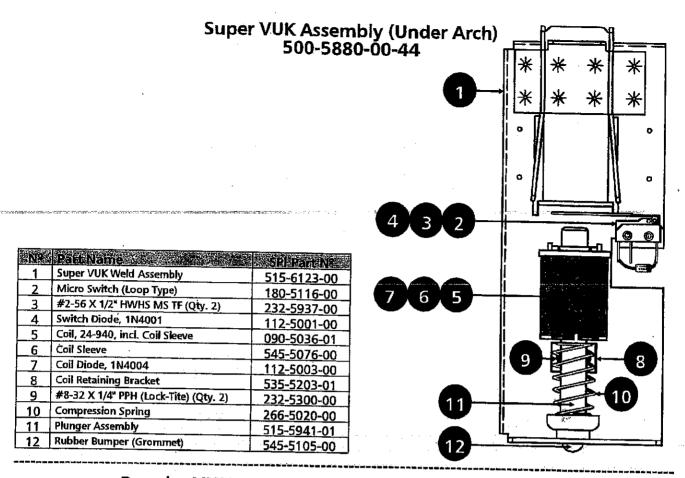

Regular VUK Assemblies (Right & Center Ball Ejects) 500-5839-02-44

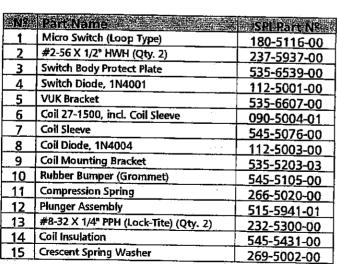

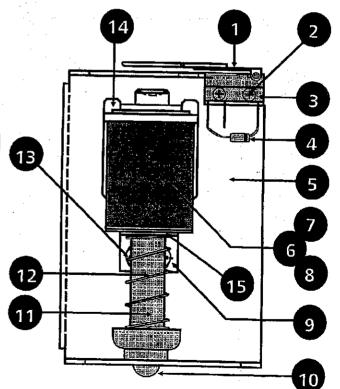


Page 74

Section 4 Chapter 2


Assembly Drawings

Turbo Bumper Individual Parts (Not available as an assembly. Parts are grouped for easy reference.)

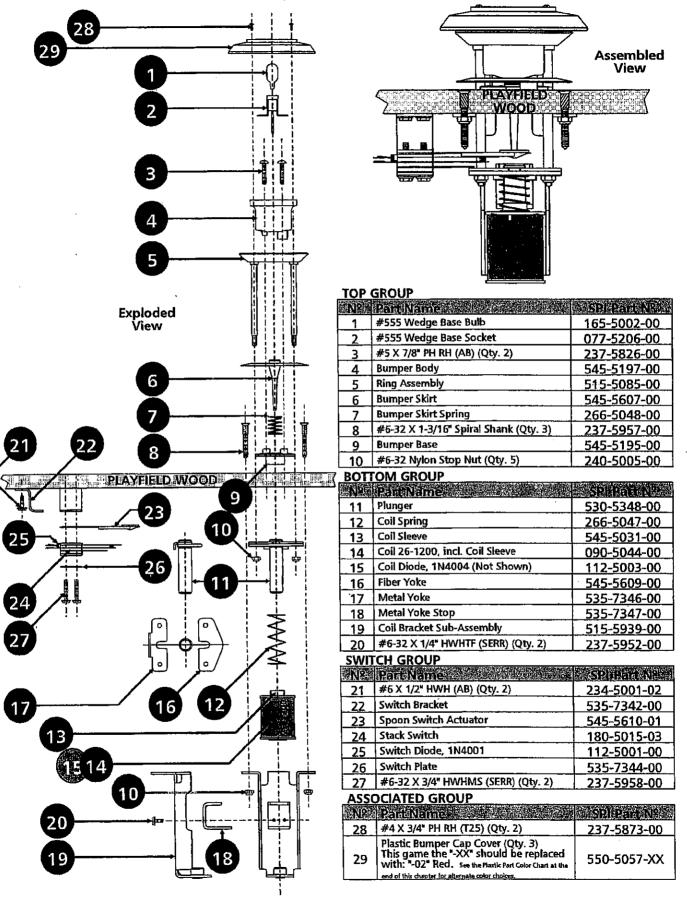


Assembly Drawings

Section 4 Chapter 2

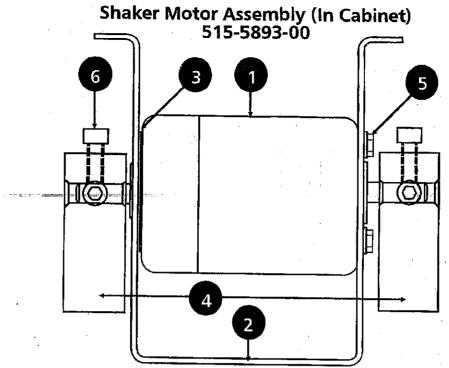


Knocker Assembly (In Cabinet) 500-5081-00

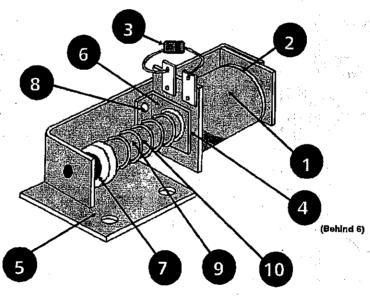


Ne.	Part Name	SPI Part Nº	×Nº	Part Name	
11	Coil 23-800, incl. Coil Sleeve	090-5001-01	6	Coil Retainer Bracket	535-5203-03
_2	Coil Sleeve	545-5076-00	7	Rubber Bumper (Grommet)	545-5105-00
3	Coil Diode, 1N4004	112-5003-00	8	#8-32 X 1/4 * PH PAN SEMS (Qty. 2)	232-5300-00
4	Crescent Spring Washer	269-5002-00	9	Plunger Assembly	515-5000-02
5	Kickback/Knocker Bracket	535-5265-00	10	Compression Spring	
<u> </u>	The state of the s	232-2265-00	10	Compression Spring	<u> 266-5020</u>


Up-Down Metal Ramp Assy. (Operated by Up-Down Ramp Plunger Assy.) 500-6042-00-44

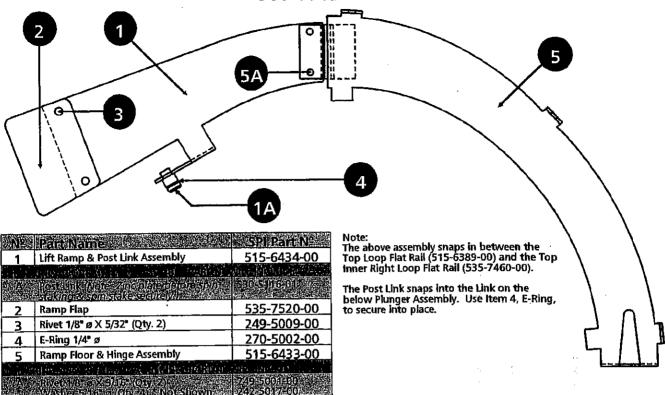

Up-Down Ramp Plunger Assembly (Operates Up-Down Metal Ramp Assy.) 500-6044-00-44

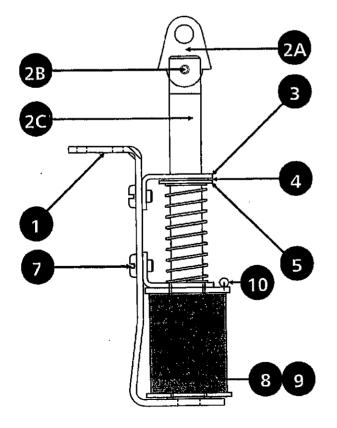


N8	RajaName (* 2002)	Maria de la Companya
1	Bracket & Armature Stop Assembly	515-6435-00
Selfe.	iriotii votio o išteito.	
	ivolininoidiaeket za elis dia a se esta e	
	Amadie Stip (Cotton) 12 - 22 - 23 - 23 - 23 - 24 - 25 - 25 - 25 - 25 - 25 - 25 - 25	Sections 1
2	Plunger & Link Assembly	515-6461-00
Softe de	in 2000年 11、李建立代表 11900年	. V
A Y		
	rolligin (Alson Gyarlones).	Kasa interes
3	Coil Retaining Bracket (Qty. 2)	535-5203-01
4	Nylined Bearing 7/16" ø Shaft	545-5418-00
5	Retaining Ring 7/16" ø Shaft	270-5005-00
6	HD Spring	266-5034-00
7	#8-32 X 1/4" PPHW/SEMS (Qty. 4)	232-5300-00
8	Coil 27-1500	090-5004-00
9	Coil Sleeve	545-5411-00
10	Coil Diode, 1N4004, incl. Coil Sleeve	112-5003-00

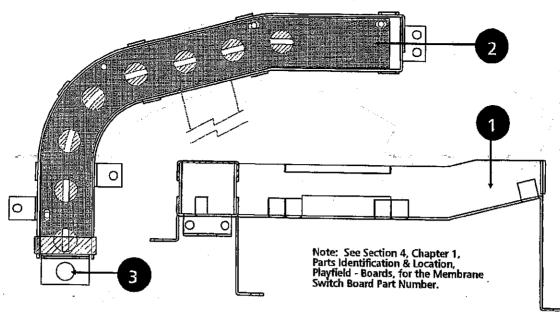

Nº	Part Name: 12 10 10 10 10 10 10 10 10 10 10 10 10 10	SPLPATEN2	angg Rejatheime sama sa sa sa	
1	8-Ball Lock Trough	515-6424-02	3 Nyliner 5L1-FF Thomson	545-5485-00
2	Membrane Switch	181-5000-00	S , J	J43-3483-UU

8-Ball Lock Plunger Assembly (Locks balls in the 8-Ball Lock Trough Assy.) 500-5867-01-44


MARK	Hair Name	SPI Part Nº
1 .	Plunger Sub-Assembly	515-6119-01
A. B	Mefaltall Pockel under Nylohi Plunger	See Note:
2	Mounting Bracket Sub-Assembly	515-6118-00
		ing the delagatein
A	Late partie treated a second as a second	
	Shadiai Rifer	See Note
3	Coil Bracket (Qty. 2)	535-5203-01
4	Nyliner, 7/16" ø Shaft	545-5418-00
5	Retaining Ring, 7/16" ø Shaft	270-5005-00
6	Compression Spring	266-5020-00
7	#8-32 X 1/4" PPHW/SEMS (Qty. 4)	232-5300-00
8	Coil 27-1500, incl. Coil Sleeve	090-5004-00
9	Coil Sleeve	545-5411-00
10	Coil Diode, 1N4004	112-5003-00
11	Spring Washer	269-5002-00

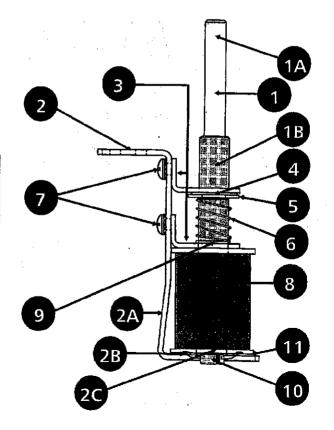


Page 78

Section 4 Chapter 2 Assembly Drawings

Upper Trough/Trap Door Assy. (Attached to Item 16 Back Panel Assy.) 500-6031-00-44

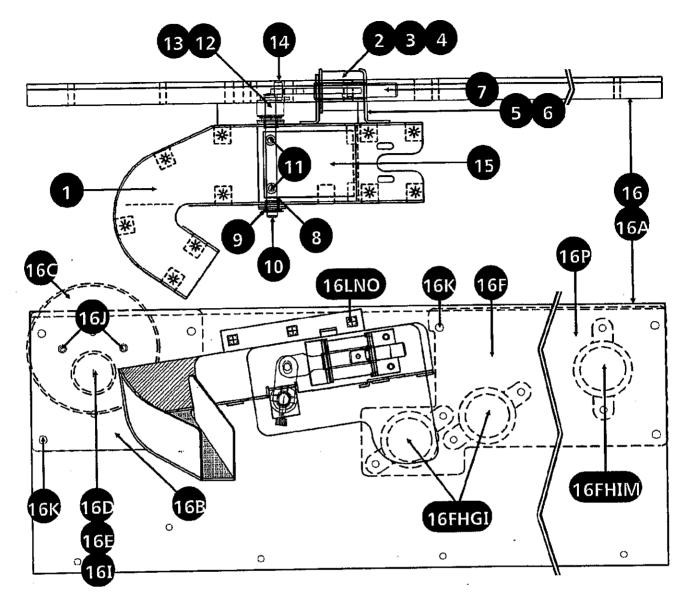


RKO	Paranger	SPI Part Nº	N ₂	Panellame	SEPTEMBENCE.
1	Trough	515-6428-00	14	Retaining Ring 3/16" ø	270-5001-00
2	Coil 28-1050, incl. Coil Sleeve	090-5046-00	15	Trap Door Plate	<u>535-7283-00</u>
3	Coil Diode, 1N4001	112-5001-00			1
Δ	Coil Sleeve	545-5500-00	16	Back Panel Assembly	500-6028-00-44
5	Coil Mounting Bracket	535-7313-00	garren Version		
6	#6-32 X 3/16" PHMS (SEMS) (Qty. 2)	232-5209-00		Book included a second	
7	Plunger Assembly	515-6057-00		Azimp Bimpercapilled a seek sides	
8	Nyliner 1/4" ø 4L2-FF Thomson (Qty. 2)	545-5423-00		Wastugestands for a horizont to the second of the second o	a manadoli se de la col
9	Retaining Ring 1/4" ø (Qty. 2)	270-5002-00		Mark the trade of the Salah Color	(a. 70 % (b. 5 %)
10	Shaft - Trap Door	530-5343-00	L C	assandion Shortstocket (Otyle) (salat #80 Bulo 19	(3) 50 (0) (3) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4
11	#6-32 X 3/8" FHMS (Qty. 2)	237-587 <u>1-</u> 00		Car Sister and Edwister Value Constitution	
12	Crank Arm Assembly	515-6184-00		457 (1-7) (19) (21) (21) (21) (22) (23) (24) (24) (24) (24) (25) (25) (25) (25) (25) (25) (25) (25	
16 34.15	MERCHANIA AND AND AND AND AND AND AND AND AND AN			Season 22 de main abort (en co) y se la colo	
		15 0 5 20 0 0 0 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		- Zelug Sträigip Scissel - # 10/24 kGPS NOT (CIV-5)	077 - 119 - 111 24 10 770 770 0
	Salkam	535-7650-00	Lab.	Wood Spacers and Proceedings	BYASISTICO (IO) 崇誉
13	#8-32 SHCS	237-5897-00	報復品経	BIELICAZINGIORIOINE	

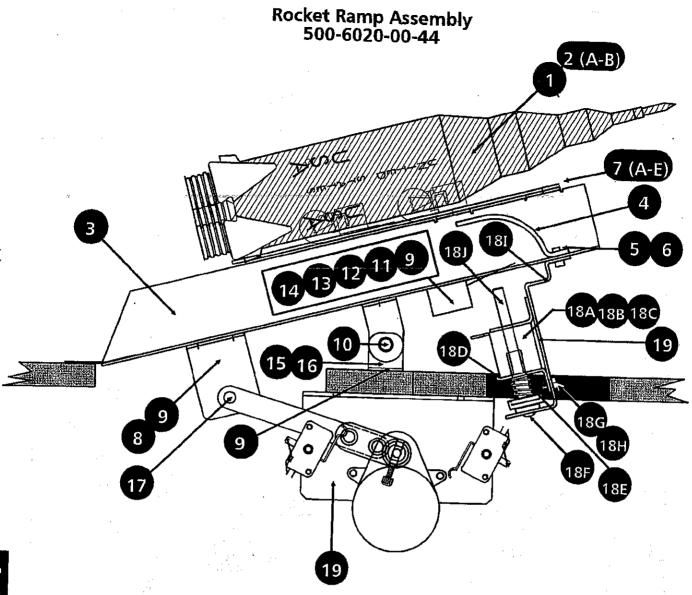

Nº	Pathyring 200	SDLP HINE		Par Name	· · · · · · · · · · · · · · · · · · ·
1	Rocket Ship	545-5649-00		Hare Name	SPI Part N9
2A	#8-32 x 1/2" HWH (SERR) (Qty. 4)	237-5905-00	12	Micro Switch Bracket	535-7532-00
2B	#8 Washer (Qty. 4)		13	#2-56 X 3/8* THR. Form (Qty. 2)	237-5938-00
3	Trough	242-5005-00	14	Switch Diode, 1N4001	112-5001-00
4	Snubber Bracket	535-7499-00	15	Stationary Pivot Bracket Assy. (Qty. 2)	515-6417-00
5	#8-32 X 5/8" THR. Form (Qty. 2)	535-7533-00	<u> 16</u>	Pivot Bracket	535-7501-00
6	#8-32 Stop Nut (Qty. 2)	237-5951-00	_17_	Retaining Ring 1/4" ø	270-5002-00
7	Butyrate Assembly -38	240-5102-00	18	Mini-VUK Assembly	515-6441-00
Ein er	Also The Assembly -38	<u>515-6468-38</u>	SALES COMPANY	HE TARREST AND SEE STATES AND SEE	313-0441-00
Sá a		是自己就是是是是自己的政治的		3501 (26×1050 dimessi (46×105)	lide es le Sido es asse
E .	dévalowi stanian kodbakowa si sa	8.005462 - 8 -0775 - 1.00 - 0.0		Coll Dioder (NA)() Coll Sleeve	1024500150044 S
Ď		169-5000-89	D	Golf Mounting Bracker, 12 3 3 3 3	
遊車	River 178 a X 3/16 (Oty 5) Washer Oty 2	749,5001,00 246,5000,00	ŧ	Spring Rubben Burbes (Grömmet)	268-5050-00
8	Bracket Assembly	515-6415-00	• G	EDVE SELECTION OF THE CONTRACT	5455105ch0
_9	Rivet 1/8" ø X 3/16" (Qty. 5)	249-5001-00	H		297.5967£00 2472.5005.00
10	Nyliner (Qty. 2)		操操		515-6443-00
11	Micro Switch (Loop Type)	545-5423-00	19 *	Motor, Bracket & CAM Assembly	515 6442 00
		<u> 180-5116-00</u>		wellially	<u>515-6414-00</u>

^{*} See next page for detail of item 19 with a breakdown of parts.

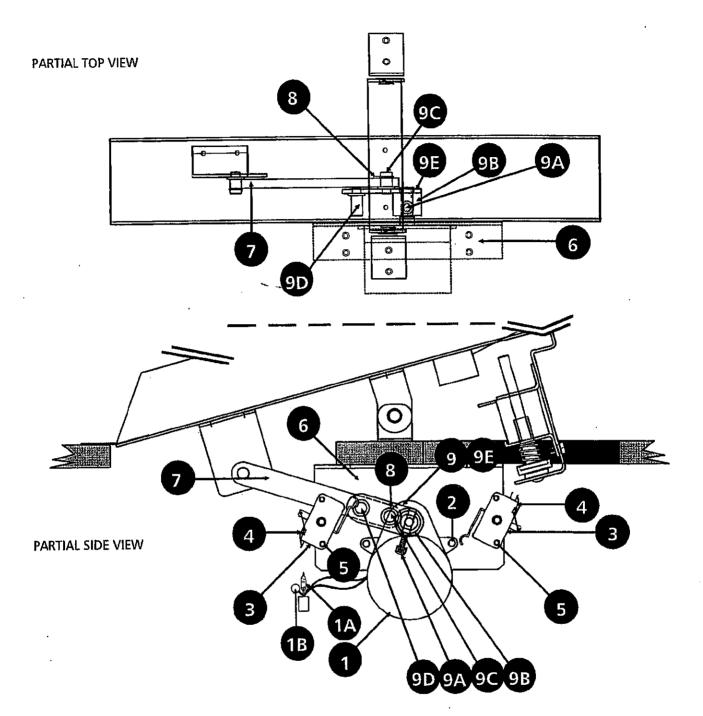


	RATINEMA	SPIRATRI	NS.	(Pari Danie	
011100A	Motor Assembly	515-6383-00	7_	Link	535-7504-00
		Aras Fuelkour	8	Retaining Ring 1/4" ø	270-5002-00
	Capación a Madesidya places y estas	A \$10-5000a00	9	CAM Link Assembly (Rocket)	515-6448-00
2	#6-32 X 1/4" PHMS SEMS (Qty. 2)	232-5200-00	HAR BE	组成。在1906年,华州的大学的对方,并不是1906年中	
3	Micro Switch (Qty. 2)	180-5052-00		asorte a ligital el la saleura de se del como	20,000,000,000
4	Switch Diode, 1N4001 (Qty. 2)	112-5001-00		Should a Pin Center	Figure 1. Annual Control
5	#4-40 X 5/8" PHMS (SEMS) (Qty. 4)	237-5832-00		Shoulding this offices the Hub and Sales	as in security is a
6	Motor Bracket	535-7500-00		acamiliniziroakety as a salara salara	

† Items 1A, Neon Bulb, & 1B, Capacitor, are included with Item 1, Motor Assembly. Items 1A / 1B can be ordered separately, if required. (Operation Note: The bulb is used for spike suppression and the capacitor is used to eliminate line noise.)


Assembly Drawings

Section 4 Chapter 2 Page 81

Moon Unit Assembly † 500-6021-00-44

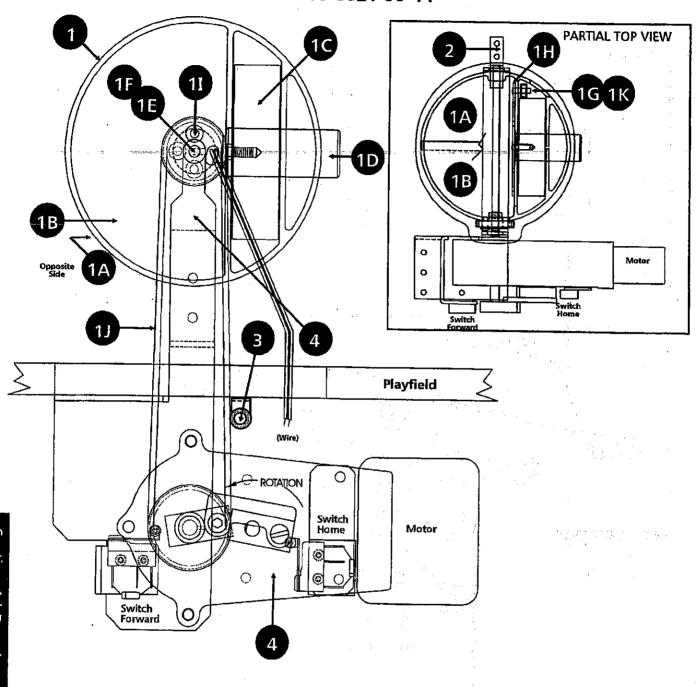

	15-6408-00 <u> </u>	Z Jouph	ort Bracket	535-	7538-00
		3† Rolle	r Assembly †	515	6451-00
	2012年第二	Healthean	Marie West Ward Child	4 DAY 21 ST ST	
TO THE REPORT OF THE PARTY OF T		a sione	Lection of the Company of the Compan		200
		E Res	n Roller (Ony 2) nitre Ring (745 8		3 (11
3/4 G* BHCTV (3) 270 B 20 B 20 B 3 20 MS (Truss Copy 1) 277	5001.00 † 15005.00 As 15002000 re 25809700 di	ltem 3, Rol ssembly 50	ller Assembly, is not inclu 00-6021-00-44. It must b his roller assembly is locat ove) and help keeps the di	ded with the Moon	Unit
	t grant di	iagram abo	ou-ouz 1-uu-44. It must n his roller assembly is locati ove) and help keeps the di or, Bracket & Cam Sub-Ass	ed under the playfie rive belt (Item 1J) ta	1

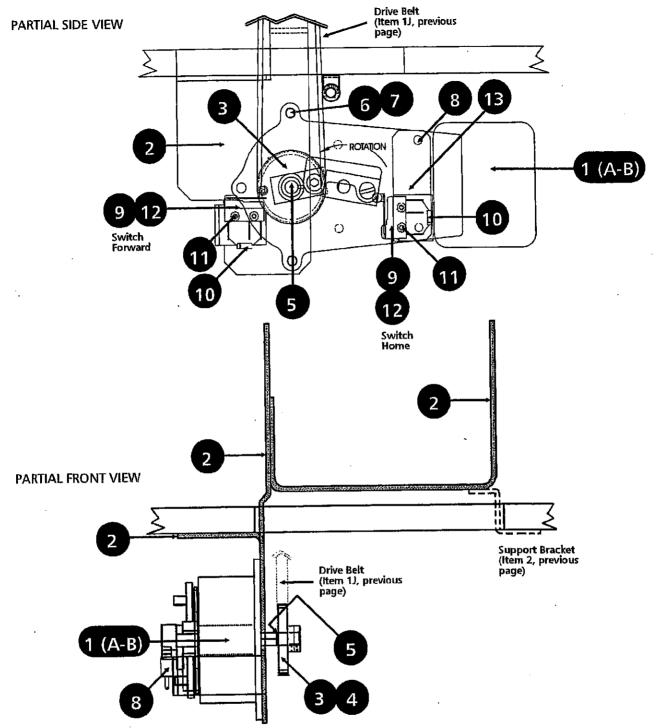

W. N. St.		SPERMANNE	Nº	Part Name	Residental de la constante de
1	Motor Assembly	515-6487-00	7	#8-32 Hex Nut (Qty. 2)	240-5104-00
		The bright nove ex-	8	#8-32 X 1/4" PHM5 PAN	237-5974-00
Dig Ball	CONTROL OF THE PROPERTY OF THE	31025000000	9	Micro Switch (Roller Actuator) (Qty. 2)	180-5119-00
2	Motor & Support Bracket Weld Assy.	<u>515-6447-00</u>	10	Switch Diode, 1N4001 (Qty. 2)	112-5001-00
3	Gear	<u>530-5374-02</u>	11	#2-56 X 3/8" TF (Qty. 4)	237-5938-00
4	#6-32 X 3/8" SHCS	<u>237-5944-00</u>	12	Fiche Paper (Qty. 2)	545-5431-00
5	Retaining Ring 1/4" Ø	<u> 270-5002-00</u>	13	Home Switch Plate Bracket	535-7477-00
6	#B-32 X 5/8" HWHMS (Qty. 2)	237-5907-00_	J		<u>,, </u>


Items 1A, Neon Bulb, & 1B, Capacitor, are Included with Item 1, Motor Assembly. Items 1A / 1B can be ordered separately, if required. (Operation Note: The bulb is used for spike suppression and the capacitor is used to eliminate line noise.)

Page 84

Section 4 | Drawings

Section 4 Chapter 2

Assembly Drawings

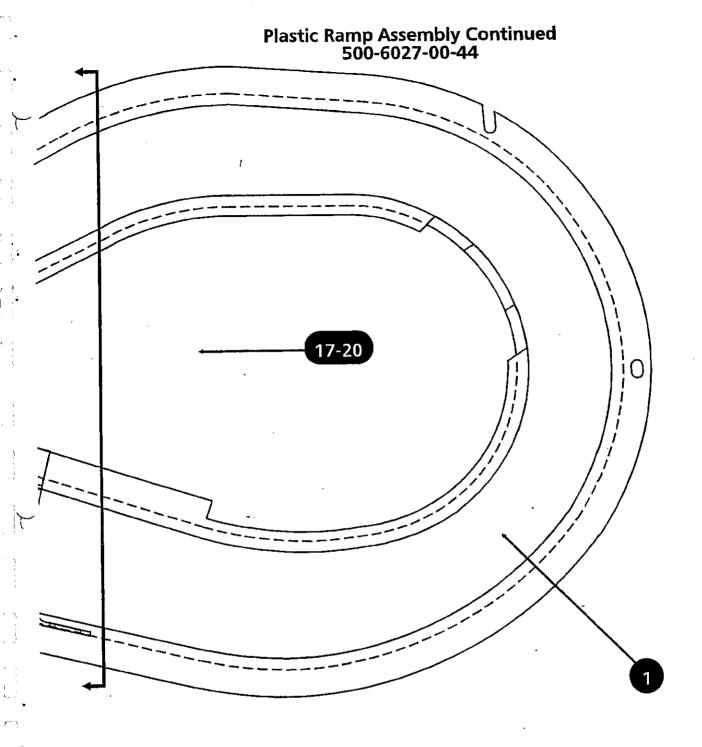


Items continued from the previous page.

7	Washer Nylon 8-32	242-5040-00			eranskramen dera i gen i na die gebe
8	Entrance Gate Assembly	515-6444-00			
	Leading to the state of the sta		V.	A STATE OF THE PROPERTY OF THE	が発達性 246 日 (fyz. は S
W	NITTO STATE OF THE		P.		
	Contract of the Contract of th	and the state of t			
	Laponas arigais electron d'arivite ja Laponas arigais en la company d'altre de la company d'altre de la company d'altre de la company d'altre de la	lm)		e namicanika soyan keliaya	
		1 Sept 1 Sept 20 Sept 1 Sep		Side of the second construction of the second	THE PERSON OF TH
	Micro Widgin Acsovicer Divides (1940e)		9	1-1/2" Hex Spacer	254-5008-09
品品	SEPTEMBER OF THE PROPERTY OF T		0	#6-32 X 3/8" PPH	232-5201-00

Continued in the next column.

Assembly Drawings

Section 4 Chapter 2

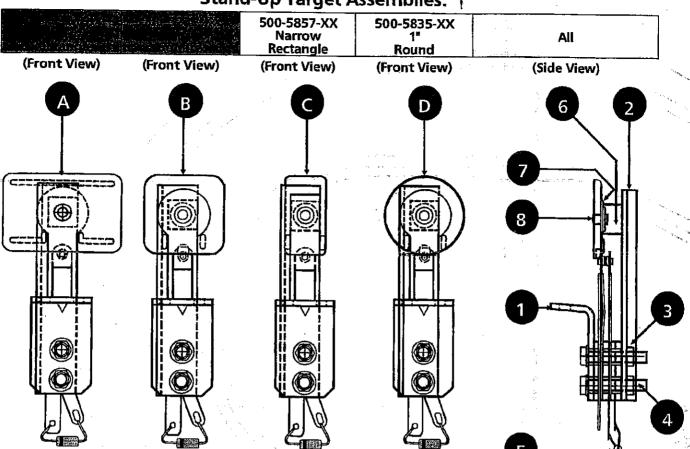

110	Switched Targo Name 12 19 53.4		M	Part Names for A. B. (C. 840)	PartNS
	国人在全国的企业。1878年,1995年,		1	Mounting Bracket	535-6896-00
	Applied to the second of the second of	in the second of the second	2	Switch Back Plate	535-6452-00
C	Sw. & Target Assy. Narrow Rectangle (Flat)	9 515-5967-XX	3	6-32 Nyloc	240-5010-00
D	Switch & Target Assembly 1" Round (Flat)	4 515-5966-XX	4	6-32 X 3/4 HWH Ser. (Type C) (Qty. 2)	237-5958-00
		·	5	Switch Diode, 1N4001	112-5001-00
† f	ems with a Ø quantity are not used in this gan re the color breakdowns for items C & D (repla	ne. The following	6	Foam Pad	626-5029-00
C	X1 ^-04, GRN", X1 "-05, BLU", X3 "-06, YEL", X	X4 "-08, WHT"	7	Washer 5/16 [™]	242-5017-00
D:	X4 "-02, RED".	<u>.</u>	8	Rivet 1/8" ø X 3/16"	249-5001-00

	Plastic Part Color Chart
· · · · · · · · · · · · · · · · · · ·	
The second secon	
	Substitution (Green Green)
	But an electric and the second state of the se
Osacine as a selection of the contract of the	208 200 Militer Committee
OP TO SEE THE STORY	
Obtack at a Blue cost	=10> Elouréscent Orange : 150 : Umilescent


Schematics & Troubleshooting

Section 5 Table of Contents

Chapter 1, Backbox Wiring	
Backbox Board Layout Wiring Diagram	89
Backbox I/O Power Driver Board Detailed Wiring Diagram	90
Chapter 2, Playfield Wiring	91
Playfield Switch Wiring Diagram	91
Playfield Lamn Wiring Diagram	92
Playfield Magnet Interface & 7-Segment Display Board Diagram	93
placifield Trough Up Kicker OPTO Theory of Operation & Schematic	14/95
Playfield Single Trough OPTO Alignment & Test	96
Chapter 3, Cabinet Wiring	97
Cabinet Power Wiring Diagram	97
Cabinet/Coin Door Wiring Diagram	98
Chapter 4, Printed Circuit Boards (PCBs)	99
2-Flipper Wiring Diagram	99
2-Flinner Theory of Operation	100
2-Flinner Circuit Troubleshooting Flowchart	101
Solid State Flinner Board Schematic	. 102
Solid State Flipper Board Component Layout	. 103
Dot Matrix & Controller Board Combined Display Connections	. 105
Display Controller Board Schematic	. 106
Display Controller Board Component Layout	
Display Power Supply Board Schematic	108
Display Power Supply Board Component Layout	เบร
Display Power Supply Board Parts	109
I/O Power Driver Board Theory of Operation	110
I/O Power Driver Roard Schematic (Sheet 1 of 5)	111
I/O Power Driver Board Schematic (Sheet 2 of 5)	112
I/O Power Driver Board Schematic (Sheet 3 of 5)	. 115 111
I/O Power Driver Board Schematic (Sheet 4 of 5)	!!4 115
I/O Power Driver Board Schematic (Sheet 5 of 5)	, , , 5 116
I/O Power Driver Board Component Layout	117
CRU/Sound Roard Theory of Operation	118
CBU/Sound Roard Schematic (Sheet 1 of 3)	119
CPU/Sound Roard Schematic (Sheet 2 of 3)	120
CPI/Sound Board Schematic (Sheet 3 of 3)	121
CPU/Sound Board Component Layout	122
CPU/Sound Board Parts	123


Your Notes	•
	<u> </u>
And the second of the second o	
and the second s	
	·
	:
en e	
	<u></u>
	<u> 20. j</u> . <u>22. j.</u>
	Allen Allen (d. 1985) Allen Allen (d. 1985)
	en e
	No. and American
of the control of the	Tall sec
And the second of the second o	
en de la companya de La companya de la co	
The state of the s	
the state of the control of the state of the control of the contro	18 x 11 % 10
the first of the second of	to the second se
	3 - 10 - 10 - 10 - 10 - 10 - 10 - 10 - 1
	<u> </u>

Backbox Wiring
Backbox Board Layout Wiring Diagram

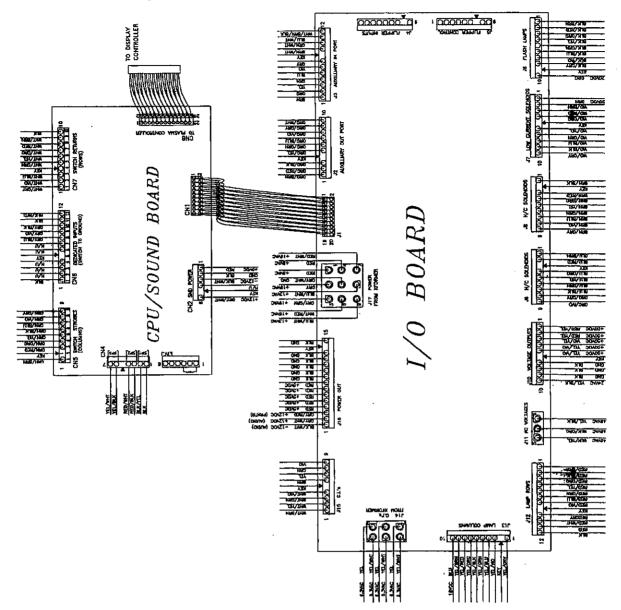




Section 5 Chapter 1

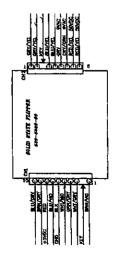


Page 89

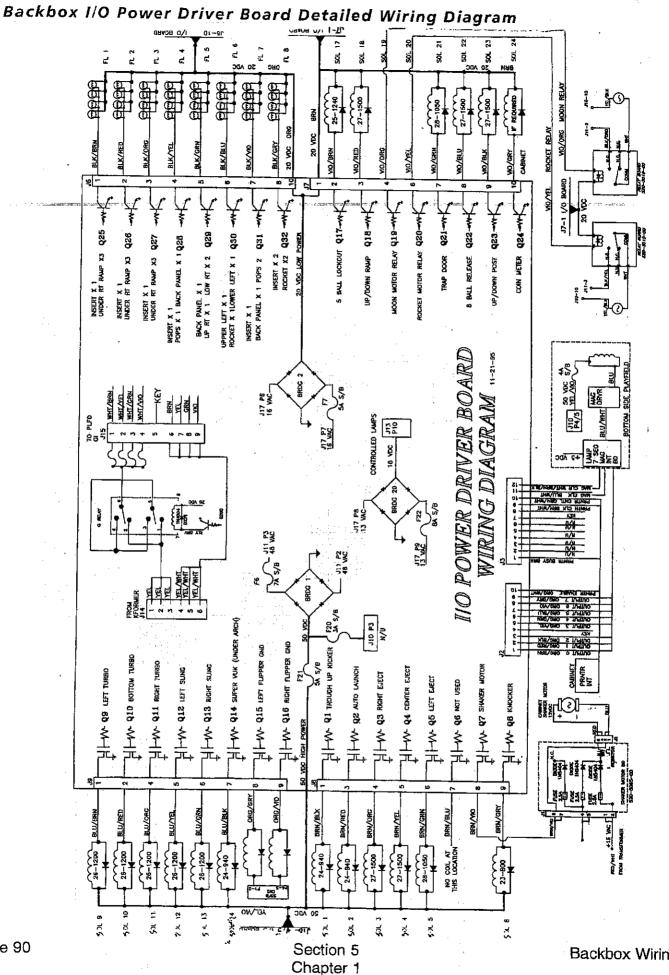

Page 90

Backbox Wiring

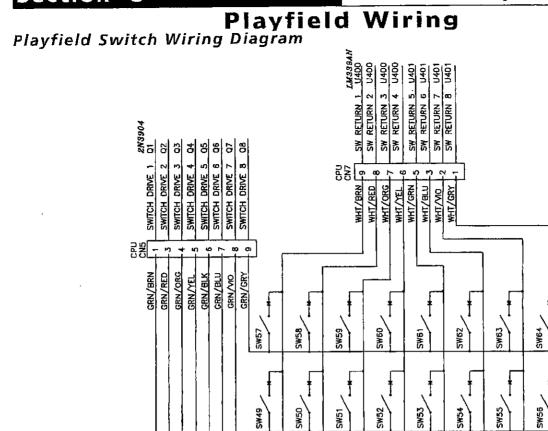

SW42

SW34

SW26

SW18

SW10

SW20

SW25

SW43

SW27

SW19

SW11

SW45

SW37

SWZ9

SWZ1

SWZB

SW20

SW12

SW46

SW3B

SW30

SW22

SW14

SW39

SW31

SW23

SW15

SW48


SW40

SW32

SW24

SW16

SWS6

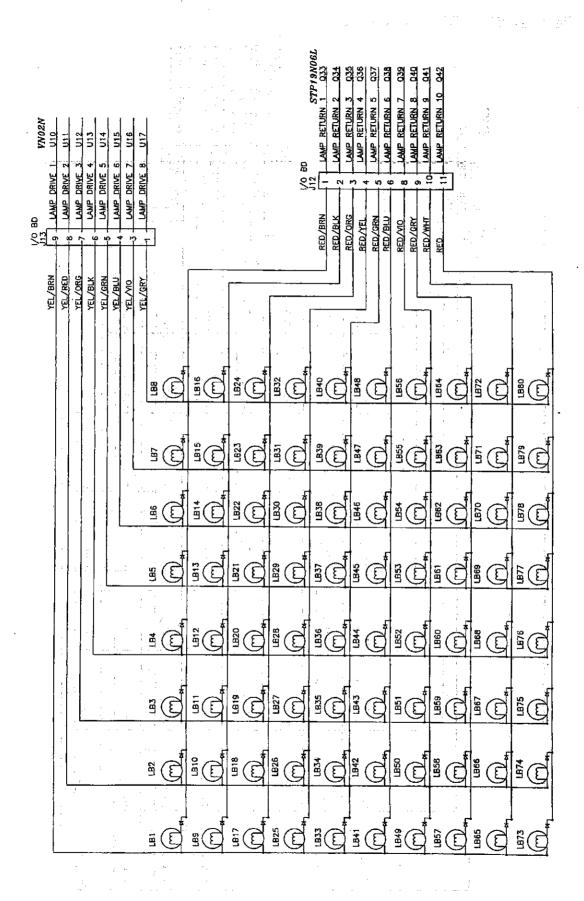


Page 92

Section 5 Chapter 2

Playfield Wiring

Playfield Magnet Interface & 7-Segment Display Board Diagram

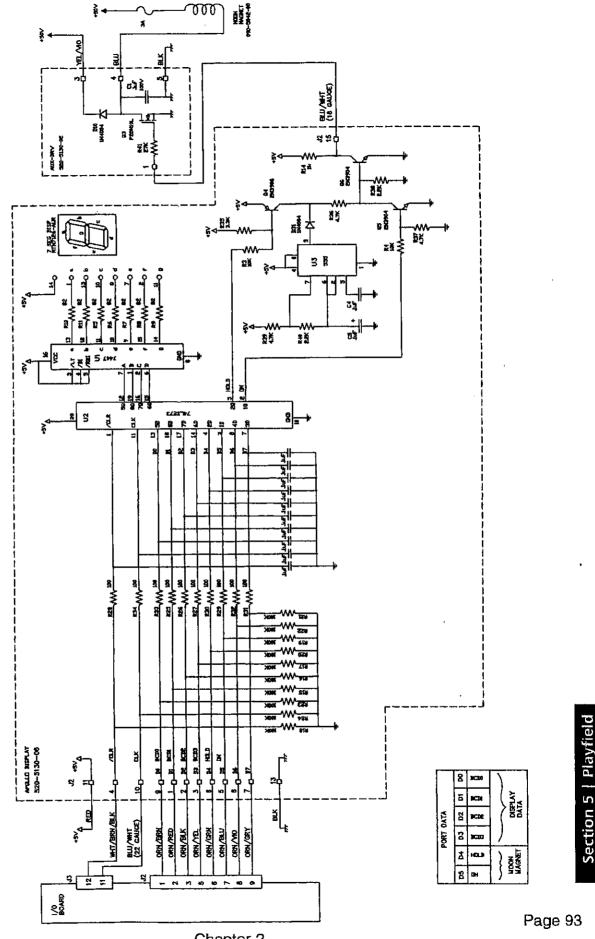

Playfield Wiring


Chapter 2

Trough Up-Kicker OPTO Theory of Operation & Schematic

Theory of Operation

As light from the Transmitter falls on the Receiver LED, it generates a Positive Bias Voltage (0.7v to 1.5v) which is applied to the gate of Q1, turning Q1 off. When Q1 is held off, no current flows through Q2's Base, the transistor is off acting as an OPEN SWITCH. When the light is interrupted (BLOCKED) R1 bleeds the gate voltage off of Q1 allowing it to conduct, switching Q2 on, which acts as a CLOSED SWITCH.

Fig. 1

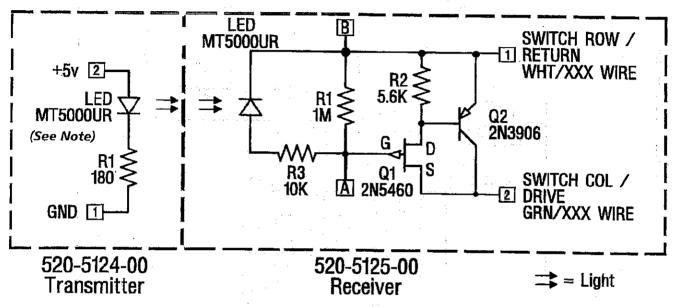

Note: The RADIO SHACK part number for the LED MT5000UR is 276-087.


Troubleshooting

(The following tests indicate normal operating conditions)

1. Volt Meter Test:

- A. OPEN OPTO (Light Falling on LED) = SWITCH OPEN. Place meter leads across points A and B (Refer to Schematic Drawing Fig. 1 above). It should read approximately 0.8 1.2v DC.
- B. CLOSED OPTO (Light Blocked) = SWITCH CLOSED. Place meter leads across points A and B (Refer to Schematic Drawing Fig. 1 above). It should read approximately 0.0 0.1v DC.

2. Oscilloscope Test:

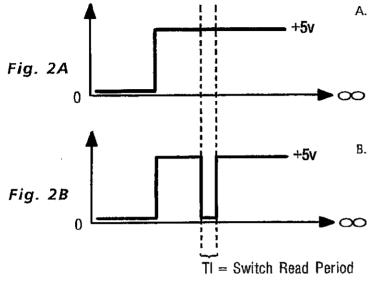


A. OPEN OPTO (Light Falling on LED) = SWITCH OPEN. Place Scope lead at Pin-1 of OPTO Rec. Bd. with Scope Grounded. (See Fig. 1). The Scope should display a STEADY +5v as shown in Fig. 2A, Wave Form Diagram.

CLOSED OPTO (Light Blocked) = SWITCH CLOSED. Place Scope lead at Pin-1 of OPTO Rec. Bd. with Scope Grounded. (See Fig. 1). The Scope should display a PULSE STREAM indicating Q2 has switched "On" as shown in Fig. 2B, Wave Form Diagram. This is your Switch Drive Pulse.

3. Bench Test (See Fig. 3 Below):


Disconnect the OPTO Transmitter / Receiver Board from the circuit. Connect one side of a 560W Pull-up Resistor to Pin-1 of the OPTO Receiver Bd. and the other side of the resistor to a 5v DC source. Connect Pin-2 to Ground. Connect a +5v DC source to Pin-1 of the Transmitter and GND to Pin-2. Align with the Receiver OPTO approximately 3" distance. Using your Volt-Meter or an Oscilloscope, monitor Pin-1 while BLOCKING and UN-BLOCKING the BEAM from the Transmitter. The output will be approximately +5v DC when the BEAM is not BLOCKED and approximately 0 volts when the BEAM is BLOCKED.

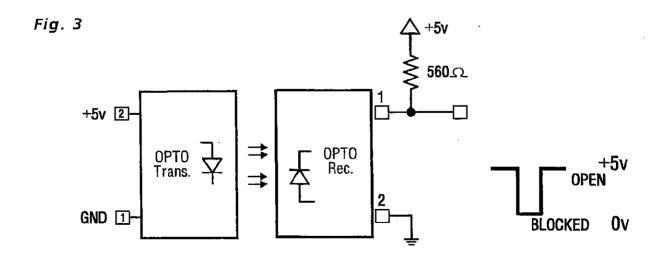


Single Trough OPTO Alignment / Test

When a working OPTO is installed and connected in a game, the transmitter should light when the power is switched on. With the playfield in Service Position #1 (playfield pulled forward resting on the playfield support brackets) and the game on, the light should show up as a "RED RING" through the back of the Receiver Board around the Receiver LED. With the game in Switch Test Mode, lifting the Trough Plunger with a fingertip should block the Beam and cause the Switch Position to trigger.


VIEW FACING TROUGH (PLAYFIELD IN SERVICE POSITION #1)

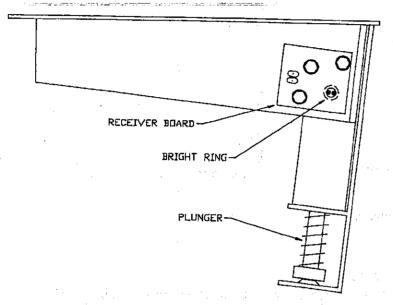


SECTIONAL VIEW FROM RIGHT

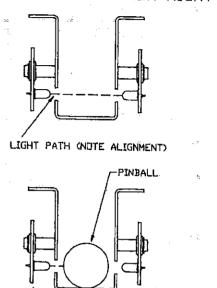


LIFT PLUNGER TO CHECK SWITCH AS SHOWN

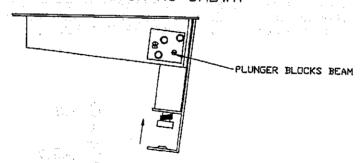


NOTE: If replacement of L.E.D. is required, insure that it is mounted correctly before and after soldering. See example below:

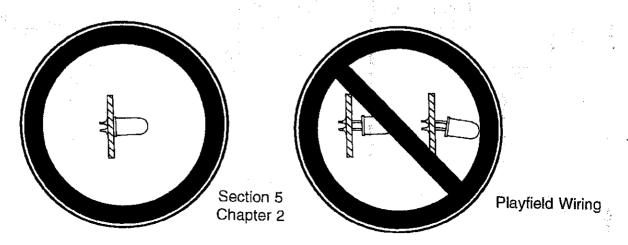


Cabinet Wiring

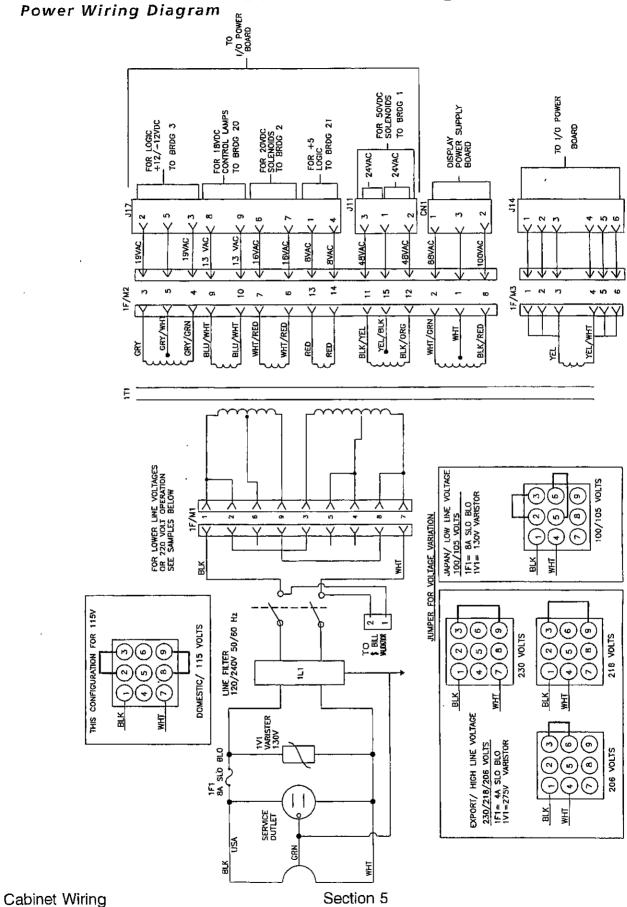

Chapter 3

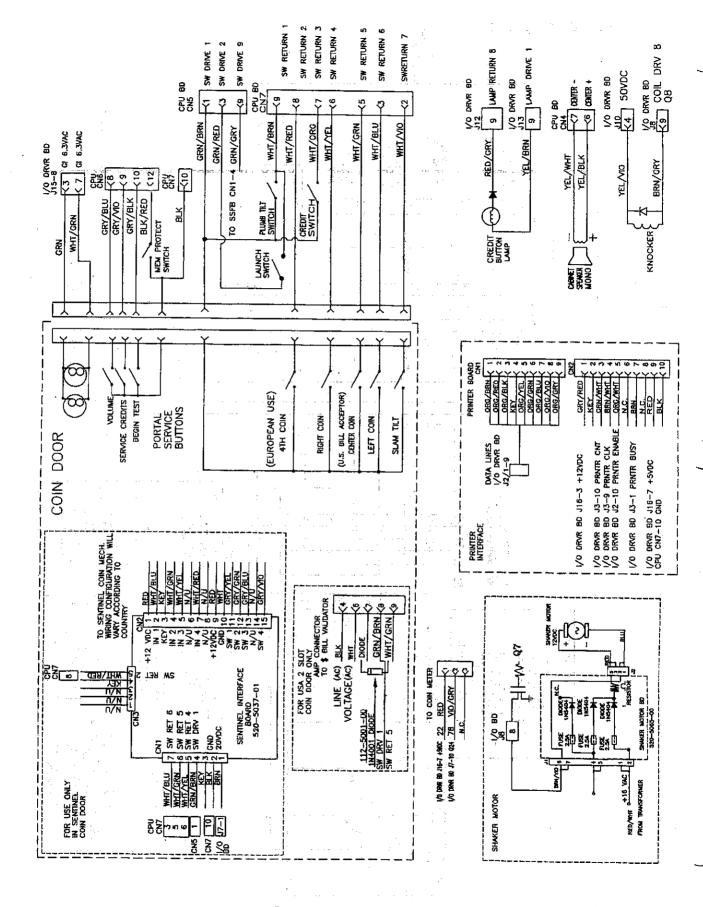

Printed Circuit Boards (PCBs) 2-Flipper Wiring Diagram

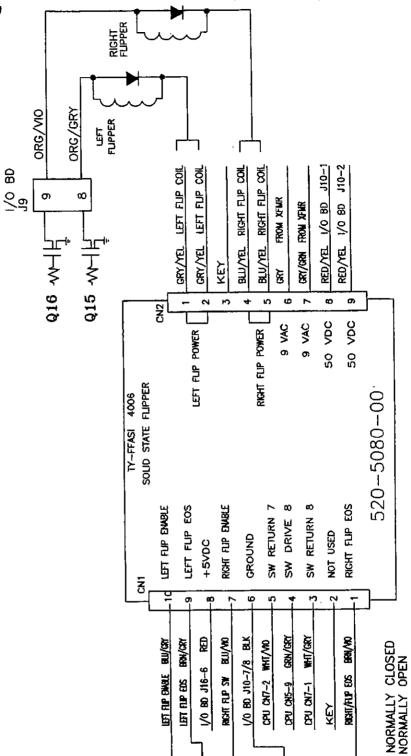

EOS N.C.

II II

O O

NOTE:

80 Y

CABINET FLIPPER SWITCHES

. О

New Solid State Flipper Board

We have redesigned our **Solid State Flipper Board (SSFB)** so that a misadjustment or failure of the **End-of-Stroke (EOS) Switch** will not affect the operation of the flippers. The flippers will still work! The **EOS** Switch is strictly an added feature, not a functional part of the circuit (see EOS Switch Theory of Operation).

Theory of Operation for the Solid State Flippers

The Solid State Flipper Board is a Multiple Flipper Solenoid Driver Circuit. Each solenoid driver circuit contains a One Shot Timer, a 50V Driver, and an 8V Driver.

Looking at one circuit, Schmidt NAND gates U1A, U1b, and U1D make up the One Shot Timer. The timer length is controlled by R10, R33 and C2. The output of the timer is gated at U1C with the buffered switch input from Q6. The output of U1C controls the 50V driver circuit consisting of Q4, Q1, Q2, Q3, and D1. As long as the flipper button is activated, Q6 will keep the 8V driver circuit, SR1, on.

The 50 volts provides the actuation power to the flipper solenoid while the 8 volts provides the holding power.

Theory of Operation for the EOS Switch

The End of Stroke (EOS) Switch used in our flipper circuit is a Gold Peened Contact, Blade Switch Assembly, mounted on the flipper assembly.

Electrically, it is connected in series with the Cabinet Flipper Switch and the Flipper EOS input on the Solid State Flipper Board (SSFB) connector CN1 which enables the 50 Volt DC Drive Circuit.

Refering to the Flipper Wiring Diagram, one side of the Flipper Cabinet Switch is connected to ground (BLK-Wire), the other side (BLU-VIO Wire) is connected to the flipper switch input on the SSFB Connector CN1 which enables your 9 Volt DC holding voltage and is connected in series to the EOS switch which is a normally closed switch.

The function of the EOS Switch is to prevent the flipper bat from being knocked back by a high velocity shot on the playfield. If while holding the flipper in the up position, the bat is moved back 1/16" or more, the EOS Switch will close giving the coil another 50 Volt pulse.

EOS Switch Adjustment

The switch contacts should be adjusted so that when the solenoid is energized, the contacts stay closed for almost the full travel of the plunger. The contacts should open 1/16" before the plunger bottoms out or reaches maximum travel.

Troubleshooting Tips


The only indication of a problem you will have is the player complaining that when the flipper bat is being held in the up position, a high velocity shot from one of the playfield solenoids causes the ball to hit the flipper bat and physically knock it back. This will not occur if the EOS Switch is working. Check switch for alignment and continuity, replace if necessary.





Note:

See the inside cover and the end of Section 3, Chapter 2, Diagnostics, for information on the Dr. Pinball option through the Portals™Service Menufor additional information and help through an additional flow chart.




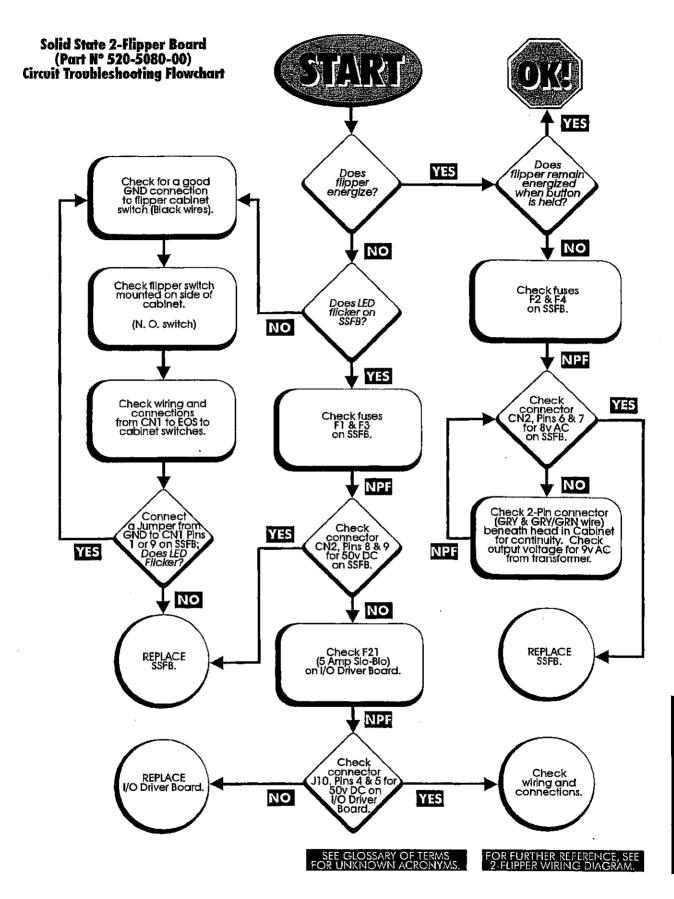

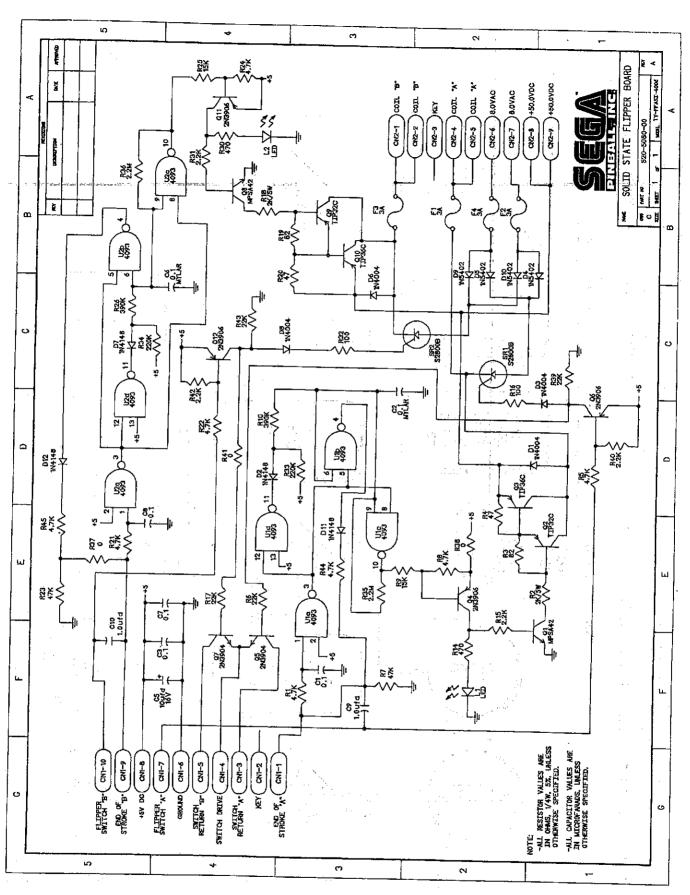

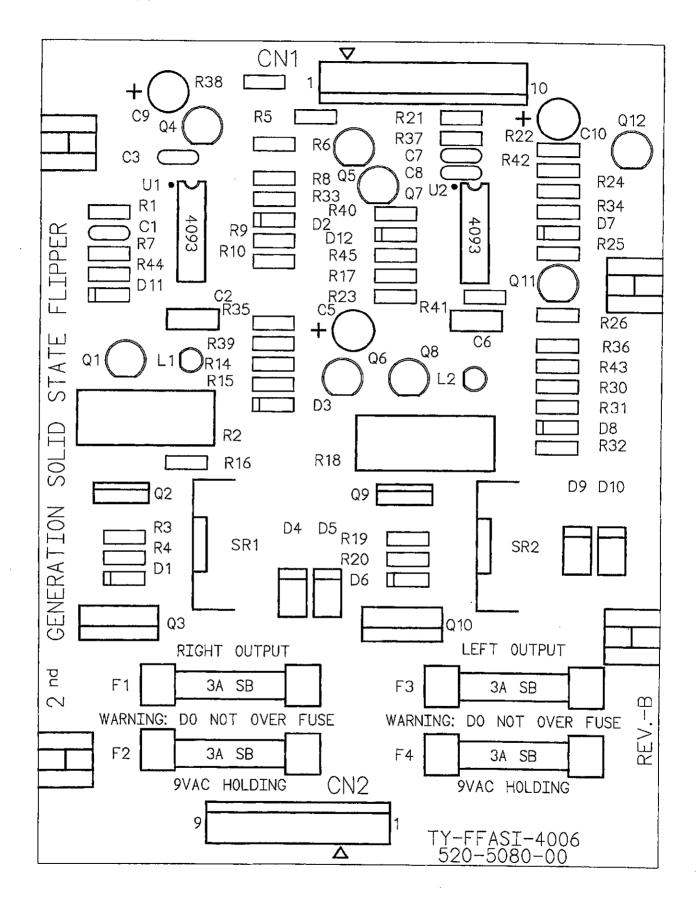


 -		
<u>:</u>		
		:
		
		· · ·
· :	The second secon	:
		· :
		<u> </u>
		· · · · · · · · · · · · · · · · · · ·
-, -		·
• .		
		:
· · ·		3.1
	The state of the s	, , ;
		<u> </u>
		- 1

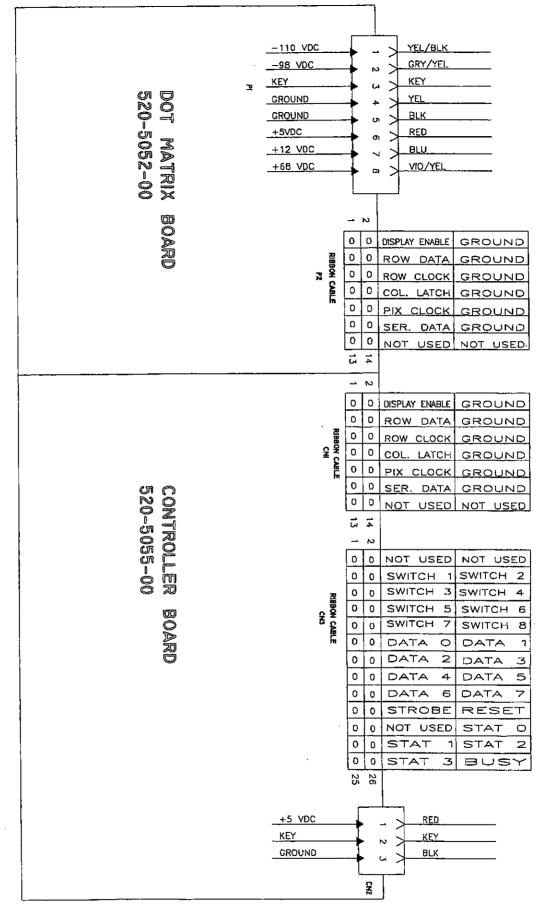



Printed Circuit Boards (PCBs)

Section 5 Chapter 4

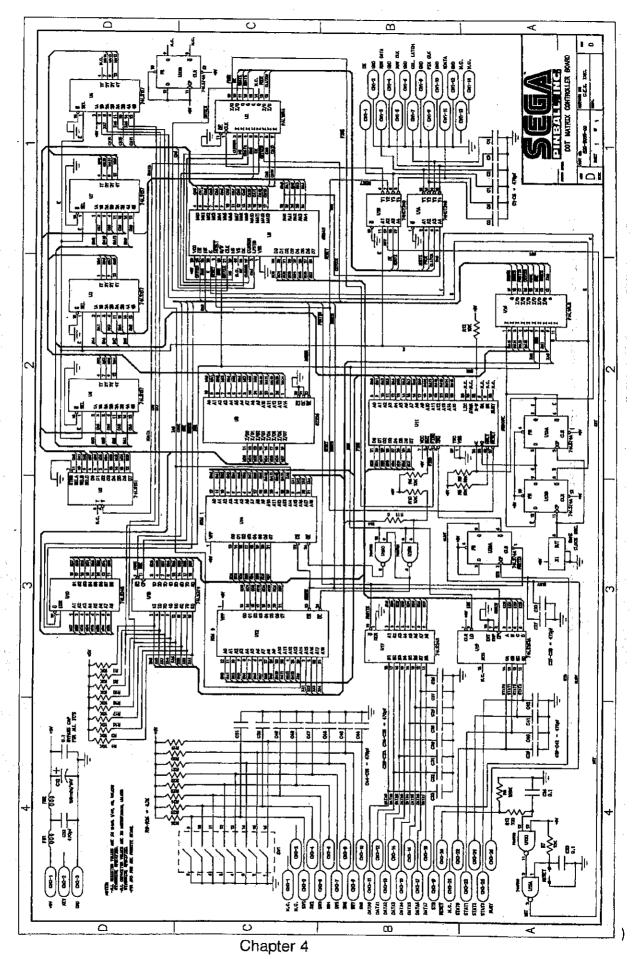


Page 106

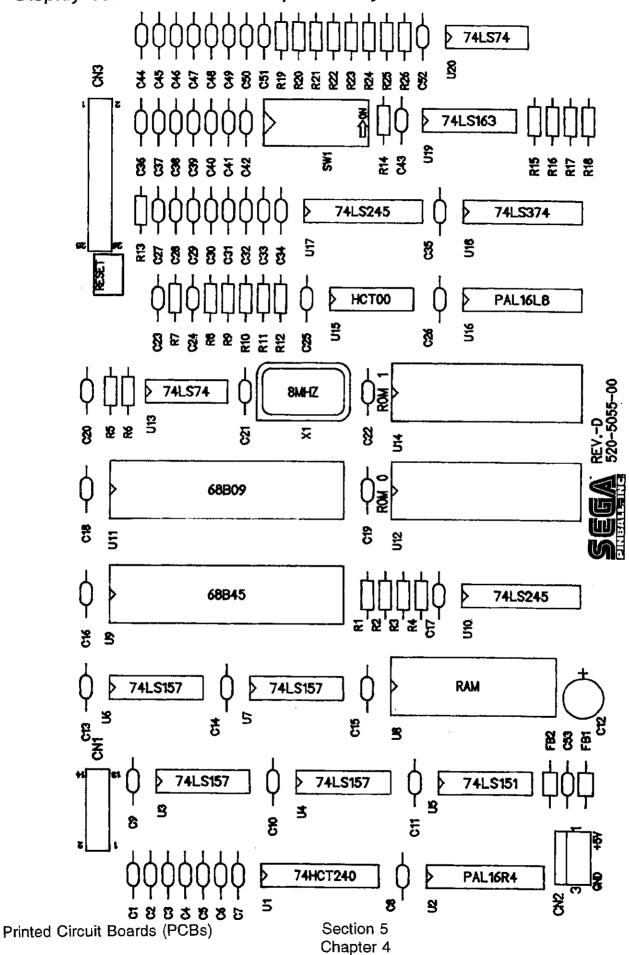

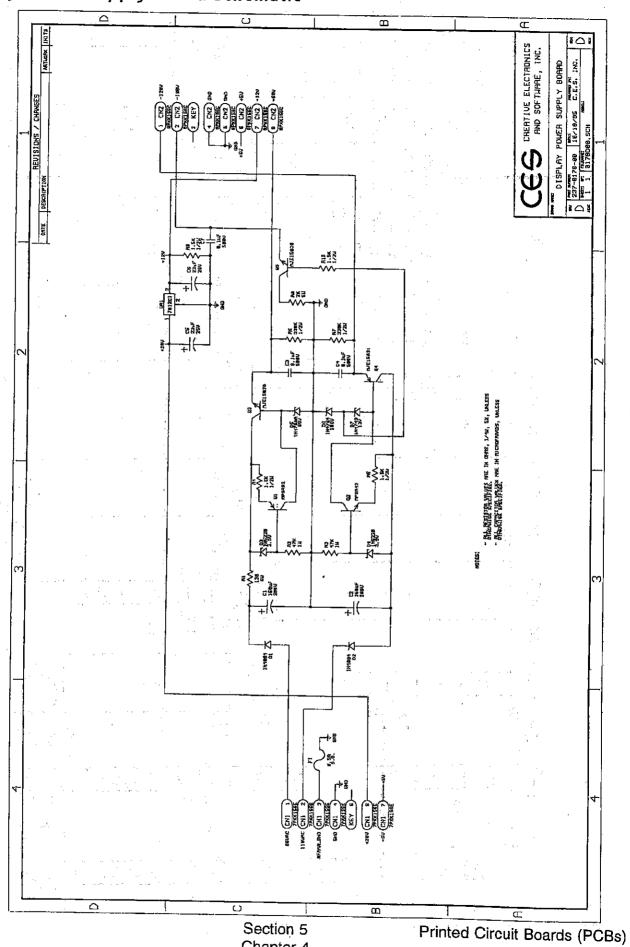

Page 108

Section 5 Chapter 4

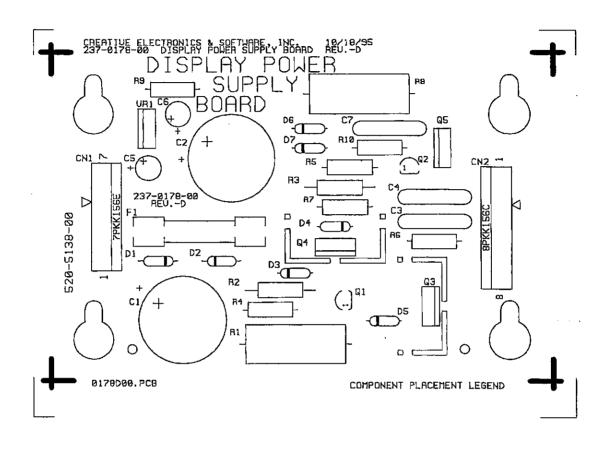

ITEM	OTY	PART NUMBER	REF-DESIGNATOR	DESCRIPTION
1234567891111111111222222 0123456789012345	122422112111113122112122	Note: Part Numbers are not yet yet availalbe.	F1 Q3 Q4 C2 C1 R10 R9 R5 R4 R7 R6 R2 R3 R1 R8 D3 D4 D5 D6 D7 Q1 Q2 C3 C4 C7 Q4 Q3 Q5 C5 C6 VR1 CN2 CN1 Q3 Q4 F1	S.B. 0.5A HEATSINKS - AAVID #563002 200V 150uF RADIAL LYTIC 1/2W 330K 1W 47K 5W 130 5W 2K 3.9V 5228 68V 4760A 100V 4764 13V 4743 MPSA92 MPSA42 500V 0.1uF CERAMIC DISK MJE15030 25V 22uF RADIAL LYTIC 7812CT 8pkk156 (PIN3=KEY) 1N4004 7PKK156E (PIN5=KEY) 6/32 K2Y NUT 6/32 X 3/8 SCREW FUSECLIPS

5V Supply:

An AC voltage of approximately 9V comes into the board at [J17-(14)]this AC voltage is then full-wave rectified by bridge BRDG21 and filtered by capacitor C203. The resulting voltage is 11VDC which is inserted into a linear voltage regulator for the output of 5VDC. This 5V regulated voltage can be adjusted by potentiometer R116 the voltage should be set to 5.00V. Besides powering the I/O board the regulated 5 volts supplies power to the CPU & Sound Board Gas Plasma Display and Plasma Controller Board. Power for these devices comes off the I/O on [J16-(4-8)].

+5 +12 +50V +18V +20V LED Indicators:

These DC voltages are derived on the I/O board by rectification and filtering. Each has a LED indicating that power is being supplied to each of these voltage sources. The -12V supply comes from the same transformer winding as the +12V thus it does not have a led indicator. ** Note that the +50V &+20V power sources are turned off by the interlock switches when the coin door is open.

LED	Supply Voltage	LED	Supply Voltage
L2	+5	L200	+20V
L201	+50V	L202	+18V
しつの3	±12\/		

Reset Circuitry:

The I/O will reset in three cases:

1. The CPU is in reset. The CPUÆs reset signal is fed into the I/O through connector J1 and forces the I/O into reset.

2. The 5V supply has fallen bellow 4.75V.

3. The watchdog is not being fed by the scanning of the light matrix. More specifically pin 19 of U6 must be toggling once every 50ms to prevent the watchdog from resetting. The scanning of the light matrix is controlled by the CPU through J1.

LED L204 shows the reset state of the I/O board. If this LED is not lit either the 5VDC is below 4.75V or the CPU board is holding the I/O in reset. If the LED is flashing this means that the watchdog is not being feed by the CPU board and the I/O is oscillating into and out of reset. If the LED is continuously on the board is out of reset and communication from the CPU to the lamp matrix is confirmed. Testpoint Blanking is the actual reset signal on the I/O. A low voltage indicates that it is in reset this will turn off all Solenoid drivers Flash Lamps Lamp Matrix Drivers Auxiliary Outputs and Flipper Outputs. A high voltage indicates that it is out of reset and normal operation can take place.

Address Decoding:

All Address decoding is done by two 74LS138 (1 of 8 decoder). Both of these must be in operation for the I/O to function properly.

Solenoid Drivers & Flash Lamps:

J8 & J9 are low side drivers for driving solenoids and other heavy loads. Each connector has its own buffer driving 8 drivers. J8 & J9 consist of MOSFET drivers 20N10L which can easily & safely be tested by clipping one end of a clip-lead to test point FET TPL1 and then the other to the corresponding gate resistor R1-R16 (see note 1). This will apply 3.4V to the gate of the MOSFET transistor thus switching it on. J7 & J6 each are a bank of 8 low side driver for driving lamps or other lower current solenoids. They use a bipolar power transistor TIP122 which can also be tested by using test point TIP TPL3 and the corresponding resistors R17-R32 (see note 1).

Note 1 * Clip on the resistor side with the white stripe.

** R1 controls Q1 and R2 controls Q etc...)

Auxiliary In & Out:

J2 8 CMOS Outputs sometimes used for a printer interface.


J3 8 CMOS Inputs general purpose inputs.

Lamp Matrix:

J12 has 10 low side drivers for the lamp strobes which consist of 19N06L MOSFETS. Only one lamp strobe should be low at any time. Again the scanning of the lamp strobes keeps the I/O from resetting. J13 has 8 high side drivers with each having a status indicator. All the status indicators are logically 'OR'ed together and fed back to the CPU. The status can identify open loads (for example open lamp filaments or intermittent connections) and short circuits. These drivers are also short-circuit protected.

General Illumination (GI lamps):


J15 has 6VAC switched on and off by a relay on the I/O. The relay is controlled by Q200 which supplies power to the 24V coil winding to activate the relay. There are 4 taps on J15 each fused at 5A for this 6VAC source.

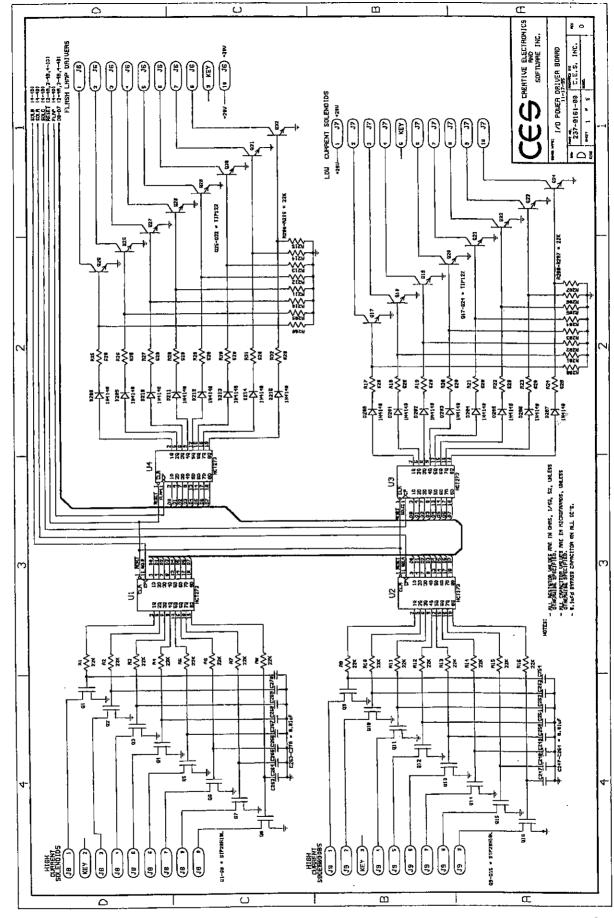

Printed Circuit Boards (PCBs)

Section 5 Chapter 4


Page 111

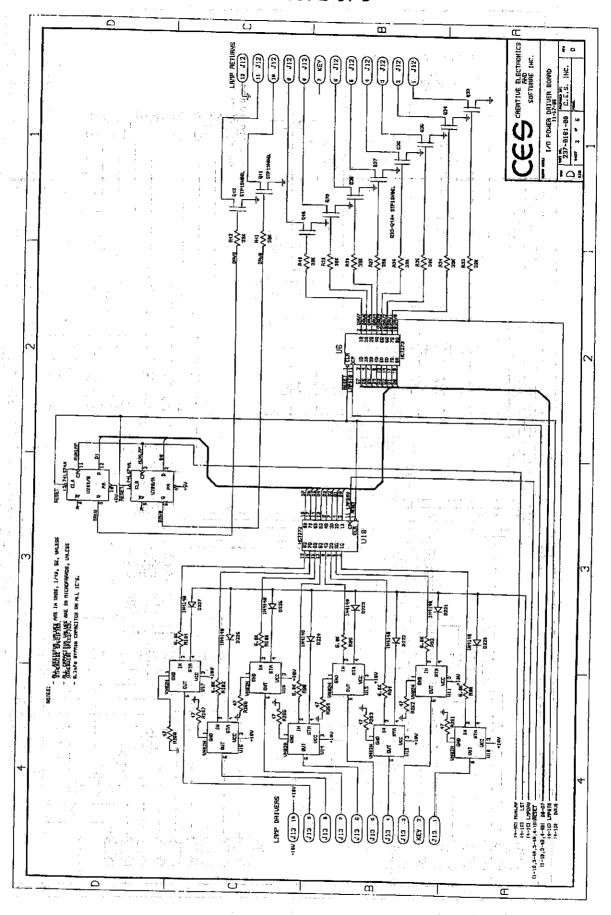

Page 112

Section 5 Chapter 4


Printed Circuit Boards (PCBs)

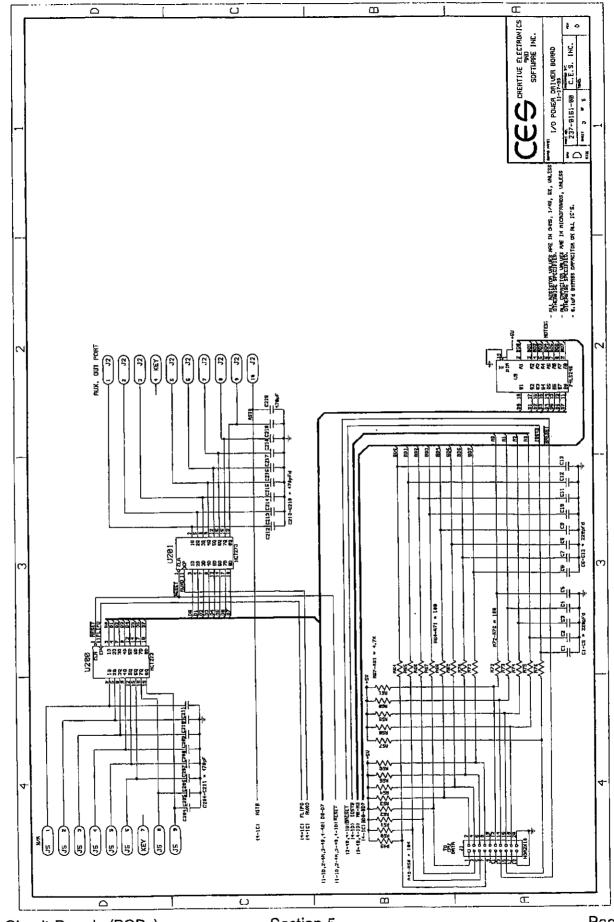

Printed Circuit Boards (PCBs)

Section 5 Chapter 4


Page 113

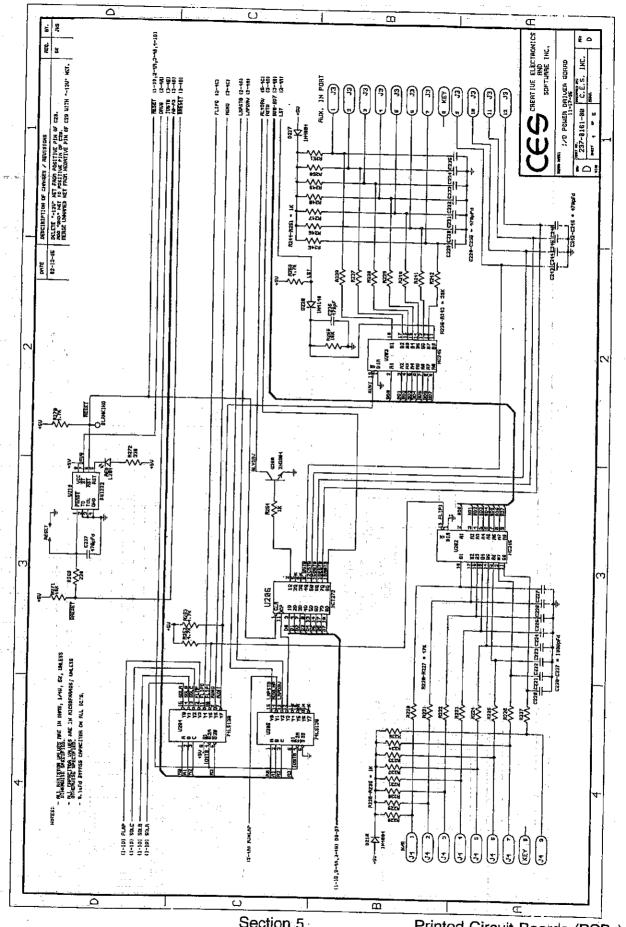

Page 114

Section 5 Chapter 4


Printed Circuit Boards (PCBs)

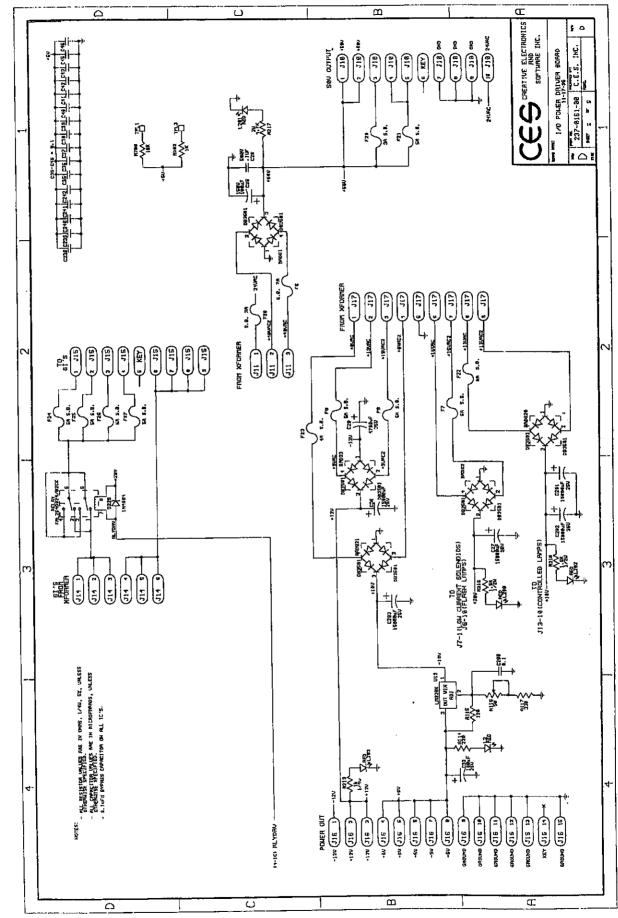

Printed Circuit Boards (PCBs)

Section 5 Chapter 4

Page 115

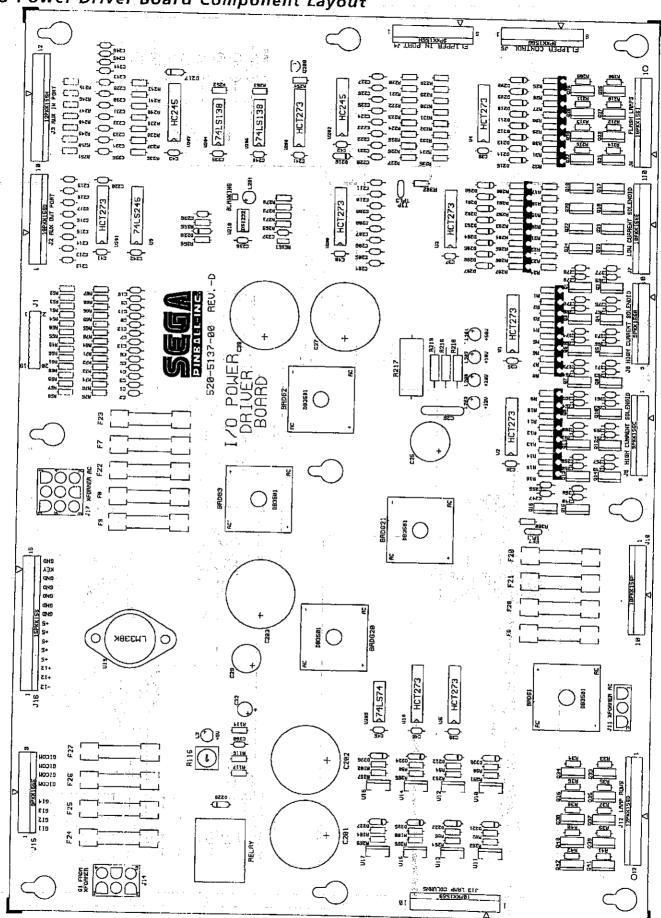

Page 116

Section 5 Chapter 4

Printed Circuit Boards (PCBs)

I/O Power Driver Board Parts DESCRIPTION REF-DESIGNATOR C260 C259 C258 C257 C256 C278 C271 C255 C261 C262 C277 C276 C275 C274 C273 C272 C204 C206 C207 C208 C209 C210 C211 C235 C234 C228 C229 C230 C231 C232 C233 C219 C217 C216 C215 C214 C212 C213 C237 C218 C236 C205 C243 C245 C246 C244 C263 C264 C265 C270 C269 C268 C267 C266 C247 C254 C253 C252 C251 C250 C249 C248 C7 C8 C9 C10 C11 C12 C13 C1 C2 C3 C4 C5 C6 C227 C226 C220 C221 C222 C223 C224 C225 C35 C36 C37 C38 C39 C40 C41 C42 C43 C45 C46 C200 C239 C238 C240 C241 C242 Q1 Q2 Q3 Q4 Q5 Q6 Q7 Q8 Q16 Q15 Q14 Q13 Q12 Q11 Q10 Q9 R2 R3 R4 R5 R6 R7 R8 R16 R15 R14 R13 R12 R11 R10 R9 R200 R201R202 R203 R204 R205 R206 R207 R215 R214 R213 R212 R211 R210 R209 R208 R1 R17 R32 R18 R19 R20 R21 R22 R23 R24 R31 R30 R29 R28 R27 R26 R25 R237 R236 R40 R39 R38 R37 R36 R35 R34 R33 R238 R239 R240 R241 R242 R42 R41 R64 R72 R73 R74 R75 R76 R71 R70 R69 R68 R67 R66 R65 R90 R92 R94 R96 R98 R100 R102 R104 R115 R271 R270 R222 R223 R224 R225 R226 R227 PART NUMBER REF-DESIGNATOR OTY ITEM Note: Part Numbers 100V 104 (0.1uF) 16 1 471 (470pF) are not yet available. 2 30 103 (0.01uF) 3 16 221 (220pF) 102 (0.001uF) 104 (0.1uF) 13 8 6 17 20N10L 7 16 22K 8 32 620 9 16 39K 17 10 100 13 11 6.8K 8 R115 R221 R220 R222 R223 R224 R225 R226 R227 R254 R248 R249 R250 R251 R232 R246 R247 R245 R233 R234 R235 R230 R231 R228 R229 R302 R262 R261 R263 R264 R265 R266 R267 R268 15 17 R269 R114 R57 R58 R59 R60 R61R252 R253 R256 R270 R49 R271 R56 R55 R54 R53 R52 R51 R50 R255 R300 18 19 10K 330 HCT273 201 222 223 223 223 223 223 230 <u>06 04 018 02 01 0200 03 0201 0206</u> DO NOT STUFF 1/4W 1K 1/2W 1.5K S.B. 5A S.B. 7A RESET R219 R218 R216 F24 F25 F26 F27 F8 F9 F7 F21 F23 F22 S.B. 8A S.B. 3A F20 F28 5.B. 3A 9PKK156 (PIN 5=KEY) 15PKK156 D51232 2N3904 25V 100uf RADIAL LYTIC 20 PIN 0.1 DUAL ROW HEADER 31333333335 116 U210 0200 C32 บ่202 บ203 HC245 19N06L 36 37 38 39 041 033 034 035 036 037 038 039 040 042 1203 1202 1204 1200 12 1201 10 TENUCE TOPKK156 (PIN 4=KEY) OHM POT TIP122 J2 R116 023 022 021 020 019 018 026 027 028 029 030 031 032 017 025 024 41 16 150V 100uF RADIAL LYTIC C25 U9 C29 74LS245 35V 4700uF RADIAL LYTIC FRL264D024/02CK RELAY 9PKK156 (PIN 7=KEY) RELAY 45 J5 U209 9PKK156 (PIN 8=KEY) 9PKR156 (PIN 8=KEY) 74LS138 500V .1UF CERAMIC DISK LM33 8K DB35 01 25V 15000uF RADIAL LYTIC U204 U205 49 50 C26 BRDG20 BRDG3 BRDG1 BRDG2 BRDG21 D202 C203 C201 C30 C27 D208 D225 D226 D221 D220 D223 D227 D224 D222 D200 D201 D202 D203 D204 D205 D206 D207 D209 D210 D211 D212 D213 D214 D215 D228 D217 D216 D229 53 54 25 1N4004 TEST POINT LOOPS 10PKK156 (PIN 5=KEY) 10PKK156 (PIN 9=KEY) 10PKK156 (PIN 9=KEY) VN02N 10-84-4030 (3 PIN MOLEX) 12PKK156 (PIN 7=KEY) 10-84-4090 (9 PIN MOLEX) TEST POINT - DO NOT STUFF 2W 4.7K SANDBAR 10PKK156 (PIN 2=KEY) 10-84-4060 (6 PIN MOLEX) 10PKK156 (PIN 6=KEY) 12PKK156 (PIN 8=KEY) 9PKK156 (PIN 3=KEY) 9PKK156 (PIN 3=KEY) FUSECLIPS 59 60 61 Ñ17 U16 U15 U14 U13 U12 U11 U10 Ğ2 117 BLANKING R217 64 65 J14 J10 J3 66 69 70 71 18 FUSECLIPS

U19

HEATSINK

CPU Section:

The CPU is a 68B09E (U209) with up to 8Mbytes of CPU code space (U210). The CPU code is bank selected by the use of U211and each bank consists of 16Kbytes. 8Kbytes of RAM (U212) is available to the CPU. The RAM is battery backed and has a write protected area. Battery back up is accomplished by 3-AA Cells which have a test point VB to check the battery voltage status. The write protected area consists of 512 Bytes used for storing game settings. This section of RAM can only be written to when the coin door is open. The coin door switch comes into the CPU on CN6-12 and is fed into the address decoding PAL U213. When this memory protect signal is low writes to the protected RAM area are prohibited. Address decoding for the system is accomplished by one PAL U213 and one 1-of-8 decoder U214.

A watchdog is used to monitor the CPU and the 5V supply. If the 5V supply is below 4.75 the watchdog will hold the CPU board & I/O board in reset. The watchdog must be fed at a rate of 250ms or faster. The signal used to feed the watchdog comes from the EPROM bank select signal used to load U211. The CPU has a timer interrupt used as a heartbeat for the system this signal comes from counter U2. The clock for this counter is the CPU Q clock. Clearing the timer interrupt is done by reading the DIP switch. The timer interrupt can be observed at test point FIRQ. In normal operation "FIRQ" should be toggling at a rate of 976Hz.

The I/O interface CN1 is buffered by 2 HC245 chips. The CPU's reset line is buffered by Q10 and fed over to the I/O through CN1. An I/O strobe signal is feed through CN1-15 and is used to notify the I/O that a valid address is being sent.

Switches:

The switch-matrix consists of 8 2N3904 transistors which pull one of eight stobes low to activate a single column of switches. The switch return signals are fed into CN7 and are highly filtered and compared to a 2.5V reference voltage. The switch return voltage must be below 2.5V to make a valid switch closer. If false switches are appearing check that none of the 2N3904 transistors are permanently pulling the strobe line low. Only one strobe from CN5 should be low at any time. CN6 is a dedicated bank of input switches. Switches connected to CN6 are connected to ground instead of a strobe and may be read at any time.

Plasma Interface:

The data path for communication to and from the plasma controller is 8bits wide. There are separate input and output busses. The input bus from the plasma controller to the CPU comes in on [CN8-(3-10)] and is fed into U200 for input to the CPU's data bus. Data going out to the controller comes from the CPU's data bus through U201 and onto [CN8-(11-18)]. Status back from the plasma comes in on [CN8-(22-26)]and is fed into U202 for input to the CPU's data bus. Two control signals that go out to the plasma controller are PRES (Plasma Reset) and PSTB (Plasma Strobe). Plasma Reset is software controllable through U216/B and also has a test point "Plasma Reset". The Plasma Strobe signal to the controller is generated from U216/A and is used to latch data into the plasma controller.

Sound Section:

The audio section consists of a BSMT sound chip U9 Sound EPROMs (U17 U21 U36 U37) 68B09E U6 and Sound Code EPROM U7. The BSMT latches sound EPROM addresses in U13 & U12 for output to the Sound EPROMs. Sound Data from the EPROMs is read through U19 to the BSMT. The EPROMs are bank selected by U22. When the BSMT has sound data to be played out to the speakers it loads 16 bits into a 16 bit shift register made up of U24 & U23. The data stream from the shift register is serially shifted into a stereo 16 bit Digital to Analog Converter (DAC). When the system is operating properly the ws(word select) input of the DAC will be toggling. The ws input is used to latch the right and left channel sound data into the DAC. If the ws line is not oscillating no analog signal will come out of the DAC. The DAC outputs are a controlled current source. These outputs are converted to a voltage by an operational amplifier U30 to form the analog signal. Test points AOR and AOL are the outputs of the operational amplifier. These outputs are then fed directly into three power amplifiers (TDA2030A) or optionally into an analog volume control chip U35 for a potentiometer volume control. The analog section has its own +5V & -5V derived from VR1 & VR2. These separate supply voltages are for the DAC U26 Operational Amplifier U30 and analog volume control U35.

Sound calls are made from the CPU's 68B09E U200 to the sound section by latching data into U5. The sound section's CPU 68B09E (U6) reads in this data and handles the interfacing to the BSMT.

Other Test Points:

E & Q - The CPU signals for both 68B09E processors. Should be at 2Mhz with Q leading E by 500 nsec.

24Mhz - The oscillator used for the BSMT & derivation of E & Q.


SND-FIRQ - The sound sections CPU interupt.

6Mhz - This clock is generated internally on the BSMT and is used for shifting the data samples into th DAC.


Page 118

Section 5 Chapter 4

Printed Circuit Boards (PCBs)

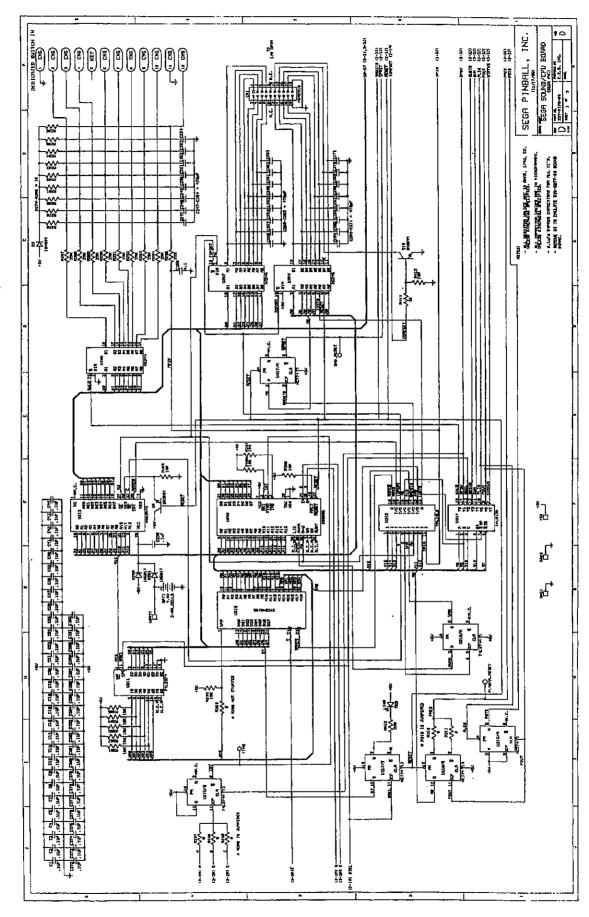


Section 5 Chapter 4

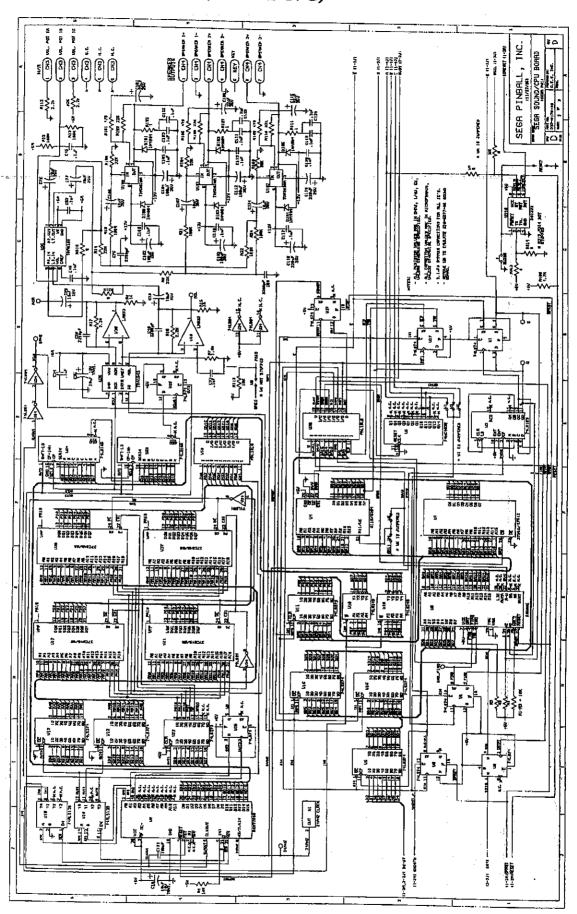


Page 120

Section 5 Chapter 4

Printed Circuit Boards (PCBs)

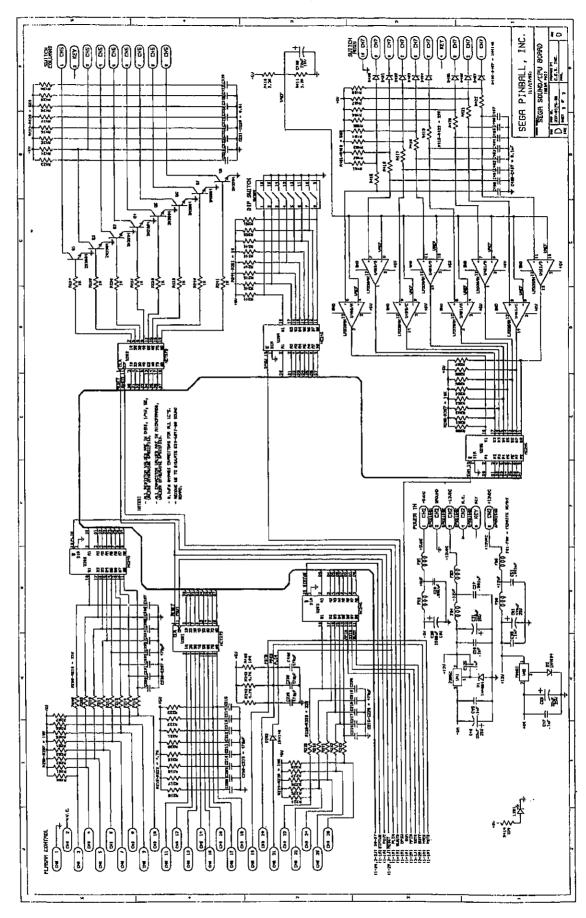

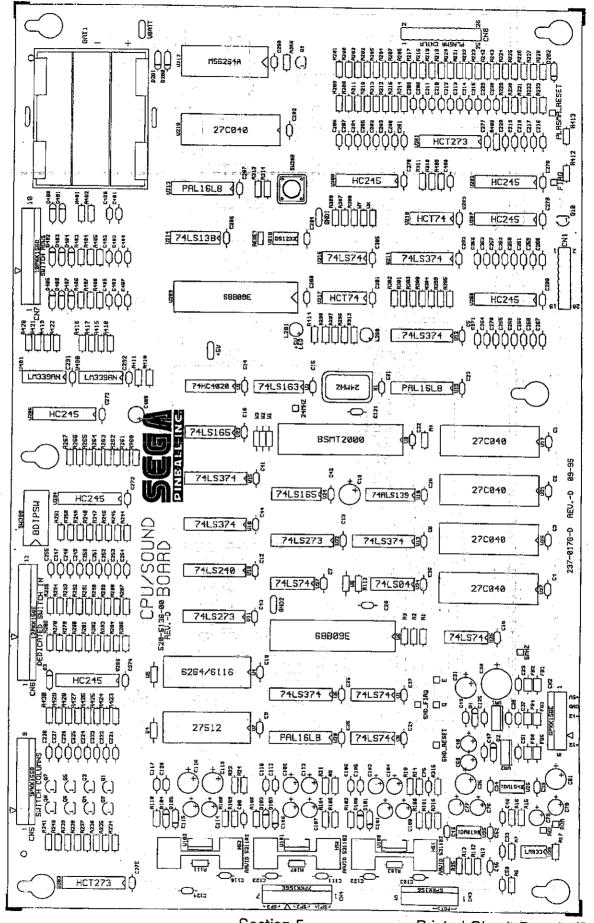

Page 122

Section 5 Chapter 4

Printed Circuit Boards (PCBs)

CPU/Sound Board Parts

		o board ra		DESCRIPTION
ITEM	QTY	PART NUMBER	REF-DESIGNATOR	DESCRIPTION
1 2 3	1 6	Note:	VR2 R13 R24 R21 R12 R19 R22	7805 100K
3 4	3 46	Part Numbers	R111 R103 R107	1 10K
4	40	are not yet available.	R4 R3 R2 R1 R113 R306 R301 R302 R303 R305 R304 R299 R296 R298 R297 R247 R248 R249	TOIC
			R251 R250 R246 R245 R244 R266 R267 R265 R264 R263 R228 R227 R226 R225 R224 R200	
			RZ01 RZ02 RZ03 RZ04 RZ05 RZ06 RZ07 RZ62 RZ61 RZ60 R409 R413	
5 6	7 20		R14 R104 R110 R102 R100 R106 R9	22K 1K
b	20		R15 R8 R241 R240 R239 R238 R237 R236 R235 R234 R278 R279 R280	
7	4		R281 R282 R283 R285 R286 R284 R412 R25 R17 R16 R112	2.2K
8 9	1 3		R7 R105 R101 R109	1.5K R470
10	9		R108 R294 R293 R292 R291 R290 R289 R288 R287	39K
11	1		R312 R311 R310 R307 R309 R308 R300 R313 R316	330 0
12	12		R315 R314 WX WY	•
13	23		R295 R229 R230 R231 R232 R233 R215 R214 R213 R212 R211 R210	220
			RZ09 RZ08 R414 R422 R421 R420 R419 R418 R417 R416 R415	
14	11		R417 R416 R415 R223 R222 R221 R220 R219 R218 R217 R216 R243 R242 R400	4.7K
15	16		R408 R407 R406 R405 R404 R403 R402 R401	560
16	2		R430 R429 R428 R427 R426 R425 R424 R423 R411 R410	3.3K
17 18	1		U3 U7	74LS163 27512
19 20	1		CN4 RESET	7PKK156 (PIN5=KEY) DO NOT STUFF
21 22	รู่		U37 U36 U21 U17 U210	27C040
23	1 5 2 4 5 3 4 1		024 023 C76 C78 C79 C77 C59 C101 C108 C115 C40 C100 C107 C114 C102 C104 C109 C112 C409	25V 10uF RADIAL LYTIC 25V 22uF RADIAL LYTIC
24 25	3		C100 C107 C114	35V 10uF RADIAL LYTIC
26 27	4 1		C102 C104 C109 C112 C409	25V 100uF RADIAL LYTIC 16V 22uF RADILA LYTIC
28 29	1		U35 C30	TDA1899 16V 1000uF RADIAL LYTIC
29 30 31	1		งั่34 งาช	74LS04 74ALS139
32	6		บี i 6 บาว บา 3 บา 5 บ2 1 1 บ 5 บ 2	74LS374 74HC4020
33 34	1		U10	74LS240
35 36	2		W2 W3 W1 W4 W5 W6 C81 C31	25V 470uF RADIAL LYTIC
37 38	2 2		C10 C35 C116 C119	16V 10uF RADIAL TANT. 25V 220uF RADIAL LYTIC
39 40	1		CN2 X1	6PKK156 (PIN 5=KEY) 24MHZ
41 42	16116222111353		U9	TM \$32 01 0 PA L 1 6 L 8
43	5		U19 U20 U213 U27 U1 U25 U8 U215	74LS74
44 45	81		C29 C37 C51 C2 C12 C13 C14 C15 C20 C1 C42 C24 C32 C28 C43	102 (0.001 uF) 104 (0.1uF)
			C16 C103 C23 C27 C52 C36 C21 C26 C39 C47 C105 C120 C44 C46 C34 C25 C4 C19 C8 C41 C49	
			C3 C33 C9 C38 C18 C106 C45 C7 C118 C110 C122 C124 C113 C123 C5 C117 C111 C125 C290 C289	
			C124 C113 C123 C5 C117 C111 C125 C290 C289 C288 C287 C286 C285 C284 C283 C282 C281 C280 C279 C278 C277 C276 C275 C273 C272	
			C255 C274 C292 C291 C407 C406 C405 C404	
46	1		C400 C403 C401 C402 C121	101 (100pF) 222 (0.0022uF)
47 48	4 48		C48 C50 C75 C80 C270 C269 C268 C267 C271 C265 C266 C262	471 (470pF)
		•	C261 C260 C259 C263 C256 C257 C258 C249 C248 C247 C254 C250 C251 C252 C220 C219	
			C218 C217 C216 C215 C213 C212 C211 C210 C209 C208 C200 C201 C202 C203 C205 C206	
40			C207 C230 C229 C253 C214 C204 C264 C408 C221 C222 C223 C225 C226 C227 C228 C224	103 (0.01uF)
49 50	8 1		CN3	6PKK156 '
51 52	1 2		U30 U22 U11	LM833 74LS273
53	9		D1 D100 D2 D103 D104 D101 D105 D102 D3 D201 D200	1N4004 1N5817
54 55	2 9 2 9 6	,	D407 D406 D405 D404 D403 D402 D401 D400 D202 FB6 FB4 FB5 FB2 FB1 FB3	1 N 41 48 FB
56 57	1		VR1	7905 TDA2030V
58 59	3 1		U102 U100 U101 U26	TDA1543
60	1		SW200	B3F4000

THIS PARTS LIST IS CONTINUED ON THE NEXT PAGE.

CPU/Sound Board Parts Continued

ITEM	QTY	PART NUMBER	REF-DESIGNATOR DESCRIPTION
6623456678990123456789901234567899012345678990123456789901234567899012	1 1 2 1 1 1 1 1 1 1 1 1 1 1 1 2 7 1 1 1 1	Note: Part Numbers are not yet available.	L200 L201 RED LED L201 RED LED L201 RED LED L217 U216 U217 U216 U218 U212 MS6264A U209 U6 BAT1 BATTERY HOLDER CN1 GMHZ AOR Q AOL 24MHZ Q9 Q3 Q4 Q5 Q6 Q7 Q8 Q1 Q2 Q10 CN5 U201 U203 U201 U203 U207 U206 U202 U200 U205 U208 U204 U218 CN8 CN7 CN8 CN7 CN9 CN7 CN9 CN8 CN7 CN9 CN8 CN7 CN8 CN7 CN8 CN8 CN7 CN8 CN7 CN8 CN8 CN7 CN8 CN8 CN7 CN8 CN8 CN9 CN9 CN6 CN8 CN9 CN9 CN6 CN8 CN7 CN8 CN8 CN8 CN7 CN8 CN8 CN9
			10 10 MAND 23 (102

Your Notes	and the second of the second o		
		 	·
		 :	
			1
14 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		 .1	
2 (1) (2) (2) (2) (2) (2) (2) (2			
p (변부 - 편) 1 보기			•
10000000000000000000000000000000000000	and the state of t		
		 j	
			4.7 2. a
11 une 11 8 une 12			

Appendixes A through H

Appendix Table of Contents

 Appendix A, Pinball Game Firmware Table
Appendix B, Semi-Conductors / Integrated Circuits / Relay Cross-Reference Table
Appendix C, CPU Jumper Table
 Appendix D, Board Type Table
Appendix E, Generic Coil Cross-Reference Guide and Flipper Coil Table
 Appendix F, Motor Specification Table
Appendix G, Part Number Prefix Classification Codes
Appendix H, Playfield Inserts (Plastic Light Covers)
Glossary of Terms

APPENDIX A Pinball Game Firmware Table

	ЕРЯОМ	Chip Size	Part Nº	Ver.	Loc.	Raw Part Nº		EPROM	Chip Si Size	ze Part Nº	Ver.	Loc.	Raw Part Nº
	Laser War						-	Teenage M					r qu t IV-
	CPU Sound (old) Sound (old) Sound (old) Sound	(256K) (256K) (256K) (256K) (256K)	965-0004-00 965-0005-00 965-0006-00 965-0007-00 - OR - 965-0008-00		C5 J5 J6 J7	960-5007-00 960-5007-00 960-5007-00 960-5007-00		CPU CPU Voice 1 Voice 2 Sound	(256K) (256K) (1M) (1M) (256K)	965-0061-00 965-0062-00 965-0063-00 965-0064-00 965-0065-00	A1.04 A1.04	B5 C5 F5/6 F4/5 F7	960-5007-00 960-5007-00 960-5009-00 960-5009-00 960-5007-00
	Sound 1 Sound 2	(512K) (512K)	965-0009-00 965-0010-00	·	7F 6F 4F	960-5007-00 960-7001-02 960-7001-02		Display Batman	(512K)	965-0066-00		U8	960-7001-02
•	Secret Serv CPU CPU Voice 1 Voice 2 Sound	/ice (256K) (256K) (512K) (512K) (256K)	965-0011-00 965-0012-00 965-0014-00 965-0015-00 965-0013-00	A-6 A-6	B5 C5 6F 4F 7F	960-5007-00 960-5007-00 960-7001-02 960-7001-02 960-5007-00	-	CPU CPU Voice 1 Voice 2 Sound Display	(128K) (256K) (2M) (1M) (256K) (1M)	965-0067-00 965-0135-00 965-0068-00 965-0069-00 965-0070-00 965-0071-00	A1.06 A1.06	B5 C5 U17 U21 U7 U8	960-5006-00 960-5007-00 960-5010-00 960-5009-00 960-5009-00
:	Torpedo Al	lov					-	Star Trek 2	5th Anni	versary			
eri.	CPU CPU Voice 1 Voice 2 Sound	(256K) (256K) (512K) (512K) (512K) (256K)	965-0016-00 965-0017-00 965-0019-00 965-0020-00 965-0018-00	A02-1 A02-1	85 C5 6F 4F 7F	960-5007-00 960-5007-00 960-7001-02 960-7001-02 960-5007-00		CPU Voice 1 Voice 2 Sound Display	(512K) (2M) (2M) (256K) (1M)	965-0072-00 965-0073-00 965-0074-00 965-0075-00 965-0076-00	A2.00 A1.09	B5 U17 U21 U7 U8.	960-7001-02 960-5010-00 960-5010-00 960-5007-00 960-5009-00
:	Time Machi	ne					-	Hook			4		•
al Suppus inepa	CPU CPU Voice 1 Voice 2 Sound	(256K) (256K) (512K) (512K) (256K)	965-0021-00 965-0022-00 965-0024-00 965-0025-00 965-0023-00	A02-3 A02-3	B5 C5 6F 4F 7F	960-5007-00 960-5007-00 960-7001-02 960-7001-02 960-5007-00		CPU Voice 1 Voice 2 Sound Display	(512K) (2M) (2M) (256K) (1M)	965-0077-00 965-0078-00 965-0079-00 965-0080-00 965-0081-00	A4.08	C5 U17 U21 U7 U8	960-7001-02 960-5010-00 960-5010-00 960-5007-00 960-5009-00
₿i	Dlaubau 25	h Amniu	loka a tr	6				Lethal Wea	pon 3				
apie, call our test	Playhoy 351 CPU CPU Voice 1 Voice 2 Sound	(256K) (256K) (512K) (512K) (512K) (256K)	965-0046-00 965-0047-00 965-0049-00 965-0050-00 965-0048-00	A02-3 A02-3	B5 C5 6F 4F 7F	960-5007-00 960-5007-00 960-7001-02 960-7001-02 960-5007-00		CPU Voice 1 Voice 2 Sound Display Display Display	(512K) (2M) (2M) (256K) (2M) (2M) (4M)	965-0082-00 965-0083-00 965-0084-00 965-0085-00 965-0087-00 965-0087-04	A2.07	C5 U17 U21 U7 ROM 1 ROM 2	960-5010-00
2	ABC Monda	v Night	Football				•	— Biopiay	(7141)	300-0007-04	M2.00	HOMO	960-5015-00
and a factor of the state of th	CPU CPU Voice 1 Voice 2 Sound	(256K) (256K) (512K) (512K) (266K)	965-0031-00 965-0032-00 965-0034-00 965-0035-00 965-0033-00	A02-7 A02-7	B5 C5 6F 4F 7F	960-5007-00 960-5007-00 960-7001-02 960-7001-02 960-5007-00		Star Wars CPU Voice 0 Voice 1 Sound Display	(512K) (4M) (2M) (256K) (2M)	965-0119-00 965-0132-00 965-0133-00 965-0131-00 965-0120-00	A1.03	C5 U17 U21 U7 ROM 0	
C C	Robocop CPU CPU Voice 1 Voice 2 Sound	(256K) (256K) (512K) (512K) (256K)	965-0036-00 965-0037-00 965-0039-00 965-0040-00 965-0038-00	A03-4 A03-4	B5 C5 6F 4F 7F	960-5007-00 960-5007-00 960-7001-02 960-7001-02		Display Display	(4M)	965-0121-00 Display PCB 520 -OR- 965-0122-00 Display PCB 520	A1.05	ROM 0	960-5010-00 960-5015-00
<u> </u>	Counc	(EUUIL)	303-0000-00		/F	960-5007-00		Rocky & Bu	llwinkle	& Friends			
F	Phantom of CPU CPU Voice 1 Voice 2 Sound	the Ope (256K) (256K) (512K) (512K) (256K)	965-0026-00 965-0027-00 965-0029-00 965-0030-00 965-0028-00	A03-2 A03-2	85 C5 6F 4F 7F	960-5007-00 960-5007-00 960-7001-02 960-7001-02 960-6007-00		CPU Voice 0 Voice 1 Sound Display	(512K) (4M) (2M) (256K) (4M)	965-0138-00 965-0139-00 965-0140-00 965-0141-00 965-0142-00	A1,30	C5 U17 U21 U7 FOM 0	960-7001-02 960-5015-00 960-5010-00 960-5007-00 960-5015-00
-	1 (- 4 - 4 l	F			·	·		Jurassic Pa					
	CPU CPU Voice 1 Voice 2 Sound	(256K) (256K) (512K) (512K) (512K) (256K)	965-0041-00 965-0042-00 965-0044-00 965-0045-00 965-0043-00	SA-2 SA-2	85 C5 6F 4F 7F	960-5007-00 960-5007-00 960-7001-02 960-7001-02 960-5007-00		CPU Voice 0 Voice 1 Sound Display	(512K) (4M) (2M) (256K) (4M)	965-0143-00 965-0144-00 965-0145-00 965-0146-00 965-0147-00	A5.10	C5 U17 U21 U7 ROM 0	960-7001-02 960-5015-00 960-5010-00 960-5007-00 960-5015-00
7	he Simana							Last Action		DDE 0410		٠. صد	
	he Simpso CPU CPU Voice 1 Voice 2 Sound	(256K) (256K) (256K) (512K) (512K) (256K)	965-0051-00 965-0052-00 965-0054-00 965-0055-00 965-0053-00	A02-7 A02-7	B5 C5 6F 4F 7F	960-5007-00 960-5007-00 960-7001-02 960-7001-02 960-5007-00		CPU Voice 0 Voice 1 Sound Display Tales from t	(512K) (4M) (2M) (256K) (4M)	965-0148-00 965-0149-00 965-0150-00 965-0151-00 965-0152-00		U21 U7	960-7001-02 960-5015-00 960-5010-00 960-5007-00 960-5015-00
7	heckpoint CPU CPU Voice 1 Voice 2 Sound Display	(256K) (256K) (1M) (1M) (256K) (512K)	965-0056-00 965-0134-00 965-0057-00 965-0059-00 965-0059-00 965-0050-00	A1-7 A1-7 CP80	85 C5 F7 F5 F4 U8	960-5007-00 960-5007-00 960-5009-00 960-5009-00 960-5007-00 960-7001-02		CPU Voice 0 Voice 1 Sound Display	(512K) (4M) (2M) (256K) (4M)	965-0157-00 965-0158-00 965-0159-00 965-0160-00 965-0161-00	A3.00	C5 U17 U21 U7 ROM 0	960-7001-02 960-5015-00 960-5010-00 960-5007-00 960-5015-00

Table continued on the next page.

APPENDIX A Pinball Game Firmware Table

EPROM	Chip Size	Part Nº	Ver.	Loc.	Raw Part Nº
The Who's	Tommy				
CPU	(512K)	965-0162-00	A4.00	C5	960-7001-02
Voice 1	(4M)	965-D165-00	۸٠٠.٥٥	Ŭ17	960-5015-00
Voice 2	(4M)	965-0166-00		Ŭ21	960-5015-00
Voice 3	(4M)	965-0167-00		Ŭ36	960-5015-00
Voice 4		965-0168-00		U37 ·	960-5015-00
	(4M)			U7	960-7001-02
Sound	(512K)	965-0164-00	A4.00	ROM 0	960-5015-00
Display	(4M)	965-0163-00	A4.00	HOW 0	900-00 19-00
WWF Royal				-	
CPU	(512K)	965-0169-00	A1.06	C5	960-7001-02
Voice 1	(4M)	965-0172-00		U17	960-5015-00
Voice 2	(4M)	965-0173-00		U21	960-5015-00
Voice 3	(4M)	965-0174-00		U36	960-5015-00
Sound	(512K)	965-0171-00		U7	960-7001-02
Display	(4M)	965-0170-00	A1.02	ROM 0	960-5015-00
Guns N' Ro	ses				
CPU	(512K)	965-0175-00	00,EA	Ç5	960-7001-02
Voice 1	(4M)	965-0178-00		U17	960-5015-00
Voice 2	(4M)	965-0179-00		U21	960-5015-00
Voice 3	(4M)	965-0180-00		U36	960-5015-00
Voice 4	(4M)	965-0181-00		U37	960-5015-00
Sound	(512K)	965-0177-00		U7	960-7001-02
Display	(4M)	965-0176-00	A3,00	ROM 0	960-5015-00
Maverick	<u>.</u>				,
CPU	(512K)	965-0182-00	A4.04	C5	960-7001-02
Voice 1	(4M)	965-0186-00		Ū17	960-5015-00
Voice 2	(4M)	965-0187-00		Ŭ21	960-5015-00
Voice 3	(4M)	965-0187-01		U36	960-5015-00
Sound	(512K)	965-0185-00		ÚŻ	960-7001-02
Display*	(4M)	965-0183-00	A4.01	ROM 0	960-5015-00
Display	(4M)	965-0184-00	A4.01	ROM 3	960-5015-00
Mary Shelle	y's Fran	kenstein			
CPÚ	(512K)	965-0188-00	A1.03	C5	960-7001-02
Voice 1	(4M)	965-0192-00		U17	960-5015-00
Voice 2	(4M)	965-0193-00		U21	960-5015-00
Voice 3	(4M)	965-0194-00		U36	960-5015-00
Sound	(512K)	965-0191-00		Ų7	960-7001-02
Display*	(4M)	965-0189-00	A1.03	ROM 0	960-5015-00
Display *	(4M)	965-0190-00	A1.03	ROM 3	
Baywatch				·	
CPU	(512K)	965-0195-00	A4,01	C5	960-7001-02
Voice 1	(4M)	965-0196-00		Ŭ17	960-5015-00
Voice 2	(4M)	965-0197-00		Ŭ21	960-5015-00
Voice 3	Correctio	n Note: 2M/U36	was not us		
Sound	(512K)	965-0199-00	., ;101 Ui	U7	960-7001-02
Display*	(4M)	965-0200-00	A4.01	FIOM 0	960-5015-00
Display*	(4M)	965-0201-00	A4.01	ROM 3	
Batman For	rever				
CPU		065 0000 00	20.EA	C5	960-7001-02
	(512K)	965-0202-00	70.02	U17	960-5015-00
Voice 1	(4M)	965-0203-00		U21	
Voice 2	(4M)	965-0204-00		U7	960-5015-00 960-7001-02
Sound	(512K)	965-0205-00	40.00	ROM 0	
Display*	(4M)	965-0206-00	00.EA 00.EA	ROM 0	
Display*	(4M)	965-0207-00	MJ.UU	HOW 3	200-20 12-00

New Board System

ROM	Chip Size	Part Nº	Ver.	Loc.	Raw Part №
Apollo 13		,			
CPU / Sound	Board:				
Game ROM	(1M)	965-0208-00	Z	U210	960-5009-00
Voice 1	(4M)	965-0209-00	рковистіоN	U17	n/a (masked)
Voice 2	(4M)	965-0210-00	ပ္	U21	n/a (masked)
Voice 3	(4M)	965-0211-00	ದ	U36	n/a (masked)
Sound	(512K)	965-0212-00	စ္စ	U7	960-7001-02
Display Cont	roller Boa				
Display	(4M)	965-0213-00	Z	ROM 0	960-5015-00

^{*} Note: Display EPROMS (4M) for Maverick thru Batman Forever require an access time of 120 Nsec or faster.

APPENDIX B Semi-Conductors / Integrated Circuits / Relays Cross-Reference Table

Table 1 Diodes	Source Nº	SEGA PINBALL Part №	NTE №	ECG №	Radio Shack ® Part Nº	RCA ® Part №
	locking and/or D	impening .				
Diode	1N4001	112-5001-00	NTE552	ECG552		SK9000
Diode	1N4004	112-5003-00	NTE116	ECG116	276-1103	SK3312
Diode	1N5401	112-0056-00	NTE5801	ECG5801	276-1143	SK9004
Diode	1N5404	112-5004-00	NTE5804	ECG5804	276-1144	SK9007
		IM				
Table 2 Diodes	Source Nº	SEGA PINBALL Part Nº	NTE Nº	ECG Nº	Radio-Shack® Part Nº	RCA® Part №
Zener						
Diode	1N4742A 12v	112-0061-00	NTE142A	ECG142A	276-563	SK12V
Diode	1N4760B 68v	112-0062-00	NTE5092A	ECG5092A		SK68V
Diode	1N4764 100v	112-0049-00	NTE5096A	ECG5096A	<u> </u>	SK100V
Diode	1N5228 3,9v	112-0053-00	NTE5007A	ECG5007A		SK3A9
Diode	1N5234B 6.2v	112-0047-00	NTE5013A	ECG5013A	276-561	SK6A2
Diode	1N5379 110v	112-0072-00	NTE5157	ECG5157		SK110X
Table 3	Source Nº	SEGA PINBALL		6	ments	Maren
Bridge Rectifiers		Part Nº		CUIN	ments	
Bridge Rectifier	CM3501	112-0052-00				
Bridge Rectifier					100v P.I.V.	
Bridge Rectifier		112-0054-00			100v P.I.V.	
Jidge Recuiler	I WDA3502	112-0057-00		35 Amp @	200v P.I.V.	Brahilland son instruction
Table 4 Transistors	Source Nº	SEGA PINBALL Part Nº	NTE Nº	ECG №	Radio Shack ® Part №	RCA®
					Fait N-	Part Nº
ransistor	2N4401		NTE85	ECG85	276-2009	SK3124A
ransistor	2N5060, SCR	110-0074-00	NTE5400	ECG5400	276-1067	SK3950
ransistor	2N5401	110-0078-00	NTE288	ECG288		SK3434
ransistor	2N6427	110-0070-00	NTE48	ECG48		SK4906
Transistor	MJE15031	110-0103-00	NTE375	ECG375		SK9118
ransistor	MJE340	110-0071-00	NTE157	ECG157		SK3747
ransistor	MJE350	110-0072-00	NTE374	ECG374		SK9042
ransistor	MPSA92	110-0100-00	NTE288	ECG278		SK3434
ransistor	MPSA42	110-0082-00	NTE287	ECG287		SK3232
ransistor	NPN, 2N3904	110-0069-00	NTE85	ECG85	276-2009	SK3124A
ransistor_	NPN, TIP122	110-0067-00	NTE261	ECG261	276-2068	SK3896
ransistor	PNP, TIP42	110-0068-00	NTE332	ECG332	2,52555	SK9236
ransistor	TIP32C	110-0071-00	NTE292	ECG292		SK3441
ransistor	TIP36C	110-0077-00	NTE393	ECG393		SK3961
		180				
Table 5 Relays	Source Nº	SEGA PINBALL Part Nº		Comm	nents	
Table 5				Com	nents	
Table 5 Relays PB Relay	Source Nº FRL264 P024/02CK			Com n 24v DC 10		
Table 5 Relays	FRL264	Part Nº			Amp DPDT	

APPENDIX C CPU Jumper Table

Game Name	Game Mid Dale and Manual PN	GPU IVA	EPROMS Position	umpes Installed	Umbers Bendved
1. Laser War	MAY 87 780-5001-00	1 2	5C 5B, 5C	J4 J6a J7a J4 J5a J6a	J5 J6 J7b J5 J6b J6b
2. Secret Service	MAR 88 780-5002-00	2	5B, 5C	J4	J5
3. Torpedo Alley	AUG 88 780-5003-00	2	5B, 5C	J4	J5
4. Time Machine	DEC 88 780-5004-00	2	5B, 5C	J4	J5
5. Playboy 35th Anniversary	MAY 89 780-5005-00	2	5B, 5C	J4	J5
6. ABC Monday Night Football	SEP 89 780-5007-00	2	5B, 5C	J4	J5
7. Robocop	NOV 89 780-5006-00	2	5B, 5C	J4	J5
8. Phantom of the Opera	JAN 90 780-5008-00	2	5B, 5C	J4	J 5
9. Back to the Future	JUN 90 780-5009-00	3	5B, 5C	J4_	J5
10. The Simpsons	SEP 90 780-5012-00	з	5B, 5C	J4	J5
11. Checkpoint	FEB 91 780-5010-00	3	5B, 5C	J4	J5
12. Teenage Mutant Ninja Turtles	MAY 91 780-5017-00	3	5B, 5C	J4	J5
13. Batman	JUL 91 780-5011-00	3	5B, 5C	J4	J5
14. Star Trek 25th Anniversary	OCT 91 780-5014-00	3	5C	J5	J4
15. Hook	JAN 92 780-5019-00	3	5C	J5	J4
16. Lethal Weapon 3	JUN 92 780-5026-00	3	5C	J5	J4
17. Star Wars	OCT 92 780-5024-00	3	.5C	J5	J4
18. Rocky & Bull- winkle & Friends	FEB 93 780-5022-00	3	5C	J5	J4
19. Jurassic Park	APR 93 780-5020-00	3	5C	J5	J4
20. Last Action Hero	AUG 93 780-5027-00	3	5C	J5	J4
21. Tales from the Crypt	NOV 93 780-5018-00	Э	5C	J5	J4
22. The Who's Tommy	FEB 94 780-5028-00	3	5C	J5	J4
23. WWF Royal Rumble	MAY 94 780-5023-00	3	5C	J5	J4
24. Guns N' Roses	JUL 94 780-5029-00	3	5C	J5	J4
25. Maverick	SEP 94 780-5031-00	Э	5C	J5	J4
26. Mary Shelley's Frankenstein	DEC 94 780-5036-00	3	5C	J5	J4
27. Baywatch	MAR 95 780-5033-00	з	5C	J5	J4
28. Batman Forever	JUL 95 780-5038-00	3	5C	J5	J4

Game Name	Game Mig- Date and Manual PN	OPU Ver	Rold Position		
29. Apollo 13	NOV 95 780-5044-00	-	U210	n/a	n/a

Board Combinations with ROM at Location 5C (Game 1, Ver1) Installed J1b, J3, J4, J6a, J7a & J8 Removed J1a, J2, J5, J6 & J7b

[†] Additional Information for Installed / Removed Jumpers (List 1-28 only):

Board Combinations w/ ROM at Locations 5B, 5C (Game 1, Ver2) Installed J1b, J3, J4, J5a, J6a, J7b & J8 Removed J1a, J2, J5, J5b, J6b, & J7a

Board Combinations w/ ROM at Locations 5B, 5C (Games 2-12, Ver2/3) Installed J1b, J3, J4, J5b, J6b, J7b & J8 Removed J1a, J2, J5, J5a, J6a & J7a

Board Combinations with ROM at Locations 5C (Games 14+, Ver3) Installed J1b, J3, J5, J5b, J6b, J7b & J8 Removed J1a, J2, J4, J5a, J6a & J7a

Version 1 has a 2K RAM which is a 24-pin IC in Position 5D; Versions 2 & 3 have a 8K RAM which is a 28-PIN IC in Position 5D.

APPENDIX D Board Type Table

Game Name		Sounds	Power Supply	Display A Digit
Laser War	MO REPORT BOARD (MES) Pallings	initial: 520-5002-00 replaced with: 520-5002-02 520-5002-01 was not used.	520-5000-00	Master: 520-5004-00 plus: 7 Digit Alpha/Numeric 520-5005-00 (Qty. 2) 7 Digit Numeric 520-5006-00 (Qty. 2) 4 Digit Numeric 520-5007-00
Secret Service	S Flippeis	520-5002-02	520-5000-00	520-5014-01 7 Digit Alpha/Numeric Combined
Torpedo Alley	es NEB Se se Allippere	520-5002-02	520-5000-00	520-5014-01 7 Digit Alpha/Numeric Combined
Time Machine	A STATE OF THE STA	520-5002-02	520-5000-00	520-5014-01 7 Digit Alpha/Numeric Combined
Playboy 35th Anniversary	520-5033-00 2-Flip, (for 100 games)	520-5002-02	520-5000-00	520-5014-01 7 Digit Alpha/Numeric Combined
ABC Monday Night Football	520-5033-00 2-Flip. (for 100 games)	520-5002-02	520-5000-00	520-5030-00 16 Digit Alpha/Numeric Combined
Robocop	520-5033-00 2-Flipper	520-5002-02	520-5000-00	520-5030-00 16 Digit Alpha/Numeric Combined
Phantom of the Opera	520-5033-00 2-Flipper	520-5002-02	520-5000-00	520-5030-00 16 Digit Alpha/Numeric Combined
Back to the Future	520-5033-00 2-Flipper	520-5002-02	520-5000-00	520-5030-00 16 Digit Alpha/Numeric Combined
The Simpsons	520-5033-00 2-Flipper	520-5002-03	520-5000-00	520-5030-00 16 Digit Alpha/Numeric Combined

Game Name	Flipper	Sound	Power Supply	Bot Matrix	Display:
Checkpoint	520-5033-00 2-Flipper	520-5002-03	520-5047-00	520-5042-00 128 X 16	A Note Seden
Teenage Mutant Ninja Turtles	520-5033-00 2-Flipper	520-5002-03	520-5047-00	520-5042-00 128 X 16	Nerded :
Batman	520-5033-00 2-Flipper	520-5050-01	520-5047-00	520-5042-00 128 X 16	angrusiati
Star Trek 25th Anniversary	520-5033-00 2-Flipper	520-5050-01	520-5047-00	520-5042-00 128 X 16	Net Jsca
Hook	520-5033-00 2-Flipper	520-5050-01	520-5047-00	520-5042-00 128 X 16	Not Jeed.
Lethal Weapon 3	520-5033-00 2-Flipper	520-5050-01	520-5047-01	520-5052-00 128 X 32	520-5055-00
Star Wars	520-5033-00 2-Flipper	520-5050-02	520-5047-01	520-5052-00 128 X 32	520-5055-00
Rocky & Bullwinkle & Friends	520-5033 - 00 2-Flipper	520-5050-02	520-5047-01	520-5052-00 128 X 32	520-5055-00
Jurassic Park	520-5076-00 3-Flipper	520-5050-02	520-5047-02	520-5052-00 128 X 32	520-5055-00
Last Action Hero	520-5070-00 2-Flipper	520-5050-03	520-5047-02	520-5052-00 128 X 32	520-5055-00
Tales from the Crypt	520-5076-00 3-Flipper	520-5050-03	520-5047-02	520-5052-00 128 X 32	520-5055-01
The Who's Tommy	520-5076-00 3-Flipper	520-5077-00	520-5047-02	520-5052-00 128 X 32	520-5055-01
WWF Royal Rumble	520-5070-00 (Qty. 2) 4-Flipper (2X2)	520-5077-00	520-5047-02	520-5052-00 128 X 32	520-5055-01

Table continued on the next page.

APPENDIX D Board Type Table

Game Name	Flipper	. Sounds	Powers Supply	Dal Matrix Display	(D.Spilay (C (Con)miller
Guns N' Roses	520-5076-00 3-Flipper	520-5077-00	520-5047-02	520-5052-00 128 X 32	520-5055-01
Maverick	520-5076-00 3-Flipper	520-5050-03	520-5047-03	520-5075-00 192 X 64	520-5092-01
Mary Shelley's Frankenstein	520-5076-00 3-Flipper	520-5077-00	520-5047-03	520-5075-00 192 X 64	520-5092-01
Baywatch	520-5080-00 (Qty. 2) 4-Flipper (2X2)	520-5126-02	520-5047-03	520-5075-00 192 X 64	520-5092-01
Batman Forever	520-5076-00 3-Flipper	520-5126-02	520-5047-03	520-5075-00 192 X 64	520-5092-01

NEW BOARD SYSTEM

Game	Flipper	I/O Powers	CPU/	Cisələy	Dot Matrix	Display
Name		Drivers	Sound	Power Süppiy	Display	Confoller
Apollo 13	520-5070-00 2-Flipper	520-5137-00	520-5136-00	520-5138-00	520-5052-00 128 X 32	520-5055-01

Appendix — D — Board Type Table

APPENDIX E Generic Coil Cross-Reference Guide

or resident at the sufficient such a star to a	LEAD HAR WINE BY THE						
SEGAPINEALL	Gauge		Gauge-	SEGA PINBALL	Gauge-	SEGA PINBAUL"	Gauge-
Part №	Turns	Part Nº	Turns	Patt Nº	Turns 4	Part Nº	Turns
090-5000-00	22-700	090-5011-00	22-750	090-5020-00	Not Used	090-5030-00	23-1100
090-5001-00	23-800	090-5012-00	26-800	090-5020-01	21-900	090-5032-00	22-1080
090-5001-01	23-800	090-5013-00	23-700	090-5020-02	22-900	090-5034-00	25-1240
090-5002-00	24-900	090-5014-00	23-600	090-5020-10	21-900	090-5036-00	24-940
090-5003-00	27-1300	090-5015-00	27-1400	090-5020-20	22-900	090-5036-01	24-940
090-5004-00	27-1500	090-5016-00	29-2000	090-5020-30	23-900	090-5037-03	231/2-765
090-5005-00	_23-840_	- 090-5017-00	22-500	090-5024-00	20-400		
090-5006-00	23-800	090-5018-00	23-800	090-5022-00	23-700	090-5041-00	25-1800
090-5008-00	23-1200	090-5019-00	23-750	090-5023-00	22-600	090-5046-00	28-1050
				090-5025-00	24-1570		20-1000

Flipper Coil Table

	Eligoer Lower Flight	Flipper Lower Left	Elipper Right	Flipper Upper Left
Game Name	E SEGA FINEAU	SEGA PINBALUN Part Nº W.Ga - Turns	SEGAPINBAU	SEGA PINBALL* Part:Nº W.Ga.:Turns
Laser Wars	090-5011-00 22-750/30-2600	SAME AS LOWER RIGHT	Not	North Control
Secret Service	090-5006-00 23-620/30- <u>2</u> 600	SAME AS LOWER RIGHT	SAME AS LOWER RIGHT	No.
Torpedo Alley	090-5013-00 23-700/30-2600	090-5011-00 22-750/30-2600	090-5012-00 26-800	Not:
Time Machine	090-5011-00 22-750/30-2600	SAME AS LOWER RIGHT	North Carlot	NOTE NOTE OF
Playboy 35th Anniversary †	090-5020-02 22-900	SAME AS LOWER RIGHT	Nol Visa	November 1
ABC Monday Night Football †	090-5020-02 22-900	SAME AS LOWER RIGHT	NGI Jsed	Not accept
Robocop	090-5020-20 22-900	SAME AS LOWER RIGHT	Not Used	Nibi Vised
Phantom of the Opera	090-5020-20 22-900	SAME AS LOWER RIGHT	A Not to the second	Not I Light
Back to the Future	090-5020-20 22-900	SAME AS LOWER RIGHT	de juignes de la companya de la comp	Non-
The Simpsons	090-5020-20 22-900	SAME AS LOWER RIGHT	Not	INGL. Used
Checkpoint	090-5020-20 22-900	SAME AS LOWER RIGHT	No.	What Court State C
Teenage Mutant Ninja Turtles	090-5020-30 23-900	SAME AS LOWER RIGHT	(Vot	in their '
Batman	090-5020-30 23-900	SAME AS LOWER RIGHT	n (Not	George Months
Star Trek 25th Anniversary	090-5020-30 23-900	SAME AS LOWER RIGHT	Not surficed.	Nor-
Hook	090-5020-30 23-900	090-5030-00 23-1100	Fig. 1907	Notes and the second se
Lethal Weapon 3	090-5030-00 23-1100	SAME AS LOWER RIGHT	Not Used	NO.
Star Wars	090-5032-00 22-1080	SAME AS LOWER RIGHT	PNot Used	Notation (Notation (Notati

[†] A very small % of these games used a 090-5020-20 coil which used a proto-type Solid State Flipper System. The two types of coils both are 22-900 coils; the only difference being the addition of the 1N5404 Diode on the (-02) coils which was used in the Deger Design.

Table continued on the next page.

Page 132

Generic Coil Cross-Reference Guide & Flipper Coil

Appendix

APPENDIX E Flipper Coil Table

The second second	Hipper Lower Right	Eligoer Lower Left	Eliopar UprenRicht	File of the Upper Lette
Game Name	SEGA PINBAUL Panti Nº W.Ga Fillins	SEGAPINIALLY	SECON SINEAR SECOND	SECATINEAU DE SE
Rocky & Bullwinkle & Friends	090-5020-30 23-900	SAME AS LOWER RIGHT	de anyolds de la companyolds de la companyold de la companyolds de	
Jurassic Park	090-5020-30 23-900	SAME AS LOWER RIGHT	090-5030-00 23-1100	
Last Action Hero	090-5020-30 · 23-900	SAME AS LOWER RIGHT		
Tales from the Crypt	090-5032-00 22-1080	SAME AS LOWER RIGHT	090-5041-00 25-1800	
The Who's Tommy	090-5020-30 23-900	SAME AS LOWER RIGHT		090-5041-00 25-1800
WWF Royal Rumble	090-5032-00 22-1080	SAME AS LOWER RIGHT	090-5041-00 25-1800	SAME AS UPPER RIGHT
Guns N' Roses	090-5032-00 22-1080	SAME AS LOWER RIGHT	enge e Note	090-5030-00 23-1100
Maverick	090-5032-00 22-1080	SAME AS LOWER RIGHT	090-5032-00 22-1080	i vija i i i i i i i i i i i i i i i i i i
Mary Shelley's Frankenstein	090-5030-00 23-1100	SAME AS LOWER RIGHT	090-5030-00 23-1100	
Baywatch	090-5020-30 23-900	090-5030-00 23-1100	SAME AS LOWER LEFT	090-5025-00 24 -1 570
Batman Forever	090-5020-20 22-900	090-5032-00 22-1080	090-5020-30 23-900	and Tholese 2.
Apollo 13	090-5032-00 22-1080	SAME AS LOWER RIGHT		7946) - 2174 24 11526 - 31

APPENDIX F Motor Specification Table

Game Name Lasen Wars	Se Eunction	Specifications	Z Pan N°
Seoret Service Torpede Alley Time Machine	a Blomaints we	Euserbah the game slisted an the shade	dines (1)
Playboy 35th Anniversary			
ABC Monday Night Football	Goal Post Up/Down	Motor 24v A.C. 60 RPM CW	515-5222-00
Holocope			
Phantom of the Opera	Organ Up/Down	Bowman Motor 24v 60hz 3W 11 RPM CCW	515-5256-00
Back to the Euture. The Simpsons	e de la companya de l		
Checkpoint	Shaker	Johnson Motor (Vibrator)	041-5002-00
Опескропп	Mag Wheel (in Backbox)	Motor D.C. (KEN)	041-5005-00
Teenage Mutant Ninja Turtles	Spinning Pizza Ball Deflector	Gear Motor 24v A.C. 325 RPM CW	515-5397-00
Batman	Bar Target Up/Down	Bowman Motor 24v 60hz 3W 11 RPM CCW	515-5256-00
	Swinging Target	Bowman Motor 24v 22½ RPM	515-5534-00
Star Trek 25th Anniversary	Transporter F/X	Gear Motor 24v A.C. 3.5 RPM	500-5421-00
	Cooling Fan for Transporter F/X	41∕₂" Motor 12∨	041-5014-00
Hook - 7			
Lethal Weapon 3	Spinning Light	Motor 2.5v A.C. 4000 RPM CCW	041-5017-00
	Bar Target Up/Down	Bowman Motor 24v 60hz 3W 11 RPM CCW	515-5256-00
Star Wars	R2D2 Robot Movement	Bowman Motor 24v A.C. 22½ RPM CW	515-5571-00
	Death Star Rotation	Bowman "G" Motor 24v A.C. 60hz 6 RPM CW	515-5570-00
Rocky & Bullwinkle & Friends	Nell Log "Cutting Blade" Movement	Bowman Modeł E Motor 24v 11 RPM CCW	041-5023-00
	Shaker	Jehnson Motor Vibrator	041-5002-00
Jurassic Park	T-Rex Left/Right Movement	Multi Motor 5v D.C.	041-5025-00
	T-Rex Up/Down Movement	Bowman Motor 24v 11 RPM CW	041-5026-00

Table Continued on the next page.

APPENDIX F Motor Specification Table

Game Name	Augustungien Erweit	ne panyak proSpinosillostipissas	waren (News)
	Crane Left/Right Movement	Multi Prod. #3312 Motor OSC 12v D.C.	041-5027-00
Last Action Hero	Shaker	Motor Vibrator	041-5029-00
Tales from the Crypt	Shaker	Motor Vibrator	041-5029-00
raies from the Crypt	Tombstone Up/Down	Bowman Motor 24v A.C. 6 RPM CCW	515-5900-00
	Mirror Up/Down	Bowman Motor 24v A.C. 6 RPM CCW	515-5900-00
The Who's Tommy	Flipper Blinders	Servo Motor	041-5032-00
	Spinning Airplane Propellers	Motor D.C.	041-5033-00
WWF Royal Rumble	Shaker	Motor Vibrator	041-5029-00
Guns N' Boses			
Maverick, The Movie	Turning Paddle Wheel	Motor 24v A.C. 10 RPM	041-5036-00
Mary Shelley's Frankenstein	Creature Head Left/Right Movement	Servo Motor	041-5032-00
Baywatch			
Batman Forever	Cannon Left/Right Movement	Bowman Motor 24v A.C. 60Hz 3W 6 RPM CCW	515-6383-00
	Rocket Up/Down Movement	Bowman Motor 24v A.C. 60Hz 3W 6 RPM CCW	515-6383-00
Apollo 13	Moon Unit Up/Down Movement	Multi Motor 24v A.C. 50/60Hz 3W 6 RPM CCW	515-6487-00
	Shaker	Motor Vibrator	041-5029-00

APPENDIX G Part Number Prefix Classification Codes

1.	031-	AL SOURCE AND ENERGY AND SIGNAL CONVERTERS Transformers Speakers	
	090-	Solenoids	
II.	CONDUCT 034-	ORS, CONNECTORS AND INSULATORS	
	036-	Line Cords Cable and Harness Assemblies	7
	041- · 045-	Motors	
	077-	Connectors (All Types) Lamp Sockets	•
10.	CIRCUITS	AND CIRCUIT ELEMENTS	
	100- 110-	ICs Transistors	The state of the s
	112- 121-	Diodes	
	123-	Resistors Resistors (Variable & Adjustable)	
	125- 140-	CAPS Crystals	
	165- 180-	Light Bulbs	
	190-	Switches Relays	
IV.	BOLTS, SO		
•	231- 232-	REWS, NUTS, AND WASHERS Bolts Serrous (Par Hand)	:
	234-	Screws (Pan Head) Screws (HXW) Screws (Misc.) Nuts (Misc.) Washers (Flat, Round) Washers (Split Lock)	en e
	237- 240-	Screws (Misc.) Nuts (Misc.)	and the second s
	242- 244-	Washers (Flat, Round)	
	2 44- 246-	Washers (Split Lock) Washers (Lockers, External Tooth)	
٧.	MECHANIC	AL COMPONENTS	
	249- 251-	Rivets	en e
	254-	Pins (Dowel) Stand-Offs, Spacers and Shims	
	260- 265-	Steel Ball Springs (Extension)	
	266- 269-	Springs (Compression) Springs (Washers - Belleville, Wave)	
	280-	Springs (wasners - Belleville, Wave) Grommets and Bushing	
/I.	HANDLES,	-	
	355- 390-	LOCKS, CATCHES & LATCHES, KEYS & HINGES Handles, Locks, Catches & Latches and Keys Hinges	4
/n.	• •		
,	əuu-	ED PARTS (IN-HOUSE ASSEMBLIES) End Product (Systems and Models)	t e V
	515- 520-	Sub-Assemblies P.C. Boards	
	522- 525-	P.C. Boards Display Glass Wood Parts	
	530-	Screw Machined Parts	es. F
	535- 545-	Fabricated Parts Molded (Extruded) Parts (Bubber Bings, Molded Plastic)	2
	550-	Molded (Extruded) Parts (Rubber Rings, Molded Plastic) Molded (Inserts)	i.
111.	BULK MATE 600-	RIALS	
	601-	Braided Ground Wire Stranded Wire	· .
	602- 605-	Ribbon Cable	
	626-	Sleeving (Shrink Tubing) Foam Rubber	
₹.	MISCELLAN	Eous	1 1
	705- 820-	Packing & Shipping Items Decals and Labels (Sets & Misc.)	
	820- 900-	Hillyroto	. *
	960-	Game Posters EPROM (Raw Part) EPROM (Programmed Part)	
	9 6 5-	EPROM (Programmed Part)	•

APPENDIX H Playfield Inserts (Plastic Light Covers)

Patterns:	STARBURST	STARBURST	STARBURST	STARBURST	STARBURST
STARBURST	CIRCULAR	CIRCULAR	CIRCULAR	CIRCULAR	CIRCULAR
	(5/8" ø)	(3/4" Ø)	(1"ø	(1-3/ ₁₆ " ø	1-1/2" Ø
STIPPLE					
	550-5000-XX	550-5001-XX	550-5002-XX	550-5003-XX	550-5004-XX
STARBURST CIRCULAR	STARBURST CIRCULAR	PLAIN CIRCULAR	PLAIN CIRCULAR	PLAIN CIRCULAR	PLAIN CIRCULAR
2-1/4" Ø	2-3/4" Ø	(3/4" Ø)	(1"ø	(1-3/ ₁₆ " ø	(1-1/2" ø
550-5005-XX	550-5006-XX	550-5007-XX	550-5008-XX	550-5009-XX	550-5010-XX
PLAIN CIRCULAR	PLAIN CIRCULAR	STIPPLE CIRCULAR	STIPPLE 1" SQUARE	ROLLOVER BUTTON BASE	WHITE STAR (only in white)
2-1/4" ø	2-3/4" Ø	1"ø	12"		*
550-5011-XX	550-5012-XX	550-5048 - XX	550-5019-XX	550-5026-XX	545-5015-00
STIPPLE RECTANGULAR	STIPPLE RECTANGULAR	STARBURST RECTANGULAR	PLAIN RECTANGULAR	PLAIN RECTANGULAR	PLAIN RECTANGULAR
1-½" X ¾"	1-3/5" X 1-1/2"	2-1/4" X 1-1/8"	2-1/4" X 1-1/8"	1-3/5" X 1-1/2"	2" X 2-½"
550-5018-XX	550-5051-XX	550-5044-XX	550-5049-XX	550-5050-XX	550-5063-XX
STARBURST MINI SHIELD	STARBURST LARGE SHIELD	MINI HOT DOG	BEVEL HOT DOG	PLAIN HOT DOG	BANANA
1" X 1"	2-1/5" X 2"	1-5/8"	3-1/2"	3-1/2"	
550-5024-XX	550-5025-XX	550-5020-XX	550-5021-XX	550-5022-XX	550-5023-XX
STARBURST ARROW-SHORT	STARBURST ARROW-LARGE	STARBURST ARROW-HEAD	STARBURST BULLET	STARBURST TRIANGLE	
550-5013-XX	550-5014-XX	550-5015-XX	550-5016-XX	550-5017-XX	ia .

Note: The shapes and sizes shown above are not to scale. Some shapes may no longer be available in every color.

A COMP	resterrativesterae	nenga/Askabintendi	ekozajasanismiteh	G:II) Golffeal	itventalleveologen war a filo
		e replaisativiji nel	ne following 25 de fis		necolor desired
-01:	GLEAR	-06:	YELLOW	-11	FLUORESCENT GREEN
-02:	HED	-07:	ORANGE	-12	FLUORESCENTIBLUE
-03:	AMBER	-08:	WHITE		TEALGREEN
-04:	GREEN	-09;	<u> Purpee</u>	-14	GRAY
-05:	BLUE	-10 FLU	JORESCENT ORANG	ãE € -15	<u>NEW: LUMINESCENT</u>
NAME OF TAXABLE PARTY.	THE PERSON NAMED IN COLUMN TWO IS NOT THE OWNER.				建一大工业的企业工程的企业工程的企业工程

Appendix — H —

GLOSSARY OF TERMS

Followed after a number means "Amp." or Ampage in an expression relating to an

electrical object. e.g. 8A (eight amps).

AC Acronym: Alternating Current.

Adj. Abbreviation: Adjustment(s).
A.L.I.S.O.N. Interface See Section 3, Chapter 6.

Au. Abbreviation: Audit(s). BOT Abbreviation: Bottom.

Bridge Rectifier A configuration of a diode that allows current to flow in one direction producing both

positive and negative pulsating DC Voltages

COLOR CODING See Appendix H, Color Chart (Bottom) or Section 4, Chapter (last page).

Combination (Combo) [Shot]. Any variable pinball shot(s) made succesively.

CMOS Short for COSMOS (Complementary Symmetry M.O.S.); Complementary Metal-

Oxide Semi-Conductor,

CT Abbreviation: Center.

DC Abbreviation: Direct Current.

DT Abbreviation: Drop Target(s).

EB Acronym: Extra Ball.

Eject Playfield surface device to kick ball back into play.

EPROM Acronym: Erasable Programmable Read Only Memory. Can be erased using UV

Light and re-programmed.

e.g. Abbreviation: Latin- Exempli gratia. For Example.

EOS Acronym: End-of-Stroke.

G.I. Abbreviation: General Illumination (Lamps).

IC Acronym: Integrated Circuit (As in after 24-Pin IC)

i.e. Abbreviation: Latin- Id est. That is.

LT Abbreviation: Left,

Laser Kick A coil/plunger used above the playfield to kick pinball back into play.

LED Light emitting diode.

Loop [Shot] Continuously up a ramp and back to the flipper.

Lwr. Abbreviation: Lower.

Orbit [Shot] From the left or right flipper around the back rail of the playfield back to the

flipper.

MB Acronym: Magnet Board.

M-BALL or MBALL Abbreviation: Multibalf™.

MID Abbreviation: Middle

Non-Reflexive See Reflexive.

No. or № or # Abbreviation: Number

NPF Acronym: No Problem Found.

N.C. or NC Abbreviation: Normally Closed.

N.O. or NO Abbreviation: Normally Open.

PCB Acronym: Printed Circuit Board

PIA LED Acronym: Peripheral Interface Adapter. This is a diagnostic LED on the CPU; it

should not be lit during normal operation of a pinball game.

Plumb Bob Tilt Weight on Tilt Assembly.

Pop(s) Another term for Turbo Bumper(s).

PPB Playfield Power Board (Generic Term to describe Acronym with no true definition).

PSB Acronym: Power Supply Board

Page 138 Glossary of Terms

GLOSSARY OF TERMS

P/F

Abbreviation: Playfield

RAM

Acronym: Random Access Memory. RAM can store input instructions and supply

output information.

RED

Abbreviation: Red.

Reflexive/Non-Reflexive (Relating to CPU Boards) Reflexive—Solenoid Drive Transistor is enabled directly by a switch closure on the solenoid assembly (Ver. 1/2). Non-Reflexive—Solenoid Drive Transistor is enabled by the CPU after reading a switch closure in the Switch Matrix (Ver. 3). Also note: All CPU Boards are backwards compatible (e.g. Jurassic Park/Ver. 3 to Time Machine/Ver. 2). Swapping a Ver. 2 Board to a Ver. 3 is not possible due to the special solenoids section (i.e. Slingshots, Turbo Bumpers, etc.) changing from REFLEXIVE to NON-REFLEXIVE and Ver. 3 Roards.

to NON-REFLEXIVE on Ver. 3 Boards.

Relay

An automatic switch operated by current in a coil.

ROM

Aconym: Read Only Memory. ROM cannot store input instructions but can supply

output information. ROM can be programmed only once.

RT

Abbreviation: Right.

RO

Abbreviation: Rollover (switches).

Saucer

See Eject.

Scoop

A hole into the playfield. A metal scoop is in place to guide the ball into the kick-

back under the playfield.

Slam Tilt

A switch which closes when the game is slammed into or the Coin Door is slammed shut. Depending on adjustable settings, will cancel game in play when the number

of closures required is sufficed.

SMB

Acronym: Shaker Motor Board.

Solenoid

A coil used for Electro Magnetic devices such as relays, flippers, slingshots, etc.

SSFB

Acronym: Solid State Flipper Board.

STEP

Refers to the service switches on the coin door.

S-U

Abbreviation: Stand-Up (targets).

TM

Acronym: Trademark

Transfer

[Shot] Maneuvering the ball in play from one flipper to the other. With flipper in the up position and the ball cradled by that flipper one would activate the flipper button in a quick repetive manner to bounce the ball to the other side. Skilled players can

rebound the ball off the slingshot.

TTL

Acronym: Transistor-Transistor Logic

Upr. V or v Abbreviation: Upper. Abbreviation: Volt(s).

Ver.

Abbreviation: Version.

VUK

Acronym: Vertical Up-Kicker.

χ

Acronym: "Times" A multiplier.

Zener Diode

A semi-conductor diode used for voltage regulation. Application depends on reverse

break-down voltage.

GLOSSARY OF TERMS

···		·			
		Tax of the			
	····				
		-			
		*		. *	
	-				
				· · · · · · · · · · · · · · · · · · ·	
The state of the s			**************************************		
			<u> </u>		
	•				
					 -
					
	•				1
•					
					
· · · · · · · · · · · · · · · · · · ·					
,		<u></u>			
	•	The state of the s		-	
	i ki 1.199 kilong i Lib	104 mg (104 mg)			
		reconstruction of the second			
	The Art of the Control of the Contro	and the second s			
			<u>er et dag eerstaak ja ja</u>		
<u> </u>					
					31 11
					
		<u> </u>			44
····					77.7
		· · ·			40 V
			the section of	-	, a
· · · · · · · · · · · · · · · · · · ·			and the second s		N
			<u> </u>		and the second
		. 147 w s	1 . 1.4 - 11		
	· ····				
	<u> </u>				
				·—-	
			· · · · · · · · · · · · · · · · · · ·		
					
	<u> </u>				
				14	
		<u> </u>			
					
				_ ·	

Page 140

Glossary of Terms

SEGA PINBALL, INC. LIMITED WARRANTY

SEGA PINBALL, INC., ("SELLER") WARRANTS ONLY TO THE INITIAL PURCHASER OF ITS PRODUCTS THAT THE ITEMS LISTED BELOW ARE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USE AND SERVICE FOR THE WARRANTY PERIOD SPECIFIED:

PRINTED CIRCUIT BOARDS (GAME LOGIC) 60 DAYS

NO OTHER PARTS OF SELLER'S PRODUCT ARE WARRANTED.

WARRANTY PERIODS ARE EFFECTIVE FROM THE INITIAL DATE OF SHIPMENT FROM SELLER TO ITS AUTHORIZED DISTRIBUTORS.

SELLER'S SOLE LIABILITY SHALL BE, AT ITS OPTION, TO REPAIR OR REPLACE PRODUCTS WHICH ARE RETURNED TO SELLER DURING THE WARRANTY PERIODS SPECIFIED, PROVIDED:

- 1. SELLER IS NOTIFIED PROMPTLY UPON DISCOVERY BY PURCHASER THAT STATED PRODUCTS ARE DEFECTIVE.
- 2. SUCH PRODUCTS ARE PROPERLY PACKAGED AND THEN RETURNED FREIGHT PREPAID, TO SELLER'S PLANT.

THIS WARRANTY DOES NOT APPLY TO ANY PARTS DAMAGED DURING SHIPMENT AND/OR DUE TO IMPROPER HANDLING, OR DUE TO IMPROPER INSTALLATION OR USAGE, OR ALTERATION. IN NO EVENT SHALL THE SELLER BE LIABLE FOR ANY ANTICIPATED PROFITS, LOSS OF PROFITS, LOSS OF USE, ACCIDENTAL OR CONSEQUENTIAL DAMAGES OR ANY OTHER LOSSES INCURRED BY THE CUSTOMER IN CONNECTION WITH THE PURCHASE OF A SEGA PINBALL, INC. PRODUCT.

WARRANTY DISCLAIMER

EXCEPT AS SPECIFICALLY PROVIDED IN A WRITTEN CONTRACT BETWEEN SELLER AND PURCHASER, THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

CAUTIONS, WARNINGS & NOTICES

Caution

FOR SAFETY AND RELIABILITY, SUBSTITUTE PARTS AND EQUIPMENT MODIFICATIONS ARE NOT RECOMMENDED (AND MAY VOID ANY WARRANTIES). USE OF NON-SEGA PINBALL INC. PARTS OR MODIFICATIONS OF GAME CIRCUITRY, MAY ADVERSELY AFFECT GAME PLAY, OR MAY CAUSE INJURIES. TRANSPORT PINBALL GAMES WITH HINGED BACKBOX DOWN ONLY! ALWAYS TAKE GREAT CARE WHEN SERVICING ANY GAME. ALWAYS DISCONNECT THE LINE VOLTAGE BEFORE SERVICING. SOME PARTS MAY STILL HOLD CURRENT WHEN UNPLUGGED. ALWAYS READ THE SERVICE MANUAL BEFORE REPLACING OR SERVICING COMPONENTS.

SUBSTITUIONS OF PARTS OR EQUIPMENT MODIFICATIONS MAY VOID FCC TYPE ACCEPTANCE.

Warning

THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY, AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS MANUAL, MAY CAUSE INTERFERENCE TO RADIO COMMUNICATIONS. IT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A COMPUTING DEVICE PURSUANT TO SUBPART J OF PART 15 OF FCC RULES, WHICH ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST SUCH INTERFERENCE WHEN OPERATED IN A COMMERCIAL ENVIRONMENT. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE INTERFERENCE IN WHICH CASE THE USER AT HIS OWN EXPENSE WILL BE REQUIRED TO TAKE WHATEVER MEASURES MAY BE REQUIRED TO CORRECT THE INTERFERENCE.

RF INTERFERENCE NOTICE, CABLE HARNESS PLACEMENTS AND GROUND STRAP ROUTING ON THIS GAME HAVE BEEN DESIGNED TO KEEP RF RADIATION AND CONDUCTION WITHIN LEVELS ACCEPTED BY THE FCC RULES. TO MAINTAIN THESE LEVELS, REPOSITION HARNESSES AND RECONNECT GROUND STRAPS TO THEIR ORIGINAL PLACEMENTS, IF THEY BECOME DISCONNECTED DURING MAINTENANCE.

Notices

THIS DOCUMENT AND THE DATA DISCLOSED HEREIN OR HEREWITH IS NOT TO BE REPRODUCED (EXCEPT WHERE NOTED), USED OR OTHERWISE DISCLOSED IN WHOLE OR IN PART TO ANYONE WITHOUT WRITTEN CONSENT OF SEGA PINBALL, INC.. WARNING: PRODUCTS IN THIS MANUAL, THE COMPANY NAME AND DEVICES AND THE DESIGN OF THE MANUAL ITSELF, ARE PROTECTED BY FEDERAL PATENTS (AND PATENTS PENDING), DESIGN REGISTRATIONS, TRADEMARKS AND COPYRIGHTS. ACTION WILL BE TAKEN IN THE EVENT OF INFRINGEMENT OR IMITATION. THE RIGHT IS RESERVED TO CHANGE SPECIFICATIONS WITHOUT PRIOR NOTICE.



Portals, Icon Designs, and Sonic The Hedgehog™ are trademarks of SEGA. Sega Pinball, Inc. logo™ & © 1995. "Multiball" is a registered TM of Williams Electronics Games, Inc. Used by Permission. APOLLO 13 logo™ & © 1995 Universal City Studios, Inc. Licensed by MCA/Universal Merchandising, Inc. Official Apollo 13 emblem (NASA). "Apollo 13 (Theme)" Music by James Horner © 1995 MCA Music Publishing, A division of MCA, Inc. Used by Permission. Creative Electronics and Software (CES), Inc. logo™ & © 1995 All Rights Reserved. Printed in USA.

Standard USA 9 Inch Ruler (From the top to the bottm edge is 11")



ALTHOUGH EVERY EFFORT IS PUT INTO MAKING THIS MANUAL (AND ALL OTHER DOCUMENTS RELATING TO THIS PRODUCT) ACCURATE AND COMPLETE, PLAYFIELD COMPONENTS, FEATURES, RULES, PROGRAMMING AND OPERATION ARE SUBJECT TO CHANGE WITH OR WITHOUT NOTICE. IF YOU HAVE ANY QUESTIONS OR COMMENTS, CALL US TOLL-FREE (USA or CANADA) AT 1-800-KICKERS (542-5377) OR (708) 345-7700.





iames shipped sctory direct to unball, inc. ae a care poroved and with avera or "E prefix teached to the erial Number."