# GALSPANIC

OPERATION MANUAL



## Table of PC Board Connectors

#### (1) Required Power Supply

 $+5 \text{ V} \quad ^{+0.5 \text{ V}}_{-0.1 \text{ V}} \quad \text{(MIN4.0A)} \\ +12 \text{V} \quad \pm 0.5 \text{V} \quad \text{(MIN1.0A)}$ 

#### (2) Standard of Edga Connector

JAMMA Standards

#### (3) Edge Connector Terminal Layout

Soldered Side	Terminals		Parts Side				
G N D	Α	1	G N D				
G N D	В	2	G N D				
+ 5 V	С	3	+ 5 V				
+ 5 V	D	4	+ 5 V				
	Е	5	ant bas broose sift town				
+ 12 Violast fastro	F	ne a6 bnu	na orfin commertical2 IV				
Wrong Insertion Protection Key	enoy <b>H</b> lq A	irli ( <b>7</b> a i i	Wrong Insertion Protection Key				
Coin Counter 2 Smoled	duadiona	or 18 mos	Coin Counter 1				
Coin Lockout 2	K	9	Coin Lockout 1				
Speaker (-) so find a set	( L	10	Speaker (+)				
Audio (GND)	M	11	Audio (+)				
Video GREEN	gs Na a	12	Video RED				
Video SYNC	P	13	Video BLUE xad nons:				
Service Switch	R	14	Video GND				
Tilt Switch	S	15	Test Switch				
Coin Switch 2	Т	16	Coin Switch 1				
Start Switch 2	U	17	Start Switch 1				
2P Control 1 UP	V	18	1P Control 1 UP				
2P Control 2 DOWN	W	19	1P Control 2 DOWN				
2P Control 3 LEFT	X	20	1P Control 3 LEFT				
2P Control 4 RIGHT	Y	21	1P Control 4 RIGHT				
2P Control 5 PUSHI	Z	22	1P Control 5 PUSHI				
	a	23					
	b	24	lensq lentnes				
	С	25					
	d	26					
G N D	е	27	G N D				
G N D	f	28	G N D				

<sup>\*</sup>For optimum use of this machins, supply desijnated voltage where applicable.

### **ODIP** Switch

- $\bigcirc$ Switch A-1, 4/B-3, 4 and 8 are not used. Turn them OFF.
- $\lozenge A-2$  reverses the screen. When it is turned on during play, the screen may be turbulent. Turn the power off once when A-2 is turned on.
- $\diamondsuit$ When the power is connected with A-3 turned on, the machine reverts to the test mode and the test pattern is displayed, when the 1 P Start is pressed with this screen, a system menu is displayed. Follow the instructions displayed for further operation.
- $\Diamond$ With A-5 through A-8, the game fee can be set for each coin slot, A and B.
- $\lozenge B-1$  and B-2 sets the player levels of the entire game.
- $\Diamond B-5$  and B-6 sets the number of players at the start of the game.
- $\Diamond B-7$  turns the sound on and off during demonstration.
- \*Basically, the standard settinjs are all the switches that are turned off.

#### DIP Switch

(DIP SWITCH A)

Bolr face indicates standard setting.

								_ 0.			
		1	2	3	4	5	6	7	8		
		OFF									
Reversed screen	Normal Reversed		OFF ON								
Test-mode	Normal Test-mode			OFF ON							
CREDIT Coin – A	1 Coin 1 Play 2 Coin 1 Play 1 Coin 2 Play 1 Coin 6 Play				OFF	OFF ON OFF ON	OFF OFF ON ON				
CREDIT Coin – B	1 Coin 1 Play 2 Coin 1 Play 1 Coin 2 Play 1 Coin 6 Play				OFF			OFF ON OFF ON	OFF OFF ON ON		
CREDIT Coin—A	1 Coin 1 Play 2 Coin 1 Play 1 Coin 3 Play 1 Coin 4 Play	7050	Conne	ammal []	ON	OFF ON OFF ON	OFF OFF ON ON	And the control of th	2 s		
CREDIT Coin – B	1 Coin 1 Play 2 Coin 1 Play 1 Coin 3 Play 1 Coin 4 Play				ON	V.		OFF ON OFF ON	OFF OFF ON ON		

#### (DIP SWITCH B)

		1	2	3	то С4 этт	Jol5 bra	6	7	8
Game level setting Normal	Normal Easy Difficult Very Difficult	OFF ON OFF ON	OFF OFF ON ON	(anoitus		udov, ad Munacio	7 JuZ *		
				OFF					
Setting of the number of unit by players	3 4 2 5		E.			OFF ON OFF ON	OFF OFF ON ON		
Demonstration sound	ON OFF			1807.000				OFF ON	
OPTION SWITCH	<del>revolute to</del> rio	Ž	DINY L		)MI (9)	3 7 1/11/2			OFF ON

KANEKO CO.,LTD.

NO.8-23-21, SHAKUJIIDAI,

NERIMA-KU TOKYO 177,

JAPAN.

PHONE: 03-921-9661