取扱説明書

OPERATOR'S MANUAL







DIP SW 1


COIN/CREDIT		COIN 1				COIN 2			
		1	2	3	4	5	6	7	8
1COIN	1CREDIT	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1COIN	2CREDITS	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
1COIN	3CREDITS	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
1COIN	4CREDITS	ON	ON	OFF	OFF	ON	ON	OFF	OFF
1COIN	5CREDITS	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
1COIN	6CREDITS	ON	OFF	ON	OFF	ON	OFF	ON	OFF
2COINS	1CREDIT	OFF	ON	ON	OFF	OFF	ON	ON	OFF
3COINS	1CREDIT	ON	ON	ON	OFF	ON	ON	ON	OFF
4COINS	1CREDIT	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
5COINS	1CREDIT	ON	OFF	OFF	ON	ON	OFF	OFF	ON
2COINS	3CREDITS	OFF	ON	OFF	ON	OFF	ON	OFF	ON
4COINS 5COINS	1CREDIT 2CREDITS 3CREDITS 4CREDITS	ON	ON	OFF	ON	ON	ON	OFF	ON
	1CREDIT 3CREDITS	OFF	OFF	ON	ON	OFF	OFF	ON	ON
3COINS 4COINS	1CREDIT 2CREDITS 3CREDITS 4CREDITS 6CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
2COINS 3COINS	1CREDIT 2CREDITS 3CREDITS 5CREDITS	OFF	ON	ON	ON	OFF	ON	ON	ON
500000000000000000000000000000000000000	1CREDIT 3CREDITS	ON	ON	ON	ON	ON	ON	ON	ON

DIP SW 2

		1	2	3	4	5	6	7	8
HAT落下速度 Hat fall velocity	Nomal Easy Hard Super	OFF ON OFF ON	OFF OFF ON ON			59			
END LINEの位置 End line position	Nomal Easy Hard Super			OFF ON OFF ON	OFF OFF ON ON	8			
Test Mode	off on					OFF ON			
Flip Flop	No Yes						OFF ON		
Demo Sound	on off							OFF ON	
N. C.									OFF

Test Mode 画面表示

Test mode screen display

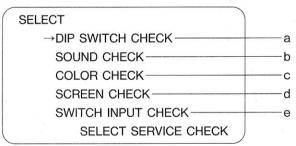

DIP-2を5-ONにして電源を入れると左の画面になります。

レバーの上下でCHECKモードを選んで、サービススイッチを押してください。

Turn ON position 5 of DIP-2 to power up the screen on the left. Select the check mode by moving the lever up or down, then press the service switch.

a DIP SWITCH CHECK ディップスイッチの状態をみます。
View current positions of the dip switch.

b SOUND CHECK 音声の確認に使用します。
(SOUND NO. 64~191) Check sound.

c COLOR CHECK 色の調整に使用します。
Adjust color.

d SCREEN CHECK モニターの調整に使用します。
Adjust the monitor.

e SWITCH INPUT CHECK スイッチ入力の確認に使用します。

スイッチ入力の確認に使用します。Check switch input.



本 社 〒606 京都市左京区下鴨松ノ木町35-1 OFFICE: 35-1 Mathunoki-cho, Simogamo, Sakyo-ku, Kyoto. 606 ■TEL 075-723-0358代■FAX 075-723-0368